


whipSMART™ PANTY VIBE

USER GUIDE

PANTY VIBRATOR

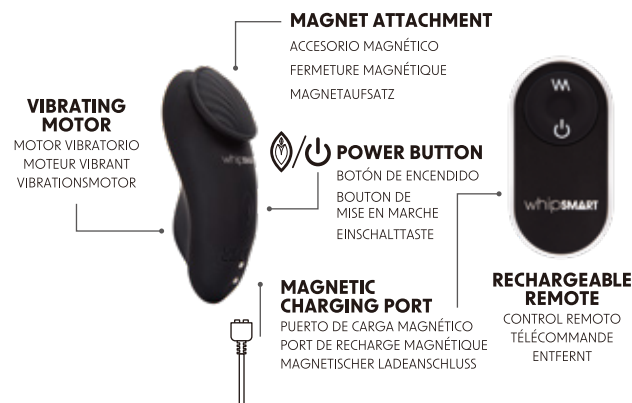

HOW TO USE

EN

- **DEVICE POWER ON/OFF**
Hold the  button for 3 seconds to turn your device on or off.
- **REMOTE POWER ON/OFF**
Hold the  button for 3 seconds to turn your remote on or off.
- **VIBRATION MODES**
There are 9 adjustable vibration modes. Press the  button on your device or the  button on your remote to cycle through each mode.
- **CHARGING THE DEVICE**
Plug in your device/remote using the included magnetic USB charger.
Flashing LED Light: Item is charging
Solid LED Light: Item is fully charged
It takes approx 60 minutes of charge for up to 50-60 mins of use.
- **CLEANING, STORAGE & SAFETY**
Always clean and dry your device thoroughly before and after use.
DO NOT store wet. We recommend that you use a mild cleanser that is suitable for use with silicone items. Clean the device with a soft, damp cloth.
DO NOT clean with an alcohol or chemical-based cleaner.
Use water based lubricant as desired.
Not compatible with silicone lubricant.

Avoid leaving your device in direct sunlight and never expose it to extreme heat. Keep away from water, and never immerse it.

CÓMO USAR

ES

- **ENCENDIDO/APAGADO DEL DISPOSITIVO**
Mantenga presionado el botón  por 3 segundos para encender o apagar el dispositivo.
- **ENCENDIDO/APAGADO REMOTO**
Mantenga presionado el botón  por 3 segundos para encender o apagar el control remoto.
- **MODOS DE VIBRACIÓN**
Tiene 9 modos de vibración ajustables. Presione el botón  en su dispositivo o el botón  en su control remoto para recorrer cada modo.
- **CÓMO CARGAR EL DISPOSITIVO**
Conecte su dispositivo o control remoto utilizando el cargador USB magnético incluido.
Luz LED intermitente: el artículo se está cargando
Luz LED sin parpadear: el artículo está completamente cargado.
La carga tarda aproximadamente 60 minutos en completarse y dura un máximo de 50-60 minutos de uso.
- **LIMPIEZA, ALMACENAMIENTO Y SEGURIDAD**
Siempre limpie y seque bien el dispositivo antes y después de usarlo.
NO lo guarde estando mojado. Le recomendamos que use un limpiador suave que sea adecuado para usar en artículos de silicona. Limpie el dispositivo usando un paño suave y húmedo.
NO limpie usando un limpiador a base de alcohol o productos químicos. Use lubricante a base de agua según lo desee. **No es compatible con lubricante de silicona.**

Evite dejar su dispositivo bajo la luz solar directa y nunca lo exponga al calor extremo. Manténgase alejado del agua y nunca lo sumerja.

UTILISATION

FR

- **ALLUMER/ÉTEINDRE L'APPAREIL**
Maintenez enfoncé le bouton  pendant 3 secondes pour allumer ou éteindre la télécommande.
- **ALLUMER/ÉTEINDRE LA TÉLÉCOMMANDE**
Maintenez enfoncé le bouton  pendant 3 secondes pour allumer ou éteindre la télécommande.
- **MODES DE VIBRATION**
Il existe 9 modes de vibration réglables. Appuyez sur le bouton  de l'appareil ou sur le bouton  de la télécommande pour changer de mode.
- **CHARGER L'APPAREIL**
Branchez l'appareil/la télécommande en utilisant le chargeur magnétique USB fourni.
DEL clignotante : Charge de l'appareil en cours.
DEL fixe : Charge de l'appareil terminée. Il faut environ 60 minutes de charge pour pouvoir utiliser l'appareil jusqu'à 50-60 minutes.
- **NETTOYAGE, STOCKAGE ET SÉCURITÉ**
Toujours bien nettoyer et sécher l'appareil avant et après chaque utilisation.
NE PAS ranger l'appareil s'il n'est pas sec. Nous recommandons l'utilisation d'un produit nettoyant doux qui convient aux produits en silicone.
Nettoyez l'appareil avec un chiffon doux humide.
NE PAS nettoyer avec de l'alcool ou de produit nettoyant à base de produits chimiques. Si vous le souhaitez, utilisez un lubrifiant à base d'eau.
Ne convient pas aux lubrifiants à base de silicone.

Évitez de laisser l'appareil au contact de la lumière directe du soleil et ne l'exposez jamais à une chaleur extrême. Évitez que l'appareil entre en contact avec de l'eau et ne l'immergez jamais.

ANWENDUNG

DE

- **GERÄT EIN-/AUSSCHALTEN**
Drücken und halten Sie die Taste  3 Sekunden lang, um Ihr Gerät ein- oder auszuschalten.
- **FERNGESTEUERTES EIN-/AUSSCHALTEN**
Drücken und halten Sie die Taste  3 Sekunden lang, um das Gerät per Fernbedienung ein- oder auszuschalten.
- **VIBRATIONSMODI**
Sie verfügen über 9 einstellbare Vibrationsmodi. Drücken Sie auf die Taste  Ihres Geräts bzw. auf die Taste  Ihrer Fernbedienung, um zwischen den einzelnen Modi zu wechseln.
- **AUFLADEN DES GERÄTS**
Schließen Sie Ihr Gerät bzw. Ihre Fernbedienung über das mitgelieferte magnetische USB-Ladegerät an.
Blinkendes LED-Licht: Gerät wird geladen
Permanentes LED-Licht: Das Gerät ist vollständig aufgeladen. Der Ladevorgang dauert ca. 60 Minuten bei einer Nutzung von bis zu 50-60 Minuten.
- **PFLEGE, AUFBEWAHRUNG UND SICHERHEIT**
Reinigen und trocknen Sie Ihr Gerät jeweils vor und nach dem Gebrauch gründlich ab.
NICHT nass aufbewahren. Wir empfehlen die Verwendung eines milden Reinigungsmittels, das für den Gebrauch mit Silikonartikeln geeignet ist. Reinigen Sie das Gerät mit einem weichen, feuchten Tuch.
Reinigen Sie es **NICHT** mit einem alkohol- oder chemikalienhaltigen Reinigungsmittel.
Verwenden Sie nach Belieben ein wasserbasiertes Gleitmittel. **Nicht kompatibel mit Silikon-Gleitmittel.**

Achten Sie darauf, Ihr Gerät nicht dem direkten Sonnenlicht auszusetzen und vermeiden Sie extreme Hitzeeinwirkung. Halten Sie es von Wasser fern, bzw. tauchen Sie es nicht ein.

Front

WS1054

WARNING

For adult use only. For external use only.

Any individual who may be pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, is at an increased risk of developing blood clots, or who has pins/screws/artificial joints or other medical devices implanted in his/her body should consult with a physician before using a massaging device designed for home use.

Whipsmart shall not be liable for incidental or consequential damages resulting from the misuse of this product.

SPECIFICATIONS

Power:

Device - 3.7V 350mAh / USB 1.0
Remote - 3.7V 110 mAh / USB 1.0

Waterproof:

IPX7 (Device Only) , for cleaning the device, not to be used under water
Keep the remote away from water

Battery life:

Charging Time: 60 mins for up to 50-60 minutes of use

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

SPECIFICATIONS

PANTY VIBE

Size:

Tamaño: 8.5cm x 4cm
Taille:
Größe:

Weight:

Peso: 79g
Poids:
Gewicht:

Material:

Material: Silicone
Matériau: Silicona
Material: Silicone
Material: Silikon

Battery:

	Device	Remote
Bateria:	Lithium Battery: 350 mAh	Lithium Battery: 110 mAh
Batterie:	Bateria de litio: 350 mAh	Bateria de litio: 110 mAh
Akku:	Batterie lithium-ion: 350 mAh	Batterie lithium-ion: 110 mAh
	Lithiumbatterie: 350 mAh	Lithiumbatterie: 110 mAh

XGEN, LLC

Horsham, PA 19044 All Rights Reserved

UK Responsible Person:

ArangaRanga UK LTD, 20-22 Wenlock Road, London, N17 GU, UK.
Phone: +44 2037692960, E-Mail:
UKresponsibleperson@arangaranga.com

EU Responsible Person:

ArangaRanga SL, Paseo de la Castellana 194, Madrid, 28046,
Spain. Phone: +34 910054258, E-Mail:
EUresponsibleperson@arangaranga.com

Email us at sales@xgenproducts.com for any unanswered questions

www.whipsmarttoys.com

Back

WS1054