





COVER

① UNIVERSAL ADAPTER INSTRUCTIONS

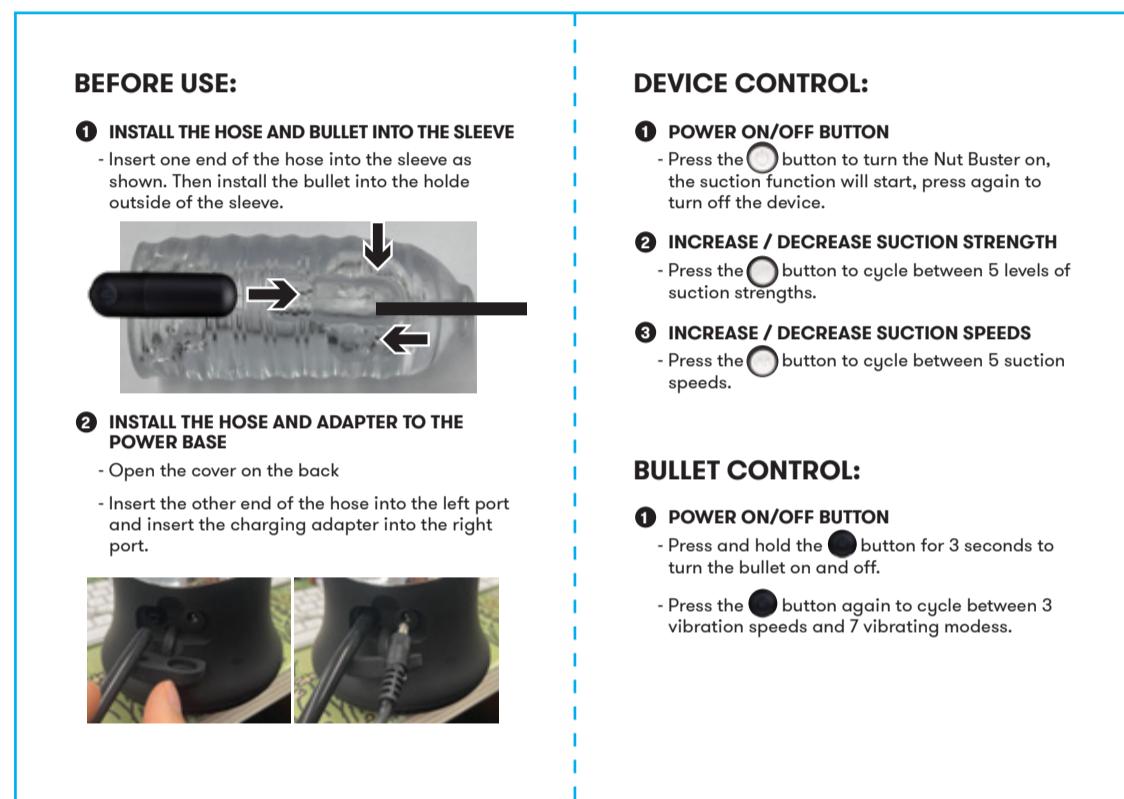

03-04

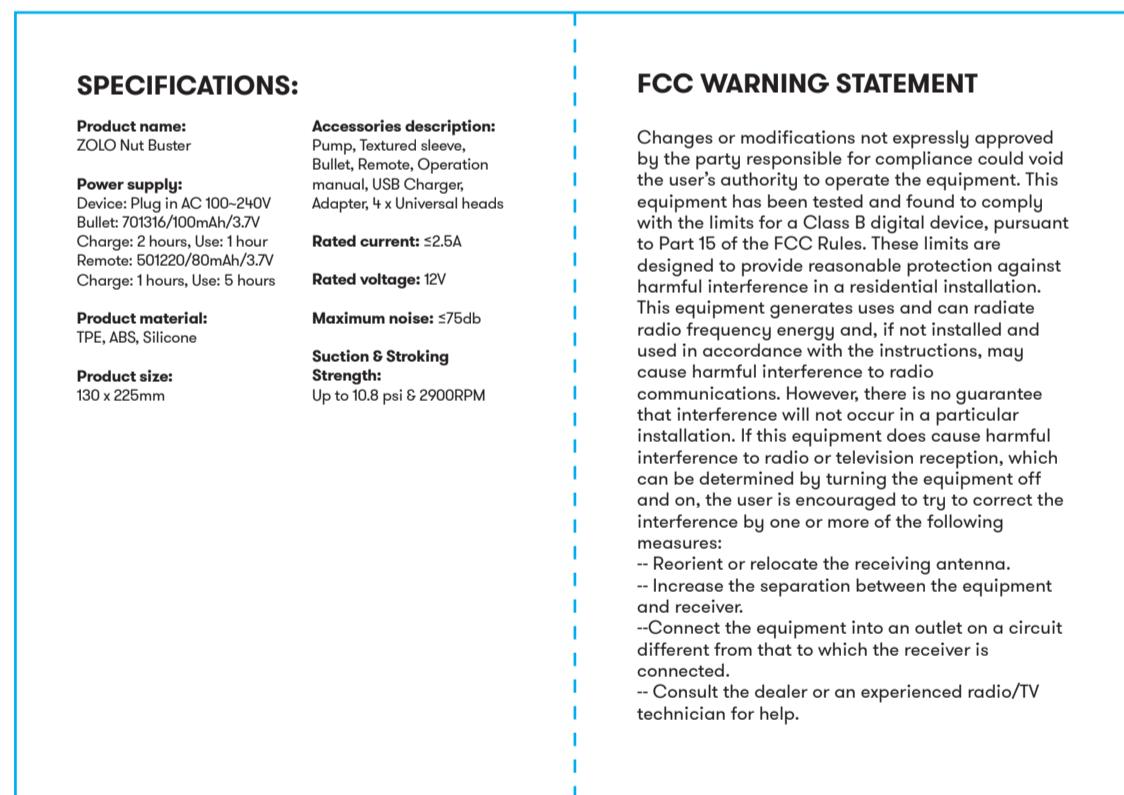

07-08

BEFORE USE: 01-02

REMOTE CONTROL:

- 1 BEFORE USE THE REMOTE, SHOULD BE USING**
- Before pairing the remote, make sure the power base and vibrating bullet are turned on.
- 2 POWER ON/OFF BUTTON**
- Press and hold the button for 3 seconds to pair or pause both the vibrating bullet and power base.
- 3 INCREASE / DECREASE SUCTION SPEED**
- Press the and button to increase or decrease the 5 suction speeds.
- 4 INCREASE / DECREASE SUCTION STRENGTHS**
- Press the and button to increase or decrease 5 the suction strengths.

CLEANING INSTRUCTIONS:

- ① Unplug the Nut Buster. Remove the bullet from the sleeve, then remove the hose from both the sleeve and power base.
- ② Rinse the sleeve under room-temperature water, avoid using hot water.
- ③ Wipe the sleeve and let it air dry completely.

05-06

FCC WARNING STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation. NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

09-10