



# Nova-246 Outdoor Base Station

---

## Installation Guide

## About This Document

This document is a guidance of Nova-246 hardware installation for installation personnel, including the preparation of installation tools and supporting materials, the demands for installation environment, installation procedure, cable connection and power on.

Accomplish the installation of the device according to this guide, the installation personnel can avoid potential damage to the device during the installation procedure, which makes sure the subsequent good running of the device.

This document suit for the models of SBS series base stations.

## Copyright Notice

Baicells copyrights this specification. No part of this specification may be reproduced in any form or means, without the prior written consent of Baicells.

## Disclaimer

This specification is preliminary and is subject to change at any time without notice. Baicells assumes no responsibility for any errors contained herein. For more information, please consult our technical engineers.

## Disposal of Electronic and Electrical Waste



Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

## Revision Record

| Date          | Version | Description                             |
|---------------|---------|-----------------------------------------|
| 10 July, 2018 | 01      | Initial Released.                       |
| 15 Aug, 2018  | 02      | Optimize the structure of the document. |
| 15 Aug, 2018  | 03      | Add new models.                         |
| 18 Oct., 2019 | 04      | Change LED indicators and description.  |

## Contact Us

Baicells Technologies Co., Ltd.

Address: 3F, Hui Yuan Development Building, No.1 Shangdi Information Industry Base, Haidian Dist., Beijing, China, 100085

E-mail: support\_cn@baicells.com (Non-North America region)  
support\_na@baicells.com (North America region)

Website: <http://www.baicells.com/>

## Table of Contents

|       |                                                  |    |
|-------|--------------------------------------------------|----|
| 1.    | Product Overview .....                           | 1  |
| 1.1   | Introduction .....                               | 1  |
| 1.2   | Features .....                                   | 1  |
| 1.3   | Appearance .....                                 | 2  |
| 1.3.1 | FDD Models.....                                  | 2  |
| 1.3.2 | TDD Models .....                                 | 4  |
| 1.4   | Technical Specification.....                     | 7  |
| 1.4.1 | Hardware Specification .....                     | 7  |
| 1.4.2 | Software Specification.....                      | 7  |
| 1.4.3 | Environment Specification.....                   | 9  |
| 1.4.4 | Model List .....                                 | 9  |
| 2.    | Installation Preparation .....                   | 10 |
| 2.1   | Support Materials .....                          | 10 |
| 2.2   | Installation Tools .....                         | 10 |
| 2.3   | Installation Environment.....                    | 11 |
| 2.3.1 | Locational Requirements.....                     | 11 |
| 2.3.2 | Environmental Requirements .....                 | 11 |
| 2.4   | Personnel Requirements.....                      | 11 |
| 2.5   | Against Lightning and Grounding Protection ..... | 11 |
| 2.6   | Weatherproof Protection .....                    | 12 |
| 3.    | Base Station Installation.....                   | 13 |
| 3.1   | Unpacking.....                                   | 13 |
| 3.2   | Installation Procedure .....                     | 13 |
| 3.3   | Install GPS Antenna .....                        | 13 |
| 3.4   | Install on Pole .....                            | 14 |
| 3.5   | Install on Wall.....                             | 16 |
| 3.6   | Connect Cable .....                              | 16 |

|       |                                       |    |
|-------|---------------------------------------|----|
| 3.6.1 | Requirement for Cable Laying.....     | 16 |
| 3.6.2 | Connect GPS Antenna.....              | 17 |
| 3.6.3 | Connect RF Cable .....                | 17 |
| 3.6.4 | Connect Optical Fiber .....           | 17 |
| 3.6.5 | Connect Ethernet Cable.....           | 18 |
| 3.6.6 | Connect Power Connector .....         | 18 |
| 3.6.7 | Connect Ground Cable .....            | 19 |
| 3.7   | Install Antenna Feeder System.....    | 19 |
| 3.7.1 | Install Omnidirectional Antennas..... | 19 |
| 3.7.2 | Install Directional Antennas.....     | 21 |
| 4.    | Power On.....                         | 23 |
| A.1   | Regulatory Compliance.....            | 24 |

## List of Figures

|                                                               |    |
|---------------------------------------------------------------|----|
| Figure 1-1 Nova-246 FDD Appearance.....                       | 2  |
| Figure 1-2 Nova-246 FDD Interfaces and Indicators .....       | 3  |
| Figure 1-3 Nova-246 TDD Appearance.....                       | 4  |
| Figure 1-4 Nova-246 TDD Interfaces and Indicators (1).....    | 5  |
| Figure 1-5 Nova-246 TDD Interfaces and Indicators (2).....    | 5  |
| Figure 3-1 Installation Procedure of Nova-246 .....           | 13 |
| Figure 3-2 Location of Grounding Screws.....                  | 19 |
| Figure 3-3 Omnidirectional Antenna Installation (1).....      | 20 |
| Figure 3-4 Omnidirectional Antenna Installation (2).....      | 20 |
| Figure 3-5 Assembling Procedure of Directional Antennas ..... | 21 |
| Figure 3-6 Transportation the Antennas in the Height .....    | 21 |
| Figure 3-7 Directional Antenna Installation .....             | 22 |
| Figure 4-1 LED Indicators.....                                | 23 |

## List of Tables

|                                                       |    |
|-------------------------------------------------------|----|
| Table 1-1 Nova-246 FDD Interface Description .....    | 3  |
| Table 1-2 Nova-246 FDD Interface Indicators.....      | 3  |
| Table 1-3 Nova-246 TDD Interface Description (1)..... | 6  |
| Table 1-4 Nova-246 TDD Interface Description (2)..... | 6  |
| Table 1-5 Nova-246 TDD Interface Indicators.....      | 6  |
| Table 2-1 Support Materials .....                     | 10 |
| Table 2-2 Environmental Requirements .....            | 11 |

# 1. Product Overview

## 1.1 Introduction

Baicells Nova-246 is a type of high performance outdoor macro base station based on LTE technology, which offers multiple models to support different TDD and FDD frequency bands. Also TDD models support dual carriers (DC) to satisfy the demands of higher speed and system capacity. The Nova-246 supports wired backhaul connections to backbone networks, and provides LTE access to user terminals, implemented voice and data service transmissions.

The Nova-246 makes use of the current transmission resources to reduce the operator's investment, implement the low-cost construction of LTE networks and enhance indoor coverage, thereby providing high-speed broadband access for users in assembly occupations.

The Nova-246 can be widely used by telecom operators, broadband operators, enterprises, and so on.

## 1.2 Features

- Adopt compact integrated design of baseband and RF to suit for private and public scenarios.
- Excellent Non-Line of Sight (NLOS) coverage performance to offer broader coverage.
- For TDD models, support two carriers, and software upgradable to two CC carrier aggregation.
- Based on 3GPP technology; provide high speed data service.
  - For FDD models, support peak rate of DL: 150Mbit/s, UL: 50Mbit/s with 20MHz spectrum.
  - For TDD models, support peak rate of DL: 220Mbit/s, UL: 14Mbit/s with 20MHz spectrum.
- For FDD models, maximum 256 concurrent users.
- For TDD models, maximum 192 concurrent users per eNodeB.
- Support 5MHz/10MHz/15MHz/20MHz operation bandwidth.
- Any IP based backhaul can be used, including copper (RJ-45), optical port and public transmission, flexible to deploy.


- Support RED function AISG 2.0.
- Security services to provide timely protection against potential security risks and illegal intrusion.
- Support simple and convenient local and remote web management.
- Integration as required, easy to installation and deployment, accurate coverage and improved network capacity.
- Support network management functions, which includes the management, monitoring and maintenance.
- Smooth evolution to C-RAN architecture, which support centralized scheduling for better networking performance, with Baicells' central network unit (CNU).

## 1.3 Appearance

### 1.3.1 FDD Models


The appearance of Nova-246 FDD base station is shown in Figure 1-1.

Figure 1-1 Nova-246 FDD Appearance

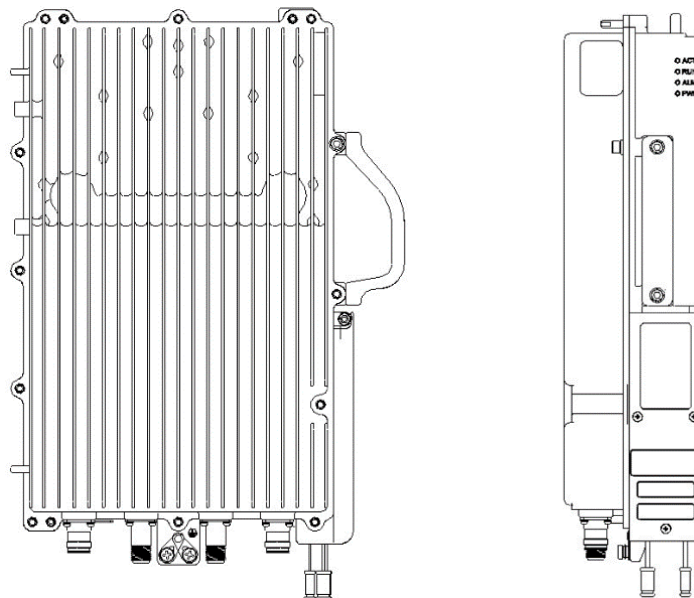

The interfaces and indicators Nova-246 FDD base station are shown in Figure 1-2.

Figure 1-2 Nova-246 FDD Interfaces and Indicators

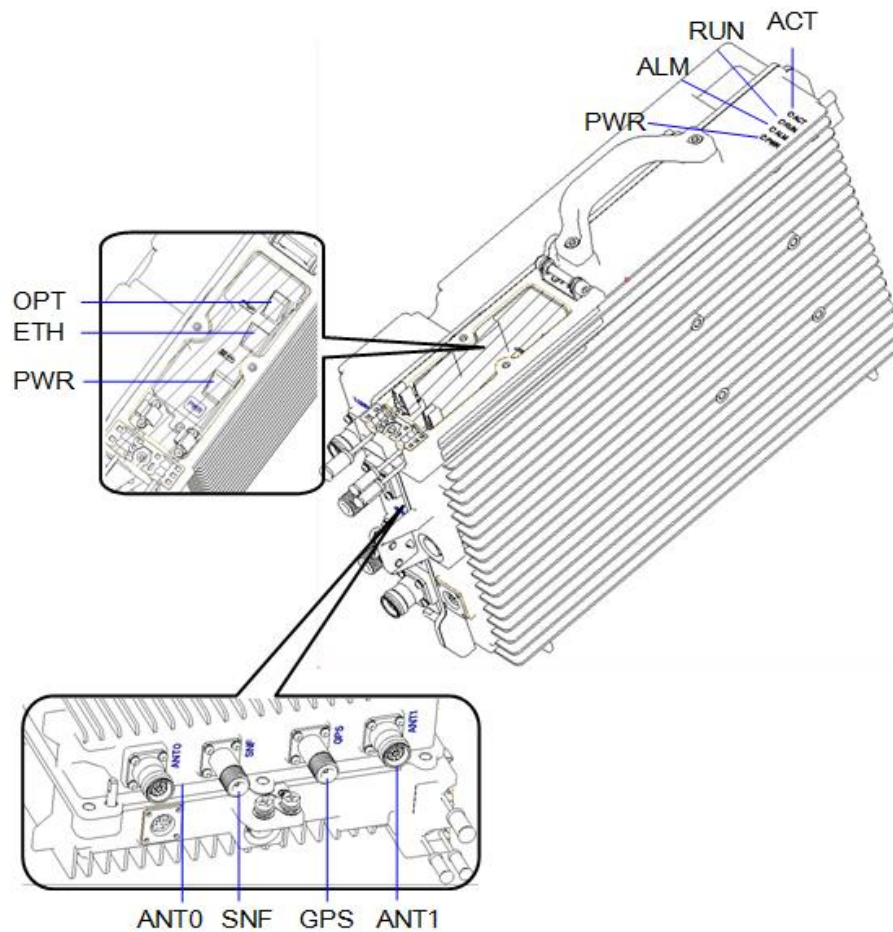

The Nova-246 FDD interfaces are described in Table 1-1.

Table 1-1 Nova-246 FDD Interface Description

| Interface Name | Description                                                                          |
|----------------|--------------------------------------------------------------------------------------|
| PWR            | Power interface: -48V (-57V to -42V) DC                                              |
| GPS            | External GPS antenna, N-female connector.                                            |
| ANT0           | External antenna 0, MIN-DIN female connector.                                        |
| ANT1           | External antenna 1, MIN-DIN female connector.                                        |
| OPT            | Optical interface, connect to external transmission network, used for data backhaul. |
| ETH            | RJ-45 interface, used for debug or data backhaul.                                    |
| SNF            | Sniffer for network listening, N-female connector.                                   |

The Nova-246 FDD interface indicators are described in Table 1-2.

Table 1-2 Nova-246 FDD Interface Indicators


| Identity | Color | Status    | Description |
|----------|-------|-----------|-------------|
| PWR      | Green | Steady On | Power On    |

|     |       |                                   |                                           |
|-----|-------|-----------------------------------|-------------------------------------------|
|     |       | OFF                               | No Power Supply                           |
| RUN | Green | Steady On                         | Reserved                                  |
|     |       | Fast flash: 0.125s on, 0.125s off | The board is loading.                     |
|     |       | Slow flash: 1s on, 1s off         | The board is running.                     |
|     |       | OFF                               | No power input or board fault             |
| ACT | Green | Steady On                         | The transmitting channel works normally   |
|     |       | OFF                               | The transmitting channel works abnormally |
| ALM | Red   | Steady On                         | Hardware alarm, e.g. VSWR alarm           |
|     |       | OFF                               | No alarm                                  |

### 1.3.2 TDD Models

The appearance of Nova-246 TDD base station is shown in Figure 1-3.

Figure 1-3 Nova-246 TDD Appearance

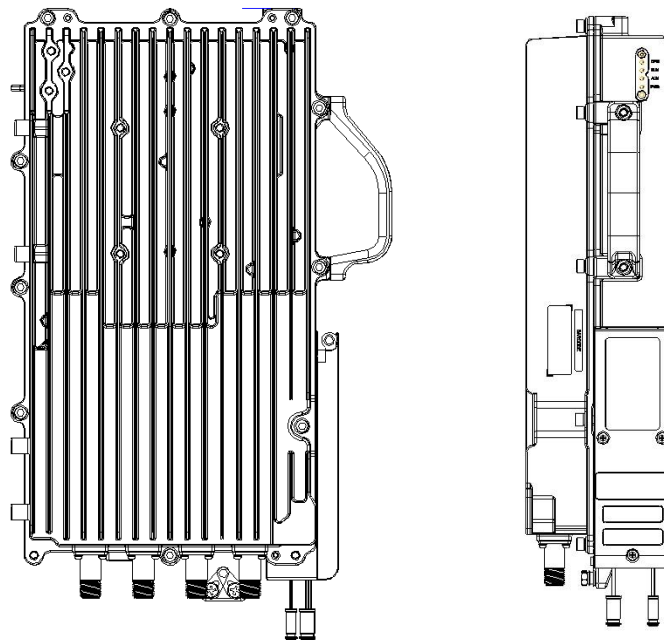

The interfaces and indicators of Nova-246 TDD base station are shown in Figure 1-4 and Figure 1-5.

Figure 1-4 Nova-246 TDD Interfaces and Indicators (1)


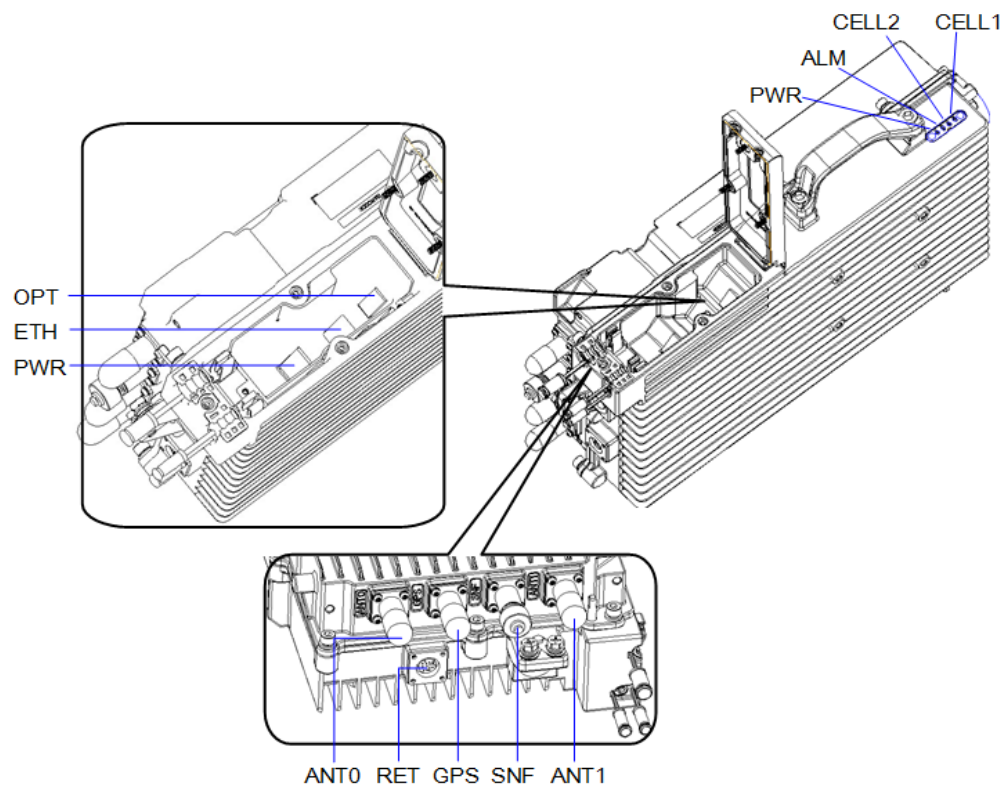


Figure 1-5 Nova-246 TDD Interfaces and Indicators (2)

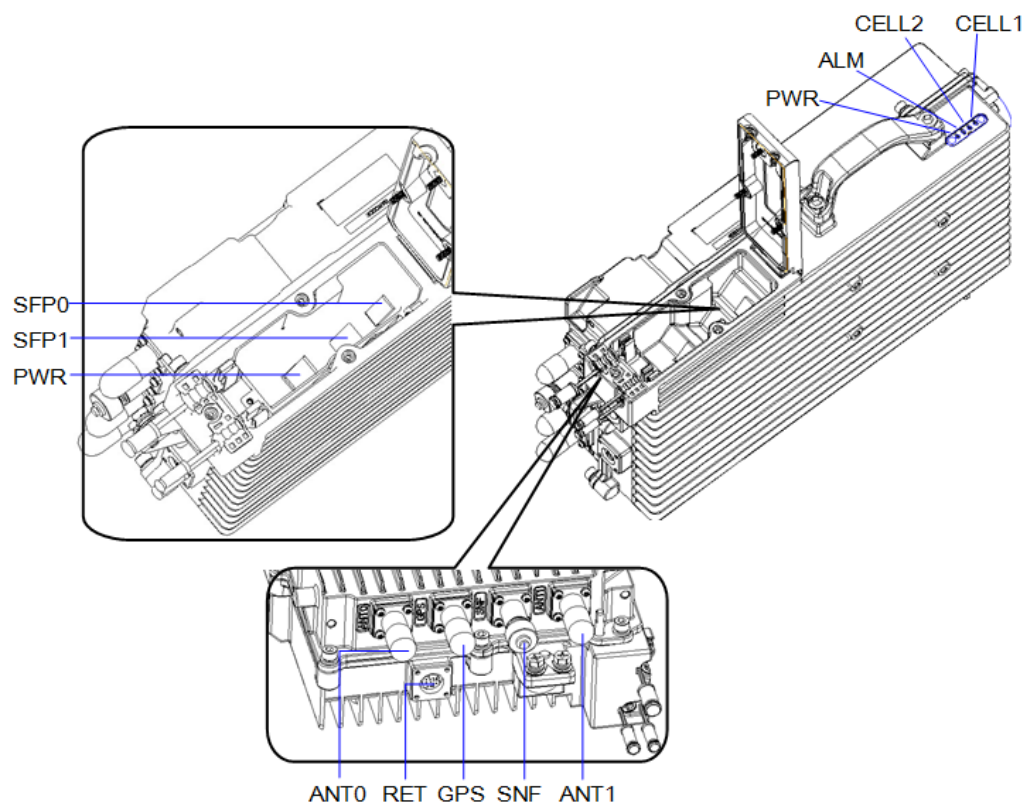

The Nova-246 TDD interfaces are described in Table 1-3 and Table 1-4.

Table 1-3 Nova-246 TDD Interface Description (1)

| Interface Name | Description                                                                          |
|----------------|--------------------------------------------------------------------------------------|
| PWR            | Power interface: -48V (-57V to -42V) DC                                              |
| GPS            | External GPS antenna, N-female connector.                                            |
| ANT0           | External antenna 0, N-female connector.                                              |
| ANT1           | External antenna 1, N-female connector.                                              |
| OPT            | Optical interface, connect to external transmission network, used for data backhaul. |
| ETH            | RJ-45 interface, used for debug or data backhaul.                                    |
| SNF            | Sniffer for network listening, N-female connector.                                   |

Table 1-4 Nova-246 TDD Interface Description (2)

| Interface Name | Description                                                                          |
|----------------|--------------------------------------------------------------------------------------|
| PWR            | Power interface: -48V (-57V to -42V) DC                                              |
| GPS            | External GPS antenna, N-female connector.                                            |
| ANT0           | External antenna 0, N-female connector.                                              |
| ANT1           | External antenna 1, N-female connector.                                              |
| SFP0           | Optical interface, connect to external transmission network, used for data backhaul. |
| SFP1           | Optical interface, connect to external transmission network, used for daisy chain.   |
| SNF            | Sniffer for network listening, N-female connector.                                   |

The Nova-246 TDD interface indicators are described in Table 1-5.

Table 1-5 Nova-246 TDD Interface Indicators

| Identity | Color | Status                            | Description        |
|----------|-------|-----------------------------------|--------------------|
| CELL1    | Green | Fast flash: 0.125s on, 0.125s off | CELL 1 inactivated |
|          |       | Slow flash: 1s on, 1s off         | CELL 1 activated   |
| CELL2    | Green | Fast flash: 0.125s on, 0.125s off | CELL 2 inactivated |
|          |       | Slow flash: 1s on, 1s off         | CELL 2 activated   |
| ALM      | Red   | Steady On                         | Reserved           |
|          |       | Fast flash                        | S1 alarm           |
|          |       | Slow flash                        | Other alarms       |
|          |       | OFF                               | Reserved           |
| PWR      | Green | Steady On                         | Power On           |
|          |       | OFF                               | No Power Supply    |

## 1.4 Technical Specification

### 1.4.1 Hardware Specification

| Item                             | Description                                                                         |                                                                                                                                                                 |
|----------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LTE Mode                         | FDD and TDD                                                                         |                                                                                                                                                                 |
| LTE Bands <sup>a</sup>           | FDD                                                                                 | Band1/3/7/13/20/28                                                                                                                                              |
|                                  | TDD                                                                                 | Band40/41/42/43/48                                                                                                                                              |
| Channel Bandwidth                | FDD                                                                                 | 5MHz / 10MHz /15MHz / 20MHz                                                                                                                                     |
|                                  | TDD                                                                                 | 5MHz / 10MHz /15MHz / 20MHz on each carrier                                                                                                                     |
| MAX Output Power                 | 43dBm/Ant                                                                           |                                                                                                                                                                 |
| Receive Sensitivity <sup>b</sup> | -102 dBm                                                                            |                                                                                                                                                                 |
| Synchronization                  | GPS                                                                                 |                                                                                                                                                                 |
| Backhaul                         | 1 Optical (SFP) and 1 RJ-45 Ethernet interface (1 GE)<br>2 Optical (SFP) interfaces |                                                                                                                                                                 |
| MIMO                             | FDD                                                                                 | DL 2 x 2                                                                                                                                                        |
|                                  | TDD                                                                                 | DL 2 x 2 on each carrier                                                                                                                                        |
| Dimension                        | FDD                                                                                 | <ul style="list-style-type: none"> <li>Band1/3/7:<br/>430mm (H) x 275mm (W) x 113mm (D)</li> <li>Band13/20/28:<br/>430mm (H) x 275mm (W) x 137mm (D)</li> </ul> |
|                                  | TDD                                                                                 | 440mm (H) x 240mm (W) x 120mm (D)                                                                                                                               |
| Installation Type                | Pole, wall                                                                          |                                                                                                                                                                 |
| Antenna                          | External high gain antenna 17dBi                                                    |                                                                                                                                                                 |
| Overall Power                    | < 180W                                                                              |                                                                                                                                                                 |
| Power                            | -48V (-57V to -42V) DC<br>AC adaptor (multi-national standards)                     |                                                                                                                                                                 |
| Weight                           | FDD                                                                                 | <ul style="list-style-type: none"> <li>Band1/3/7: 12kg</li> <li>Band13/20/28: 15kg</li> </ul>                                                                   |
|                                  | TDD                                                                                 | 12kg                                                                                                                                                            |

<sup>a</sup> Different models support different frequency band.

<sup>b</sup> The test method of receiving sensitivity is proposed by the 3GPP TS 36.104, which is based on 5MHz bandwidth, FRC A1-3 in Annex A.1 (QPSK, R=1/3, 25RB) standard.

### 1.4.2 Software Specification

| Item         | Description             |                              |
|--------------|-------------------------|------------------------------|
| LTE Standard | LTE FDD 3GPP Release 12 |                              |
| Peak Rate    | FDD                     | 20MHz: DL 150Mbps, UL 50Mbps |

| Item                         | Description                                                                       |                                                                                                                                                                                                                                                           |
|------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                              |                                                                                   | 10MHz: DL 75Mbps, UL 25Mbps                                                                                                                                                                                                                               |
|                              | TDD                                                                               | <ul style="list-style-type: none"> <li>2x20 MHz:<br/>SA1: DL 80 Mbps, UL 28 Mbps (per cell)<br/>SA2: DL 110 Mbps, UL 14 Mbps (per cell)</li> <li>2x10MHz:<br/>SA1: DL 40 Mbps, UL 14 Mbps (per cell)<br/>SA2: DL 55 Mbps, UL 7 Mbps (per cell)</li> </ul> |
| Business Capacity            | FDD                                                                               | 256 concurrent users                                                                                                                                                                                                                                      |
|                              | TDD                                                                               | 96 concurrent users per cell/carrier<br>192 concurrent users per eNodeB                                                                                                                                                                                   |
| Modulation Mode              | FDD                                                                               | UL: QPSK, 16QAM<br>DL: QPSK, 16QAM, 64QAM                                                                                                                                                                                                                 |
|                              | TDD                                                                               | UL: QPSK, 16QAM, 64QAM<br>DL: QPSK, 16QAM, 64QAM                                                                                                                                                                                                          |
| Voice Solution               | CSFB, VoLTE, eSRVCC                                                               |                                                                                                                                                                                                                                                           |
| Traffic Offload              | LIPA (Local IP Access)<br>SIPTO (Selected IP Traffic Offload)                     |                                                                                                                                                                                                                                                           |
| SON                          | Automatic setup<br>ANR (Automatic Neighbor Relation)<br>PCI confliction detection |                                                                                                                                                                                                                                                           |
| Spectrum Scanning            | Supported                                                                         |                                                                                                                                                                                                                                                           |
| UL Interference Detection    | Supported                                                                         |                                                                                                                                                                                                                                                           |
| RAN Sharing                  | Supported                                                                         |                                                                                                                                                                                                                                                           |
| Network Management Interface | TR069                                                                             |                                                                                                                                                                                                                                                           |
| MTBF                         | $\geq 150000$ hours                                                               |                                                                                                                                                                                                                                                           |
| MTTR                         | $\leq 1$ hour                                                                     |                                                                                                                                                                                                                                                           |
| Maintenance                  | Support remote/local maintenance, based on SSH protocol                           |                                                                                                                                                                                                                                                           |
|                              | Support remote maintenance                                                        |                                                                                                                                                                                                                                                           |
|                              | Support online status management                                                  |                                                                                                                                                                                                                                                           |
|                              | Support performance statistics                                                    |                                                                                                                                                                                                                                                           |
|                              | Support failure management                                                        |                                                                                                                                                                                                                                                           |
|                              | Support configuration management                                                  |                                                                                                                                                                                                                                                           |
|                              | Support local or remote software upgrading and loading                            |                                                                                                                                                                                                                                                           |
|                              | Support log                                                                       |                                                                                                                                                                                                                                                           |
|                              | Support connectivity diagnosis                                                    |                                                                                                                                                                                                                                                           |
|                              | Support automatic start and configuration                                         |                                                                                                                                                                                                                                                           |
|                              | Support alarm reporting                                                           |                                                                                                                                                                                                                                                           |
|                              | Support KPI Recording                                                             |                                                                                                                                                                                                                                                           |
|                              | Support user information tracing                                                  |                                                                                                                                                                                                                                                           |

### 1.4.3 Environment Specification

| Item                                 | Description                                                |
|--------------------------------------|------------------------------------------------------------|
| Operating Temperature                | -40°C to 55°C                                              |
| Storage Temperature                  | -45°C to 70°C                                              |
| Humidity                             | 5% to 95%                                                  |
| Atmospheric Pressure                 | 70kPa to 106kPa                                            |
| Ingress Protection Rating            | IP66                                                       |
| Power interface Lightning Protection | Differential mode: $\pm 10$ KA<br>Common mode: $\pm 20$ KA |

### 1.4.4 Model List

| Models   | Description                                        |
|----------|----------------------------------------------------|
| sBS81040 | TDD Band41<br>Channel Bandwidth: 10MHz/15MHz/20MHz |

## 2. Installation Preparation

### 2.1 Support Materials

Prepare the following support materials accordingly, as given in Table 2-1.

Table 2-1 Support Materials

| Item             | Description                                          |
|------------------|------------------------------------------------------|
| Power cable      | < AWG16 e.g. AWG14<br>Shorter than 100m              |
| Power plug       | The power plug connecting to the electricity supply. |
| Antenna RF cable | 50 ohm feeder                                        |
| Optical fiber    | Single mode optical fiber                            |
| Ethernet cable   | Outdoor CAT6<br>Shorter than 100m                    |
| Antenna          | Omnidirectional, or directional antenna              |
| Ground cable     | 16mm <sup>2</sup> yellow-green wire                  |

### 2.2 Installation Tools

The following tools are needed during the installation.

|                                                                                     |                                                                                     |                                                                                     |                                                                                       |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |   |  |
| Level bar                                                                           | Marking pen                                                                         | Knife                                                                               | Vise                                                                                  | Wrench                                                                                |
|  |  |  |  |  |
| Percussion drill and some drill heads                                               | hammer                                                                              | Cross screw driver                                                                  | Cable vice                                                                            | Tape measure                                                                          |
|  |  |  |                                                                                       |                                                                                       |
| 5mm L-shape allen wrench                                                            | T7 screwdriver head                                                                 | Ladder                                                                              |                                                                                       |                                                                                       |

## 2.3 Installation Environment

### 2.3.1 Locational Requirements

Environments with high-temperatures, harmful gases, unstable voltages, volatile vibrations, loud noises, flames, explosives, and electromagnetic interference (large radar stations, transmitting stations, transformer substations) are not suitable for the operation of Nova-246, and thus should be avoided.

Places prone to have impounded water, soaking, leakage, or condensation, should also be avoided.

Factors like climate, hydrology, geology, earthquake, electric power, and transportation should be taken into consideration in the construction process so that a proper location can be chosen to meet the communication engineering environmental requirements, as well as the technical requirements of network planning and communication equipment.

### 2.3.2 Environmental Requirements

Table 2-2 gives the base station's environmental requirements with regards to temperature, humidity, and voltage.

Table 2-2 Environmental Requirements

| Item                                   | Range         | Typical value |
|----------------------------------------|---------------|---------------|
| Temperature                            | -40°C to 55°C | 25°C          |
| Relative humidity<br>(no condensation) | 0% to 100%    | 5% to 95%     |
| Safety voltage                         | -57V to -42V  | -48V          |

## 2.4 Personnel Requirements

The installation personnel must master the basic safe operation knowledge, through the training, and having the corresponding qualifications.

## 2.5 Against Lightening and Grounding Protection



### CAUTION:

It is unlikely to happen but since the LTE base station is very sophisticated equipment so we would recommend you to test it on the ground to make sure everything is functioning before install on the tower.

The operator must prepare external against lightning protector to protect the GPS, external antenna and RJ-45 port.

Grounding Notes:

- The ground wire adopts yellow-green wire that is no smaller than 16 mm<sup>2</sup>.
- Grounding principle: as near as possible.
- The base station connects to the reliable outdoor grounding point (earth) through one ground screw.
- The connection of the grounding points and the ground bar need to be tight and reliable. Rustproofing the terminals is required. This can be done with rust preventing paint, anti-oxidation coatings, grease, and so on.

## 2.6 Weatherproof Protection

The Nova-246 adopts cold shrink tube for weatherproof protection. Before installing the cold shrink tube, clean up the interface first. The weatherproof protection steps are as follows:

1. Insert cable into cold shrink tube.
2. Tighten the connector.
3. Push the cold shrink tube to the top joint and pull out the strip.
4. Check whether the cold shrink tube tight connect with the connection.



## 3. Base Station Installation

### 3.1 Unpacking


Before opening the box, make sure the package is in good condition, undamaged and dried. During the unpacking, avoid potential damaging impacts from hits or excessive force.

Once unpacked, check whether the quantity are consistent with the packing list.

### 3.2 Installation Procedure

The installation procedure of Nova-246 is given in Figure 3-1.

Figure 3-1 Installation Procedure of Nova-246

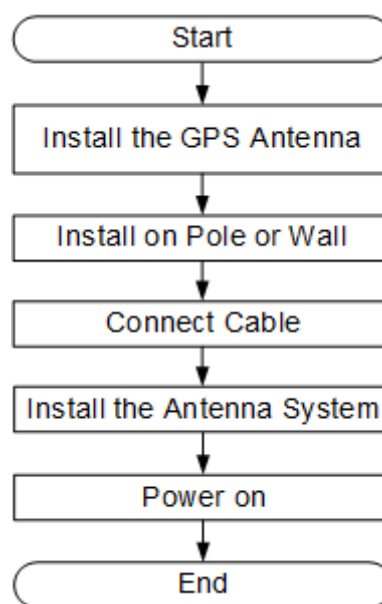

### 3.3 Install GPS Antenna


Installation requirements on the GPS antenna:

- No major blocking from buildings in the vicinity. Keep the rooftop buildings a distance away from the GPS. Make sure the space atop within 90 degrees (at least 45 degrees) is not blocked by any buildings.
- Avoid installing the GPS in the vicinity of any other transmitting and receiving

devices. Avoid interference from other transmitting antennas to the GPS antennas.

- Should be installed within 45 degrees to the lightning rod.

The GPS has been assembled before packing, the only installation step is to fix the GPS mounting bracket on the base station using the M4 x 14 screws.

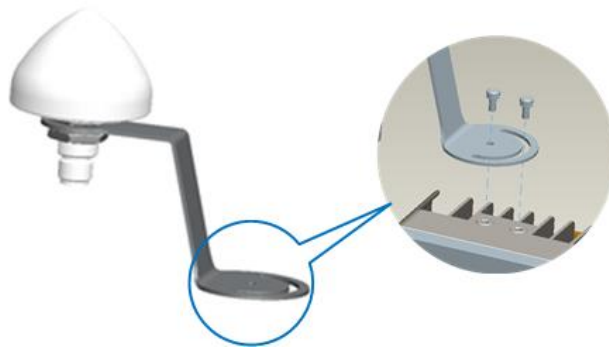


### 3.4 Install on Pole

Required diameter of the pole: 40mm to 100mm.


Suggest the installation height higher than 120cm.

The mount bracket has been assembled before packing.


1. Unscrew the four screws of the assembled bracket and slide the two omegas to the left as the following figure, and then turn the two omegas up or down.

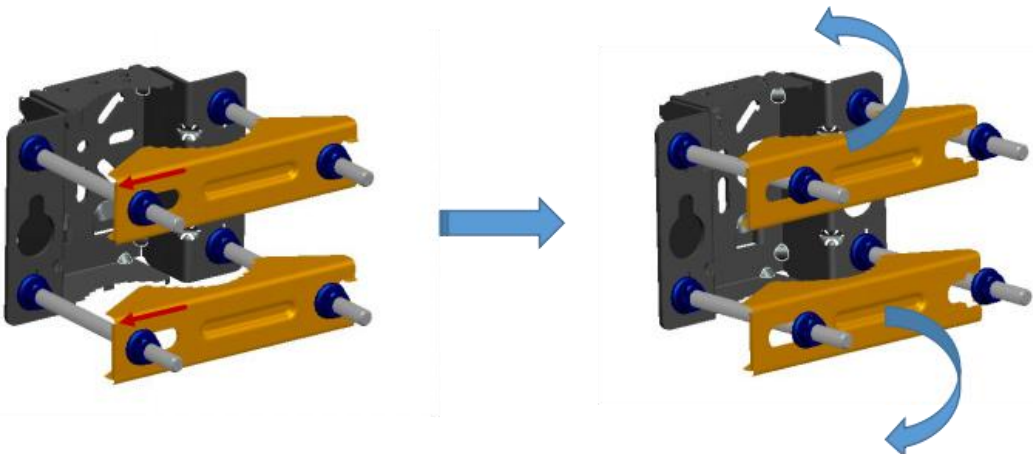


2. Make sure the base station's installation height, fit the thread rod of the assembled bracket to the pole, and then turn the two omegas to proper position as the following figure, and slide the two omegas to the right, and then fasten the four screws.

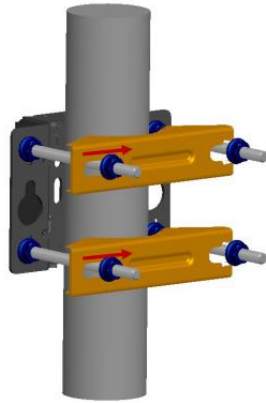

3. As the following figure, hung the two pins on the base station bracket to the installation bracket, push the base station until the hook block to the base station bracket.

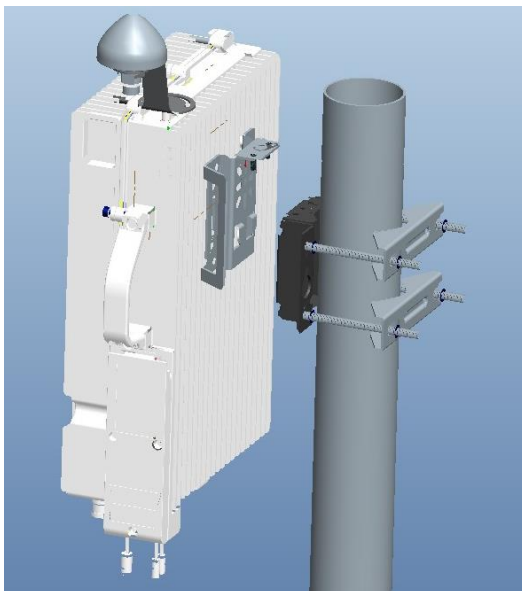


4. Tighten two screws on the top of the bracket using cross screwdriver to complete the installation.

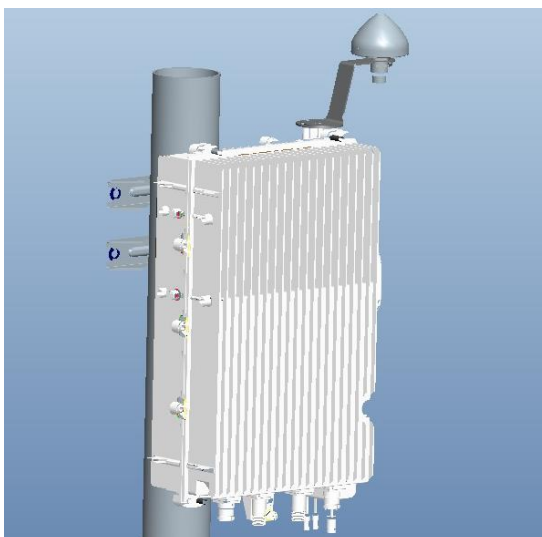

## 3.5 Install on Wall

The wall must bear four times of the base station's weight.

1. Take apart the assembled installation bracket kit to get the installation bracket.
2. Fit the bracket on the wall, and mark the drilling locations.

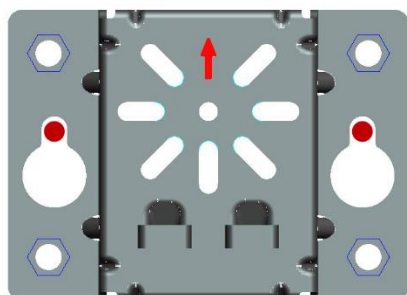

**Caution:**

The arrow of the installation bracket must be upward.

3. Drill two 10mm diameter and 70mm depth holes in the wall on the marked locations, and insert the expansion pipes.
4. Check the up/down direction of the installation rack, and then fix base station to the wall with M8 x 80 expansion bolts.
5. Refer to the installation steps on pole, fix base station on wall.

## 3.6 Connect Cable

### 3.6.1 Requirement for Cable Laying

**General requirements:**

- Bending radius requirement of feeder cable: 7/8" > 250mm, 4/5" > 380mm.
- Bending radius requirement of jumper cable: 1/4" > 35mm, 1/2" (super soft) > 50mm, 1/2" (ordinary) > 127mm.
- Bending radius requirement of power cable and grounding cable: > tripled of the diameter of cable.
- The minimum bend radius of the optical fiber is the 20 times of the diameter of optical fiber.
- Binding the cables according the type of the cable, the intertwining and crossing is forbidden.

- The label should be paste after the cable laying.

**Optical fiber laying requirement:**

- The circling and twisting is forbidden during the laying.
- The binding on the turning is forbidden.
- The pulling and weigh down the optical fiber is forbidden.
- The redundant optical fiber must enwind the dedicated device.

**Grounding laying requirement:**

- The grounding cable must connect to the grounding point.
- The grounding cable must be separate with the signal cables, remaining a certain distance to avoid the interruption of signal.

### 3.6.2 Connect GPS Antenna

1. Insert GPS jumper into cold shrink tube.
2. Connect one end of the GPS jumper to the GPS antenna.
3. Push the cold shrink tube to the top joint and pull out the strip.
4. Connect the other end of the GPS jumper to **GPS** interface of the base station, which also need weatherproof protection.

### 3.6.3 Connect RF Cable

1. Open the dust cap of **ANT0** and **ANT1** interface.
2. Insert RF cables into cold shrink tube.
3. Connect one end of the two RF cables to **ANT0** and **ANT1** interface of the base station and tighten them with wrench.
4. Push the cold shrink tube to the top joint and pull out the strip.
5. Connect the other end of the RF cables to the external antenna, which also need weatherproof protection.

### 3.6.4 Connect Optical Fiber

1. Unscrew three screws on the cover of wiring cavity using M4 cross screwdriver and open the wiring cavity.
2. Connect the optical fiber to **OPT** interface in the wiring cavity.

3. Lay optical fibers along the wire groove, and stretch out the wiring cavity from **OPT** hole.

The redundant fiber should wind neatly.

### 3.6.5 Connect Ethernet Cable

1. Connect the Ethernet cable to **ETH** interface in the wiring cavity.
2. Lay Ethernet cable along the wire groove, and stretch out the wiring cavity from **ETH** hole.

### 3.6.6 Connect Power Connector

Because it is not sure that the distance between the installation site and the power supply device, the two ends of power adapter are bare terminal end. The operators need to make power cable according to the actual conditions on installation site, and assemble power plug and power terminal on two ends of power adapter.

Strip 12mm insulating layer with wire stripper, which is used for connection to connector. It is recommended that the power cord length is kept below 100m (330 feet).

The connection steps of power cable is as follows.

1. Assemble power plug.

The power plug will be installed on the end of input direction. Refer to the identification on power plug, connect live wire, neutral wire, and ground wire to corresponding terminals separately, and tighten screws.

2. Assemble power terminal.

The power terminal will be installed on the end of output direction. Refer to the following figure to connect live wire and neutral wire.



3. Connect the power cable to **PWR** interface in the wiring cavity.
4. The power cable lays along the lint slot, and stretch out the wiring cavity from **PWR** hole.
5. The input of the power adaptor connects to the outlet.
  - If the outlet is indoors, place the power adaptor indoors.


- If the outlet is outdoors, place the power adaptor in a water proof box.
6. After the cable connection is complete in the wiring cavity, tighten the screws on the cover to close the wiring cavity using M4 cross screwdriver.

### 3.6.7 Connect Ground Cable

Make the grounding cable according the actual situation of the installation site.

The Nova-246 provides two grounding screws, which is located on the bottom of the base station, as shown in Figure 3-2.

Figure 3-2 Location of Grounding Screws

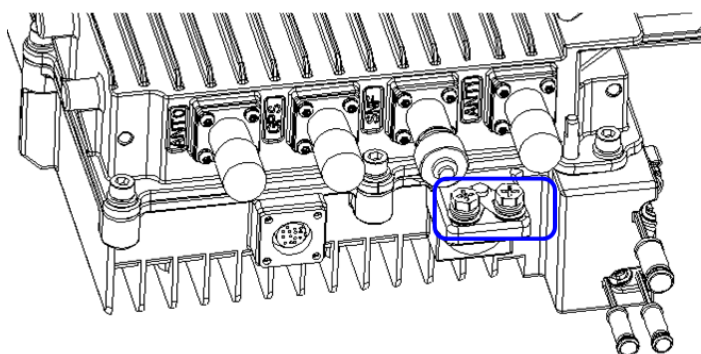

1. Unscrew one grounding screw, connect one end of the grounding cable to the grounding screw, and fasten it again.
2. The other end of the ground cable needs to connect to a good grounding point.

## 3.7 Install Antenna Feeder System

There are two kinds of outdoor antennas, omnidirectional outdoor antennas and directional outdoor antennas, whose installation will be introduced in the following, respectively.


### 3.7.1 Install Omnidirectional Antennas

One should pay attention to the followings while installing the omnidirectional outdoor antenna:

- The diameter of the pole for omnidirectional outdoor antennas is required to be 35mm ~ 50mm. A typical case is to use the 50mm-diameter round-steel-made pole (with details depending on the specific antenna type).
- Make sure that the top of pole and the clamp beneath the antenna are at the same level, after installing the omnidirectional outdoor antenna on the pole.


- Make sure that the antenna is high enough to meet the coverage requirement, and that the antenna top falls within the 45 degrees safety angle towards the lightning rod, as shown in Figure 3-3. In principle, no lightning rod can be welded to pole (no metal object is allowed within 1m of the horizontal direction of the omnidirectional antennas), when installing the omnidirectional antennas. Instead, an independent lightning rod should be settled between the two poles, where the lightning rod must be high enough to keep all antennas under its protection cover.

Figure 3-3 Omnidirectional Antenna Installation (1)

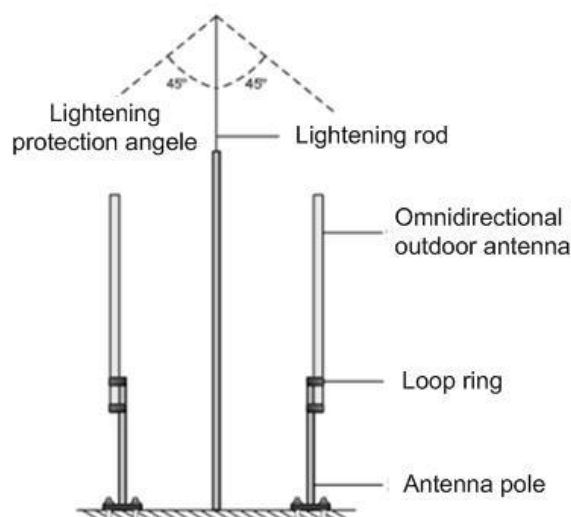

In case is impossible to install an independent lightning rod due to environmental limitations, the installation method shown in Figure 3-4 can be used. Be aware that the pole supporting the lightning rod should be kept at least 1m away from the omnidirectional outdoor antennas.

Figure 3-4 Omnidirectional Antenna Installation (2)

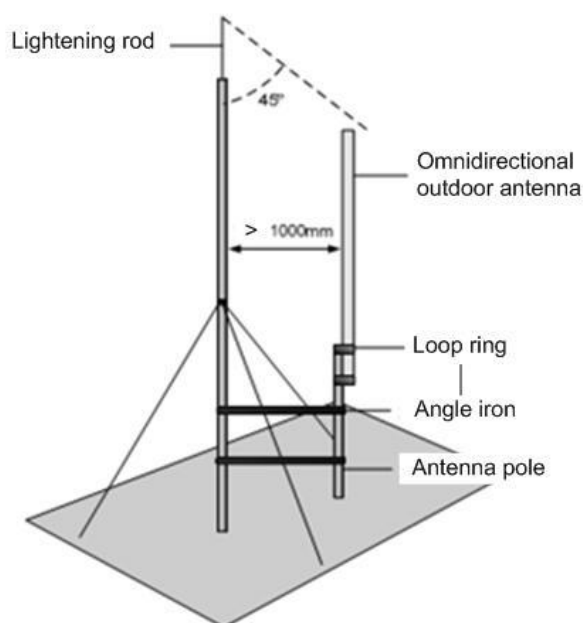

## 3.7.2 Install Directional Antennas


1. First, assemble the antennas, as shown in Figure 3-5.

Figure 3-5 Assembling Procedure of Directional Antennas




2. To install it on the iron tower, use a pulley to transport the antenna assembled to the platform on the iron tower, as shown in Figure 3-6. Following the safety rules when working at these heights.

Figure 3-6 Transportation the Antennas in the Height

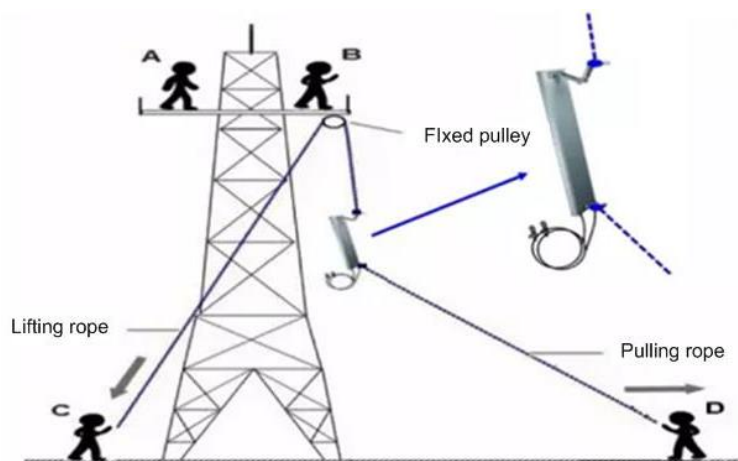

3. Fix the pole vertically to the ground or concrete pillars on the rooftop using expansion screws, and fasten it with steel wires. Then, mount the directional outdoor antenna onto the pole using the installation rack, as shown in Figure 3-7.

Figure 3-7 Directional Antenna Installation

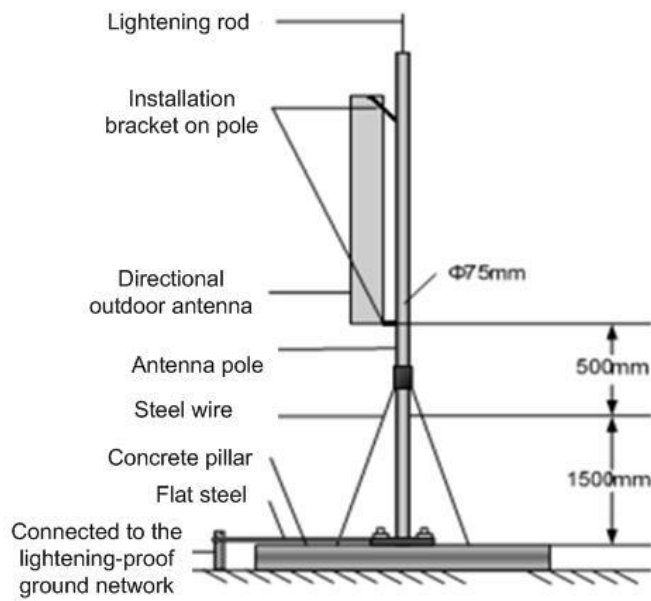


4. When the base station has been installed in a proper position, connect all the cables and wires.
5. Run tests, then seal and weatherproof all the connections after the testing has successfully completed. Refer to 2.6 Weatherproof Protection.

## 4. Power On

Power on the Nova-246, and the indicators will light up, as shown in Figure 4-1.

Figure 4-1 LED Indicators

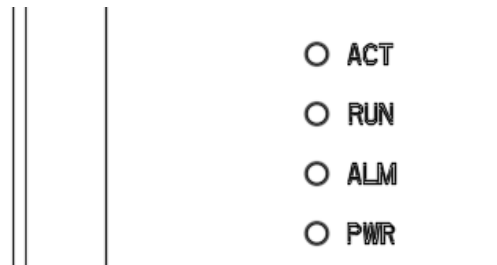

The explanation of the indicator signal of FDD models is given in Table 1-2 and Table 1-5.

## A.1 Regulatory Compliance

### FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### Warning:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 550cm between the radiator & your body.

### ISED Compliance

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d' Innovation, Science et Développement

économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions

suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 550cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter, End-Users must be provided with transmitter operation conditions for satisfying RF exposure compliance.

Les antennes utilisées pour cet émetteur doivent être installées de façon à offrir une distance de séparation d'au moins 550cm entre toutes les personnes et ne doivent pas être colocalisées ou fonctionner conjointement avec d'autres antennes ou transmetteurs. pour satisfaire la conformité à l'exposition RF.