# Tablet PC

MK763W

**Instruction Manual** 

This manual contains important safety precautions and information of correct use.

Please be sure to read this manual carefully before use so as to avoid any accidents.


Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- -The battery icon shows lower or empty.
- -System automatically, shut down and it turns off soon after restart.
- -Operation keys do not respond properly.
- -The device shows **a** on the top right corner.

 

## Important Notice:

If the device is freezing or stuck, press power button more than 7 seconds.

When the performance is slow after using some applications, it is recommended to close running application in setting menu.

#### Caution:

For charging, be sure to use the power adaptor(DC5V) that is provided in the package, otherwise, the device may be damaged and does not work.

The device is equipped with high performance processor.It may heat if you use the device for a long time when it is charging.

#### 1. Power on/off

Long press power button to turn on/off the device. It may take a minute to boot the device. Short press power button to turn on/off the screen.

- 2. Standby mode(Screen off mode)unlock the screen Short press the power button to turn on/off the screen(standby mode on/off). After standby mode, slide the lock icon in order to unlock the screen.
- 3. System settings
  On the desktop, press menu button and select system settings.





#### 3.1 Wireless&Networks

A. Set up each setting as you like. Wi-Fi settings-Press wifi settings, then the device will automatically search the available Wi-fi signals. Select the network you want to connect with.



B.More information about this device Check your device network is via Wi-fi or 3G dongle data, if it's surf via 3G dongle data, it may cause internet trafic,please confirm with your local internet operator.

Choose Tethering&portable hotspot, sharing the internet of this device via Portable Wi-Fi hotspot.



#### 3.2. Device

#### A. Sound

Setting system volumes, default notification sound, touch sounds and screen lock sound.

## B. Storage&Apps

Check the DDR and flash storage under APPS; Keep pressing an application to manage. Press Uninstall to uninstall the selected application.





## C. Display

Change the setting as you like, such as wallpaper, brightness and fonts etc.



#### 3.3. Personal

#### A. Location access

Let apps that have asked your permission use your location information.

## B. Security

Screen lock protect your device from unauthorized use by creating a personal screen unlock pattern. Make passwords screen unlock pattern. Make passwords visible Show password as you type. Unknown sources-If you want to allow installation of non-Market Applications, press Unknown sources and presses OK.





## C. Language

Setup OSD language, input language as you want.

## D. Backup&reset

Back up app data, Wi-Fi passwords, and other settings to Google servers, or Erases all data on phone.

#### 4. Account

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.





5. How to connect/disconnect the device with/from the computer
On main desktop,connect the device with the PC,touch right side sf the status bar on the bottom of desktop. press USB connected,select Turn on USB storage. The device is recognized at Explorer of the computer.



Now you can use it as an external storage. After finishing your work,press"Turn off USB storage"to unmount it.

#### 6. Screenshot

Press 'Power' and 'Vol-' button at the same time, you can catch the screenshooting which you want.

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

## 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.