
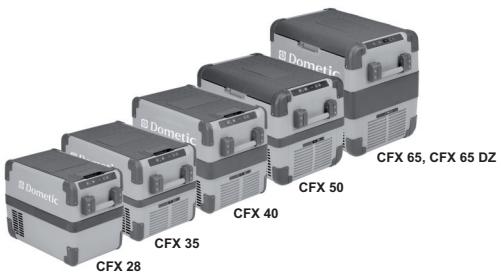



EN	Compressor Cooler Operating manual	5
FR	Glacière à compression Notice d'utilisation	26
ES	Nevera por compresor Instrucciones de uso	47

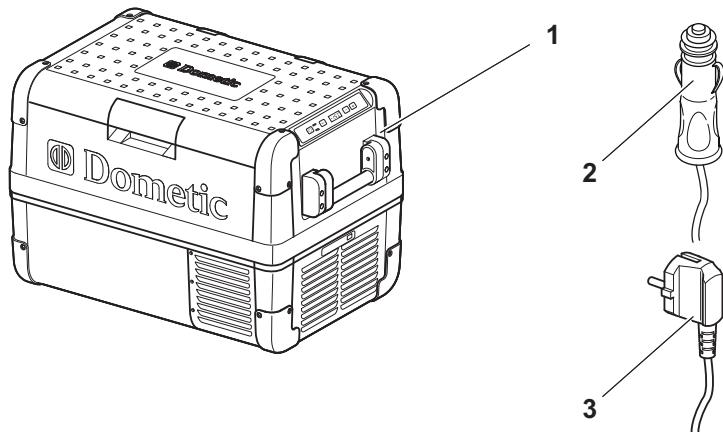



CoolFreeze CFX28, CFX35, CFX40, CFX50, CFX65, CFX65DZ

1**2**


CFX28, CFX35, CFX40

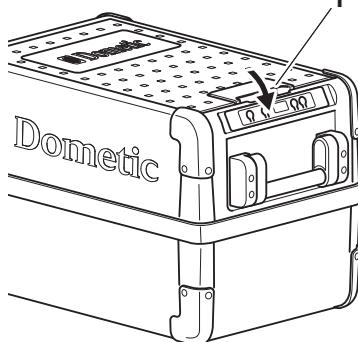


CFX50, CFX65, CFX65DZ

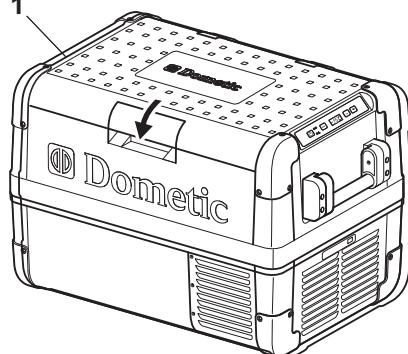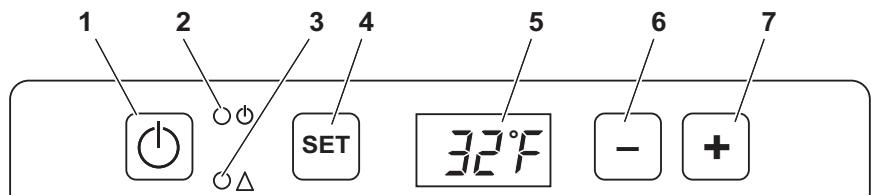**3**


4

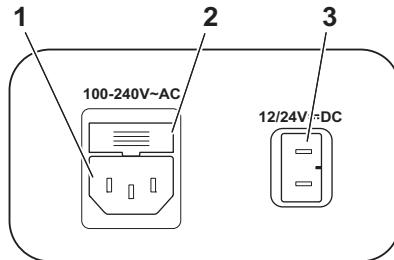





5

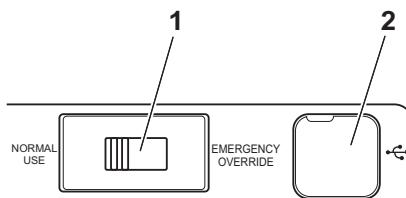

6

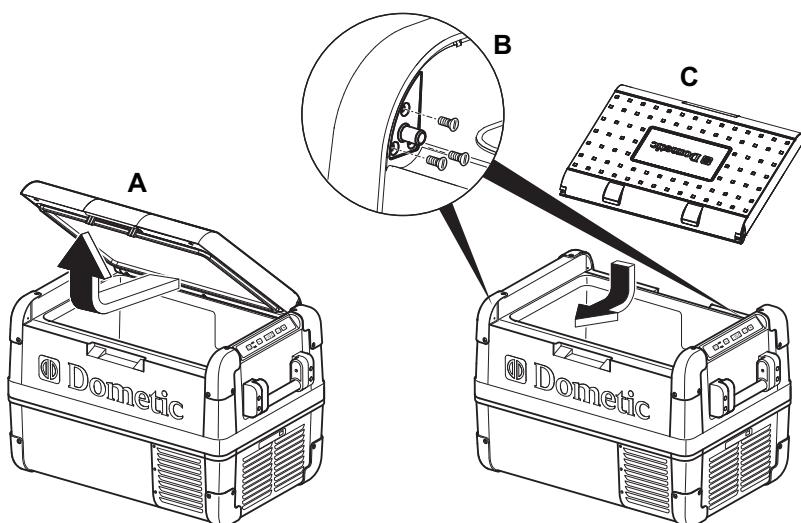

CFX50, CFX65, CFX65DZ

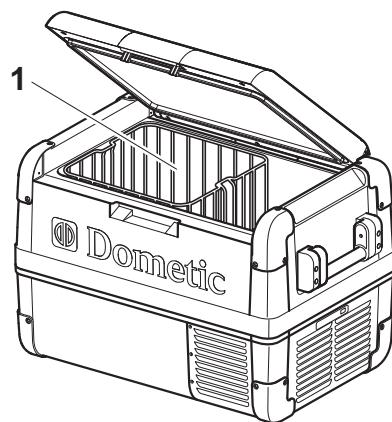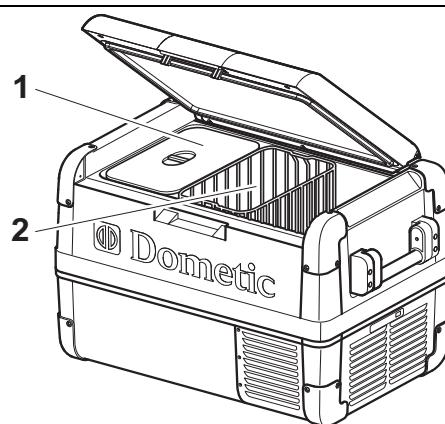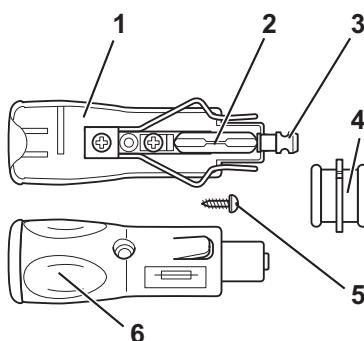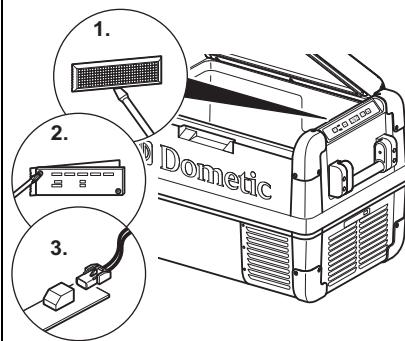7**8****9****10**

Please read this operating manual carefully before starting the device. Keep it in a safe place for future reference. If the device is passed on to another person, this operating manual must be handed over to the user along with it.

The manufacturer cannot be held liable for damage resulting from **improper usage or incorrect operation**.

Contents

1	Explanation of symbols	6
2	Safety instructions	7
2.1	General safety	7
2.2	Operating the device safely	8
3	Scope of delivery	9
4	Accessories	9
5	Intended use	10
6	Function description	11
6.1	Scope of functions	11
6.2	Operating and display elements	12
7	Operation	13
7.1	Before initial use	13
7.2	Energy saving tips	14
7.3	Connecting the cooler	14
7.4	Using the battery monitor	15
7.5	Using the cooler	17
7.6	Setting the temperature	18
7.7	Using the emergency switch (where fitted)	19
7.8	USB port for power supply	19
7.9	Switching off the cooler	19
7.10	Defrosting the cooler	20
7.11	Replacing the device fuse	20
7.12	Replacing the plug fuse (12/24 V)	21
7.13	Replacing the light PCB	21
8	Cleaning and maintenance	22
9	Guarantee	22

10	Troubleshooting	23
11	Disposal	24
12	Technical data	24

1 Explanation of symbols



DANGER!

Safety instruction: Failure to observe this instruction will cause fatal or serious injury.



WARNING!

Safety instruction: Failure to observe this instruction can cause fatal or serious injury.



CAUTION!

Safety instruction: Failure to observe this instruction can lead to injury.



NOTICE!

Failure to observe this instruction can cause material damage and impair the function of the product.



NOTE

Supplementary information for operating the product.

- **Action:** This symbol indicates that action is required on your part. The required action is described step-by-step.
- ✓ This symbol describes the result of an action.

Fig. 1 5, page 3: This refers to an element in an illustration. In this case, item 5 in figure 1 on page 3.

2 Safety instructions

2.1 General safety



WARNING!

- Do not operate the device if it is visibly damaged.
- If this device's power cable is damaged, it must be replaced by the manufacturer, customer service or a similarly qualified person in order to prevent safety hazards.
- This device may only be repaired by qualified personnel. Improper repairs can lead to considerable hazards.
- This device can be used by children aged 8 years or over, as well as by persons with diminished physical, sensory or mental capacities or a lack of experience and/or knowledge, providing they are supervised or have been taught how to use the device safely and are aware of the resulting risks.
- Cleaning and user maintenance must not be carried out by children without supervision.
- Children must not play with the device.
- Children must be supervised to ensure that they do not play with the device.
- Always keep and use the device out of the reach of children under the age of 8 years.
- Do not store any explosive substances such as spray cans with a flammable propellant in the device.



CAUTION!

- Disconnect the device from the power supply
 - before each cleaning and maintenance
 - after every use
- Food may only be stored in its original packaging or in suitable containers.



NOTICE!

- Check that the voltage specification on the type plate corresponds to that of the energy supply.

- Only connect the device as follows:
 - With the DC cable to a DC plug socket in the vehicle (e. g. cigarette lighter)
 - Or with the 120 V connection cable to the 120 V AC mains supply
- Never pull the plug out of the socket by the cable.
- If the cooler is connected to the DC socket: Disconnect the cooler and other power consuming devices from the battery before connecting the quick charging device.
- If the cooler is connected to the DC socket: Disconnect the cooler or switch it off when you turn off the engine. Otherwise you may discharge the battery.
- The cooling device is not suitable for transporting caustic materials or materials containing solvents.
- The cooling device contains inflammable cyclopentane in the insulation. The gases in the insulation material require special disposal procedures. Deliver the device at the end of its life-cycle to an appropriate recycling center.

2.2 Operating the device safely



CAUTION!

- Before starting the device, ensure that the power supply line and the plug are dry.



NOTICE!

- Do not use electrical devices inside the cooler unless they are recommended by the manufacturer for the purpose.
- Do not place the device near open flames or other heat sources (heaters, direct sunlight, gas ovens etc.).

● Danger of overheating!

Ensure at all times that there is sufficient ventilation so that the heat that arises during operation does not build up. Make sure that the device is sufficiently far away from walls and other objects so that the air can circulate.

- Ensure that the ventilation openings are not covered.
- Do not fill the inner container with ice or fluid.
- Never immerse the device in water.
- Protect the device and the cable against heat and moisture.

3 Scope of delivery

The scope of delivery is shown in fig. 1, page 2.

Item	Quantity	Description
1	1	Cooler
2	1	Connection cable for 12/24 V== connection
3	1	Connection cable for 120 V~ connection
–	1	Operating manual

4 Accessories

Available as accessory (not included in scope of delivery):

Designation	Item no.	Model
Quick release fixing kit CFX-QFK	9105306218	CFX28 only
Wireless display CFX-WD	9105306245	suits all models

5 Intended use



The cooler is suitable for cooling and freezing foods. The device is also suitable for use on boats.



The device is designed to be operated from a 12 V⎓ or 24 V⎓ on-board supply socket of a vehicle (e. g. cigarette lighter), boat or RV as well as from a 120 V AC mains.

The cooling device is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments
- farm houses
- clients in hotels, motels and other residential type environments
- bed and breakfast type environments
- catering and similar non-retail applications



CAUTION! Health hazard!

Please check if the cooling capacity of the device is suitable for storing the food or medicine you wish to cool.

6 Function description

The cooler can chill products, keep them cool as well as freeze them. A low maintenance refrigerant circuit with compressor provides the cooling. The generous insulation and powerful compressor ensure efficient and fast cooling.

The cooler is portable.

The cooler can withstand a constant incline of 30°, for example when used on boats.

6.1 Scope of functions

- Power supply with priority circuit for connecting to the AC mains
- Three-level battery monitor to protect the vehicle battery
- Display with temperature gauge in °C and °F
Switches off automatically at low battery voltage
- Temperature setting: With two buttons in steps of 1 °C (2 °F)
- Foldable carrying handles
- USB port for power supply
- Emergency switch (where fitted)
- Removable wire basket

6.2 Operating and display elements

Latch for lid: fig. 2 1, page 2

Operating panel (fig. 3, page 2)

Item	Description	Explanation
1	ON OFF	Switches the cooler on or off when the button is pressed for between one and two seconds
2	POWER “  ”	Status indication LED lights up green: Compressor is on LED lights up orange: Compressor is off LED flashes orange: Display switched off automatically due to low battery voltage
3	ERROR	LED flashes red: Device is switched on but not ready for operation
4	SET	Selects the input mode – Temperature setting – Celsius or Fahrenheit display – Set battery monitor
5		Display, shows the information
6	“–”	Press once to decrease the value
7	“+”	Press once to increase the value

Connection sockets (fig. 4, page 3)

Item	Description
1	Connection socket AC voltage supply
2	Fuse holder
3	Connection socket DC voltage supply

Emergency switch (when fitted) and USB port (fig. 5, page 3)

Item	Description
1	Emergency switch
2	USB port for power supply

7 Operation

7.1 Before initial use

**NOTE**

Before starting your new cooler for the first time, you should clean it inside and outside with a damp cloth for hygienic reasons (please also refer to the chapter “Cleaning and maintenance” on page 22).

Reversing the lid opening direction

CFX50, CFX65, CFX65DZ

The lid hinges can be moved to the opposite side if you want to open the lid from the opposite direction. To do this, proceed as follows:

- Open the lid and remove it (fig. 6 A, page 3).
- Remove 3 screws per hinge (fig. 6 B, page 3) and take off hinges.
- Remove plastic covers from new hinge positions with a small screwdriver and re-fit to old hinge positions.
- Re-fit hinges in new positions.
- Insert the lid in the hinges on the opposite side (fig. 6 C, page 3).

Selecting the temperature units

Temperature display units can be switched between Celsius and Fahrenheit as follows:

- Switch on the cooler.
- Press the “SET” button (fig. 3 4, page 2) twice.
- Use the “+” (fig. 3 7, page 2) or “-” (fig. 3 6, page 2) buttons to select Celsius or Fahrenheit.
- ✓ The selected temperature units then appear in the display for a few seconds. The display flashes several times before it returns to the current temperature.

7.2 Energy saving tips

- Choose a well ventilated installation location which is protected against direct sunlight.
- Allow warm food to cool down first before placing it in the cooling device to keep cool.
- Do not open the cooling device more often than necessary.
- Do not leave the cooling device open for longer than necessary.
- Defrost the cooler once a layer of ice forms.
- Avoid unnecessarily low temperatures.

7.3 Connecting the cooler

Connecting to a battery (vehicle or boat)

The cooler can be operated with 12 V== or 24 V==.



NOTICE! Danger of damage!

Disconnect the cooler and other consumer units from the battery before you connect the battery to a quick charging device. Overvoltage can damage the electronics of the device.

For safety reasons the cooler is equipped with an electronic system to prevent the polarity reversal. This protects the cooler against short-circuiting when connecting to a battery.

- Plug the 12/24 V connection cable (fig. 1 2, page 2) into the device DC voltage socket and also into a 12 V or 24 V cigarette lighter socket.

Connecting to a 120 V AC mains (e.g. in the home or office)



DANGER! Danger of electrocution!

- Never handle plugs and switches with wet hands or if you are standing on a wet surface.
- If you are operating your cooler on board a boat from a mains connection of 120 V~, you must install a residual current circuit breaker between the 120 V~ mains and the cooler. Seek advice from a trained technician.

The coolers have an integrated multi-voltage power supply with priority circuit for connecting to an AC voltage source of 120 V. The priority circuit automatically switches the cooler to mains operation, if the device is connected to a 120 V AC mains, even if the 12/24 V connection cable is still attached.

- Plug the 120 V connection cable (fig. 1 3, page 2) into the device AC voltage socket and connect it to the 120 V AC voltage mains.

7.4 Using the battery monitor



The device is equipped with a multi-level battery monitor that protects your vehicle battery against excessive discharging when the device is connected to the on-board 12/24 V supply.

If the cooler is operated when the vehicle ignition is switched off, the cooler switches off automatically as soon as the supply voltage falls below a set level. The cooler will switch back on once the battery has been recharged to the restart voltage level.



NOTICE! Danger of damage!

When switched off by the battery monitor, the battery will no longer be fully charged. Avoid starting repeatedly or operating current consumer units without longer charging phases. Ensure that the battery is recharged.

In "HIGH" mode, the battery monitor responds faster than at the levels "LOW" and "MED" (see the following table).

Battery monitor mode	LOW	MED	HIGH
Switch-off voltage at 12 V	10.1 V	11.4 V	11.8 V
Restart voltage at 12 V	11.1 V	12.2 V	12.6 V
Switch-off voltage at 24 V	21.5 V	24.1 V	24.6 V
Restart voltage at 24 V	23.0 V	25.3 V	26.2 V

The battery monitor mode can be selected as follows:

- Switch on the cooler.
- Press the "SET" button (fig. 3 4, page 2) three times.
- Use the "+" (fig. 3 7, page 2) or "-" (fig. 3 6, page 2) buttons to select the battery monitor mode.
- ✓ Digital display will be as follows:
Lo (LOW), I^{d} (MED), Hi (HIGH)
- ✓ The selected mode then appears in the display for a few seconds. The display flashes several times before it returns to the current temperature.



NOTE

When the cooler is supplied by the starter battery, select the battery monitor mode "HIGH". If the cooler is connected to a supply battery, the battery monitor mode "LOW" will suffice.

7.5 Using the cooler



NOTICE! Danger of overheating!

Ensure at all times that there is sufficient ventilation so that the heat that is generated during operation can dissipate. Ensure that the ventilation slots are not covered. Make sure that the device is sufficiently far away from walls and other objects so that the air can circulate.

- Place the cooler on a firm foundation.

Make sure that the ventilation slots are not covered and that the heated air can dissipate.



NOTE

Place the cooler as shown (fig. 1, page 2). If you operate the box in a different orientation it can be damaged.

- Connect the cooler, see chapter “Connecting the cooler” on page 14.



NOTICE! Danger from excessively low temperature!

Ensure that only those objects are placed in the cooler that are intended to be cooled at the selected temperature.

- Press the “ON/OFF” button (fig. 3 1, page 2) for between one and two seconds.
- ✓ The LED “ \oplus ” lights up (fig. 3 2, page 2).
- ✓ The display (fig. 3 5, page 2) switches on and shows the current cooling temperature.



CAUTION! Health hazard!

CFX65DZ:

If the temperature in the freezer compartment (fig. 8 1, page 4) is very low (-22°C), the temperature range in the cooling department (fig. 8 2, page 4) can be below freezing as well.

**NOTE****Displayed temperature****● CFX28, CFX35, CFX40, CFX50, CFX65:**

The temperature displayed is that of the large interior compartment (e.g. CFX50, CFX65: fig. 7 1, page 4).

● CFX65DZ:

- With fridge/freezer divider in: The temperature displayed is that of the freezer compartment (fig. 8 1, page 4).
- With fridge/freezer divider out: The actual compartment temperature will be considerably warmer than the displayed temperature

- ✓ The cooler starts cooling the interior.

**NOTE**

When operating with the battery, the display switches off automatically if the battery voltage is low. The LED “” flashes orange.

Latching the cooler lid

- Close the lid.
- Press the latch (fig. 2 1, page 2) down, until it latches in place audibly.

7.6 Setting the temperature

- Press the “SET” button (fig. 3 4, page 2) once.
- Use the “+” (fig. 3 7, page 2) and “-” (fig. 3 6, page 2) buttons to select the cooling temperature.
- The cooling temperature appears in the display for a few seconds. The display flashes several times and then the current temperature is displayed again.

7.7 Using the emergency switch (where fitted)

The emergency switch (fig. 5 1, page 3) is located below the control panel on all models except CFX28 where it is located above the power inlet sockets. For normal operation the switch is in the “NORMAL USE” position.

- If an electronic control failure occurs, slide the switch to “EMERGENCY OVERRIDE” position



NOTE

If the switch is in the “EMERGENCY OVERRIDE” position, the cooler runs with full cooling capacity and may freeze.

7.8 USB port for power supply

USB port allows you to charge small devices like mobile phones and mp3-players.

To use your cooling box with any USB devices, simply connect a USB cable (not included) to your device.



NOTE

Ensure that any small device connected to the USB port is compatible with 5 V/500 mA operation.

7.9 Switching off the cooler

- Empty the cooler.
- Switch the cooler off.
- Pull out the connection cable.

If you do not want to use the cooler for a longer period of time:

- Leave the cover slightly open. This prevents odor build-up.

7.10 Defrosting the cooler

Humidity can form frost in the interior of the cooling device or on the evaporator. This reduces the cooling capacity. Defrost the device in good time to avoid this.



NOTICE! Danger of damage!

Never use hard or pointed tools to remove ice or to loosen objects which have frozen in place.

To defrost the cooler, proceed as follows:

- Take out the contents of the cooling device.
- If necessary, place them in another cooling device to keep them cool.
- Switch off the device.
- Leave the lid open.
- Wipe off the defrosted water.

7.11 Replacing the device fuse



DANGER! Danger of electrocution!

Disconnect the power supply and the connection cable before you replace the device fuse.

- Disconnect the power supply to the device.
- Pull off the connection cable.
- Pry out the fuse insert (fig. 4 2, page 3) with a screwdriver.
- Replace the defective glass fuse with a new one that has the same rating (4 A 250 V).
- Press the fuse insert back into the housing.
- Reconnect the power supply to the device.

7.12 Replacing the plug fuse (12/24 V)

- Pull the adapter sleeve (fig. 9 4, page 4) off of the plug.
- Unscrew the screw (fig. 9 5, page 4) out of the upper half of the housing (fig. 9 6, page 4).
- Carefully lift the upper half of the housing off from the lower (fig. 9 1, page 4) half.
- Take out the contact pin (fig. 9 3, page 4).
- Replace the defective fuse (fig. 9 2, page 4) with a new fuse that has the same rating (8 A).
- Re-assemble the plug in the reverse order.

7.13 Replacing the light PCB

- Disconnect the power supply to the device.
- Pry out the transparent cover with a screwdriver (fig. 10 1, page 4).
- Unscrew the PCB mounting screws (fig. 10 2, page 4).
- Pull out the plug from the PCB (fig. 10 3, page 4).
- Replace the defective light PCB with a new one.
- Fit new PCB using reverse of removal instructions.
- Press the transparent cover back into the housing.
- Reconnect the power supply to the device.

8 Cleaning and maintenance



WARNING!

Always disconnect the device from the power supply before you clean and service it.



NOTICE! Risk of damage

- Never clean the cooler under running water or in dish water.
- Do not use abrasive cleaning agents or hard objects during cleaning as these can damage the cooler.

- Occasionally clean the device interior and exterior with a damp cloth.
- Make sure that the air inlet and outlet vents on the device are free of any dust and dirt, so that heat can be released and the device is not damaged.

9 Guarantee

The statutory warranty period applies. If the product is defective, please contact the manufacturer's branch in your country (see the back of the instruction manual for the addresses) or your retailer.

For repair and guarantee processing, please include the following documents when you send in the device:

- A copy of the receipt with purchasing date
- A reason for the claim or description of the fault

10 Troubleshooting

Fault	Possible cause	Suggested remedy
Device does not function, LED does not glow.	There is no voltage present in the 12/24 V socket (cigarette lighter) in your vehicle.	The ignition must be switched on in most vehicles to apply current to the cigarette lighter.
	No voltage present in the AC voltage socket.	Try using another plug socket.
	The device fuse is defective.	Replace the device fuse, see chapter "Replacing the device fuse" on page 20.
	The integrated mains adapter is defective.	This can only be repaired by an authorized repair center.
The device does not cool (plug is inserted, "POWER" LED is lit).	Defective compressor.	This can only be repaired by an authorized repair center.
The device does not cool (plug is inserted, "POWER" LED flashes orange, display is switched off).	Battery voltage is too low.	Test the battery and charge it as needed.
When operating from the 12/24 V socket (cigarette lighter):	The cigarette lighter socket is dirty. This results in a poor electrical contact.	If the plug of your cooler becomes very warm in the cigarette lighter socket, either the lighter socket must be cleaned or the plug has not been assembled correctly.
The ignition is on and the device is not working and the LED is not lit.	The fuse of the 12/24 V plug has blown.	Replace the fuse (8 A) in the 12/24 V plug, see chapter "Replacing the plug fuse (12/24 V)" on page 21.
Pull the plug out of the socket and make the following checks.	The vehicle fuse has blown.	Replace the vehicle's 12/24 V socket fuse (usually 15 A). Please refer to your vehicle's operating manual.
The display shows an error message (e.g. "Err1") and the appliance does not cool.	The appliance has switched off due to an internal fault.	This can only be repaired by an authorized repair center.

11 Disposal

► Place the packaging material in the appropriate recycling waste bins wherever possible.



If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

12 Technical data

	CFX28	CFX35	CFX40
Item no.:	9105306294	9105305698	9105306243
Connection voltage:	12/24 V== and 120 V~		
Rated current:	12 V==: 6.5 A 24 V==: 3.2 A 120 V~: 0.65 A	12 V==: 7.0 A 24 V==: 3.2 A 120 V~: 0.72 A	
Cooling capacity:	+10 °C to –22 °C (+50 °F to –8 °F)		
Category:	1		
Energy efficiency class:	A++		
Energy consumption:	61 kWh/annum	62 kWh/annum	64 kWh/annum
Gross volume:	28 l	34.5 l	41 l
Storage volume:	26 l	32 l	38 l
Climate class:	N, T		
Ambient temperature:	+16°C to +43 °C (+61 °F to +109 °F)		
Noise emission:	34 dB(A)	45 dB(A)	
USB:	5 V==, 500 mA		
Dimensions (W x H x D) (including handles) in mm: in inch:	620 x 425 x 342 24.4 x 16.7 x 13.5	692 x 411 x 398 27.2 x 16.2 x 15.7	692 x 461 x 398 27.2 x 18.1 x 15.7
Weight:	13 kg 29 lbs.	17.5 kg 39 lbs.	18.5 kg 41 lbs.

	CFX50	CFX65	CFX65DZ
Item no.:	9105306244	9105304050	9105305699
Connection voltage:	12/24 V--- and 120 V~		
Rated current:	12 V---: 7.8 A 24 V---: 3.6 A 120 V~ : 0.79 A	12 V---: 8.2 A 24 V---: 3.8 A 120 V~ : 0.83 A	12 V---: 5.5 A 24 V---: 2.6 A 100 V~ : 0.63 A
Cooling capacity:	+10 °C to –22 °C (+50 °F to –8 °F)		
Category:	1		
Energy efficiency class:	A++		A+
Energy consumption:	66 kWh/annum	69 kWh/annum	115 kWh/annum
Gross volume:	50 l	65 l	with divider: 61 l without divider: 65 l
Storage volume:	46 l	60 l	53 l
Climate class:	N, T		
Ambient temperature:	+16°C to +43 °C (+61 °F to +109 °F)		
Noise emission:	42 dB(A)		
USB:	5 V---, 500 mA		
Dimensions (W x H x D) (including handles) in mm: in inch:	725 x 471 x 455 28.5 x 18.5 x 17.9	725 x 561 x 455 28.5 x 22 x 17.9	725 x 561 x 455 28.5 x 22 x 17.9
Weight:	20.4 kg 45 lbs.	22.3 kg 49 lbs.	23.2 kg 51 lbs.


NOTE

If the ambient temperature is above +32°C (+90 °F), the minimum temperature cannot be attained.

The coolant circuit contains R134a.

Test/certificates:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

AUSTRALIA
Dometic Australia Pty. Ltd.
 1 John Duncan Court
 Varsity Lakes QLD 4227
 ☎ 1800 212121
 ☎ +61 7 55076001
 Mail: sales@dometic-waeco.com.au

AUSTRIA
Dometic Austria GmbH
 Neudorferstraße 108
 A-2353 Guntramsdorf
 ☎ +43 2236 908070
 ☎ +43 2236 90807060
 Mail: info@dometric.at

BENELUX
Dometic Branch Office Belgium
 Zincstraat 3
 B-1500 Halle
 ☎ +32 2 3598040
 ☎ +32 2 3598050
 Mail: info@dometric.be

BRAZIL
Dometic DO Brasil LTDA
 Avenida Paulista 1754, conj. 111
 SP 01020-000 São Paulo
 ☎ +55 11 3251 3352
 ☎ +55 11 3251 3362
 Mail: info@dometric.com.br

DENMARK
Dometic Denmark A/S
 Nordenstev 15, Taulov
 DK-7000 Fredericia
 ☎ +45 75585966
 ☎ +45 75586307
 Mail: info@dometric.dk

FINLAND
Dometic Finland OY
 Mestarintie 4
 FIN-01730 Vantaa
 ☎ +358 20 7413220
 ☎ +358 9 7593700
 Mail: info@dometric.fi

FRANCE
Dometic SAS
 ZA du Pré de la Dame Jeanne
 B.P. 5
 F-60128 Plailly
 ☎ +33 3 44633525
 ☎ +33 3 44633518
 Mail : vehiculesdeloisirs@dometric.fr

HONG KONG
Dometic Group Asia Pacific
 Suites 2207-11 · 22/F · Tower 1
 The Gateway · 25 Canton Road,
 Tsim Sha Tsui · Kowloon
 ☎ +852 2 4611386
 ☎ +852 2 4665553
 Mail: info@waeco.com.hk

HUNGARY
Dometic Zrt. Sales Office
 Kerekyártó u. 5.
 H-1147 Budapest
 ☎ +36 1 468 4400
 ☎ +36 1 468 4401
 Mail: budapest@dometric.hu

GERMANY
Dometic WAEKO International GmbH
 Hollefeldstraße 63 · D-48282 Emsdetten
 ☎ +49 (0) 2572 879-195 · ☎ +49 (0) 2572 879-322
 Mail: info@dometric-waeco.de · Internet: www.dometric-waeco.de

ITALY
Dometic Italy S.r.l.
 Via Virgilio, 3
 I-47122 Forlì (FC)
 ☎ +39 0543 754901
 ☎ +39 0543 754983
 Mail: vendite@dometric.it

JAPAN
Dometic KK
 Maekawa-Shibaura, Bldg. 2
 2-13-9 Shibaura Minato-ku
 Tokyo 108-0023
 ☎ +81 3 5445 3333
 ☎ +81 3 5445 3339
 Mail: info@dometric.jp

MEXICO
Dometic Mx. S. de R. L. de C. V.
 Circuito Médicos No. 6 Local 1
 Colonia Ciudad Satélite
 CP 53100 Naucalpan de Juárez
 Estado de México
 ☎ +52 55 5374 4108
 ☎ +52 55 5393 4683
 Mail: info@dometric.com.mx

NETHERLANDS
Dometic Benelux B.V.
 Ecstraat 3
 NL-4879 NP Etten-Leur
 ☎ +31 76 5029000
 ☎ +31 76 5029019
 Mail: info@dometric.nl

NEW ZEALAND
Dometic New Zealand Ltd.
 Unite E, The Gate
 373 Neilson Street
 Penrose, Auckland
 ☎ +64 9 622 1490
 ☎ +64 9 622 1573
 Mail: customerservices@dometric.co.nz

NORWAY
Dometic Norway AS
 Østerøyveien 46
 N-3232 Sandefjord
 ☎ +47 33428450
 ☎ +47 33428459
 Mail: firmapost@dometric.no

POLAND
Dometic Poland Sp. z o.o.
 Ul. Pulawska 435A
 PL-02-801 Warszawa
 ☎ +48 22 414 3200
 ☎ +48 22 414 3201
 Mail: info@dometric.pl

PORTUGAL
Dometic Spain, S.L.
 Branch Office em Portugal
 Rot. de São Gonçalo nº 1 - Esc. 12
 2775-399 Carcavelos
 ☎ +351 219 244 173
 ☎ +351 219 243 206
 Mail: info@dometric.pt

RUSSIA
Dometic RUS LLC
 Komsomolskaya square 6-1
 RU-107140 Moscow
 ☎ +7 495 780 79 39
 ☎ +7 495 916 56 53
 Mail: info@dometric.ru

SINGAPORE
Dometic Pte Ltd
 18 Boon Lay Way 06-140 Trade Hub 21
 Singapore 609966
 ☎ +65 6795 3177
 ☎ +65 6862 6620
 Mail: dometic@dometric.com.sg

SLOVAKIA
Dometic Slovakia s.r.o. Sales Office Bratislava
 Nádražná 34/A
 900 28 Ivanka pri Dunaji
 ☎ +421 2 45 529 680
 Mail: bratislava@dometric.com

SOUTH AFRICA
Dometic (Pty) Ltd.
 Regional Office
South Africa & Sub-Saharan Africa
 Unit 6-7 on Mastiff Linbro Park
 2008 Johannesburg
 ☎ +27 11 4504978
 ☎ +27 11 4504976
 Mail: info@dometric.co.za

SPAIN
Dometic Spain S.L.
 Avda. Sierra del Guadarrama, 16
 E-28691 Villanueva de la Cañada
 Madrid
 ☎ +34 902 111 042
 ☎ +34 900 100 245
 Mail: info@dometric.es

SWEDEN
Dometic Scandinavia AB
 Gustaf Melins gata 7
 S-42131 Västra Frölunda
 ☎ +46 31 7341100
 ☎ +46 31 7341101
 Mail: info@dometricgroup.se

SWITZERLAND
Dometic Switzerland AG
 Riedackerstrasse 7a
 CH-8153 Rümlang
 ☎ +41 44 817171
 ☎ +41 44 817191
 Mail: info@dometric.ch

UNITED ARAB EMIRATES
Dometic Middle East FZCO
 P. O. Box 17860
 S-D 6, Jebel Ali Freezone
 Dubai
 ☎ +971 4 883 3858
 ☎ +971 4 883 3868
 Mail: info@dometric.ae

UNITED KINGDOM
Dometic UK Ltd.
 Dometic House, The Brewery
 Blandford St. Mary
 Dorset DT11 9LS
 ☎ +44 344 626 0133
 ☎ +44 344 626 0143
 Mail: sales@dometric.co.uk

USA
Dometic RV Headquarters
 2320 Industrial Pkwy
 Elkhart, IN 46516 USA
 ☎ +1 800-366-3842