Product manual

A,Please use original accessories such as the power adapter

D, If suddenly the machine stopped working, press and hold

force a shutdown. 10 seconds later, turn the power on again.

F,The machine will be automatically powered on during cha-

G,The blue light out on the surface case will be on during

H,For better charging efficiency, please keep the machine in

I,When the battery status is lower than 5%, please charge up

the machine. If the battery is used up completely, please be-

tter turn the machine on after it has been charged for 10

J,Insert the TF card into the slot, and then the device will

K,Insert 3.5mm standard headphone connector into the ta-

L,This product is not intended to be used directly under the


sunlight which would burn and damage the screens through

the lens, in this case, it shall not be included in post-salesma-

C,Please preview the user manual before operation;

2, OPERATION GUIDELINE

2.1 Function keys instruction

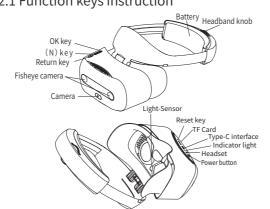

1. Power key: long pressing (3 seconds) on the key to achieve power on /off, short pressing to achieve sleep/wake-up action, long pressing (15 seconds) to

force shutdown. 2.0k key: press to confirm

3.Back: back to the previous menu

5. TF card slot:insert TF card;

6.Typc-C charging slot: charging and transmitting 7. Earphone jack: connect the earphone

8.Light-Sensor: When removed or put on, the display screen can be automatically controlled or extinguished 9. Headband knob: When wearing VR all-in-one machine, you can control the tightness

10.Indicator light: Display different colors when charged or full

11. Camera: Video, Photos, Scans (Optional) 12. Fisheye Camera: Internal positioning of the software (e.g. playing a game)(Optional) 2.2 Steps for usage:

User Manual

High quality and high performance are the characteristi-

cs that VR products possess. For better usage, please read

the manual, and follow the operation steps. If you have any


questions, please contact us in reference to the number and

addresslisted in the warranty card, we'll be at your service.

Thank you for choosing and using VR products.

Dear Customers

VR—sincerity always for you!

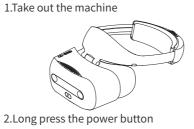

2.Long press the power button



 
3. Put on the VR all-in-one machine, adjust to the appro-priate position, the viewing angle is facing the all-in ma-chine, the picture is clearly displayed



4. Rotate the headband knob to adjust the tightness of the headband

Clockwise: Tightly

Counterclockwise: Loose



5. When the eye is tired, it can rotate the VR body independently up, and it will be set in the upper part without falling When you need to continue watching, you can rotate the VR independently down

Directory

1、NOTICE...

2.2 Use steps.....

2.4、Settings

2.3 Home page

2.4.3 General.....

2.5、Media player 2.5.1 Media player

2.7、All applications.....

Warranty card

2、OPERATION GUIDELINE

2.1 Product Machine Diagram and function key

operation instruction.....

2.4.1 Wireless network 2.4.2 Bluetooth

2.4.4 System

2.5.2 File management play.....

3、Points For Attention

2.6、Application store 10

4、FAQ and solutions 11

5、Hazardous Substances Declaration for Electronic

2.3Home page



The home page includes local players, photo albums, games, browsers, online theaters, Panorama OL, panoramic roaming, VR live streaming, file management, settings and the ability to view power, time, access devices and wireless network status.

2.4 Settings



Exit play mode: Press the Back button;

The setting options include wireless network connection, bluetooth, general purpose, system and accountPoints.



Setting options include Wi-Fi, Bluetooth, General, System, Connecting external devices

2.4.2 Bluetooth

1, NOTICE

charging.

identify the TF card.

rget interface for audio output.

B,Please keep the machine dry

the power button for 15 seconds to

E,Please use original adapter for charging

rging even when it is alreadypowered off.



When the Bluetooth is turned on, then it will automatically search for devices and come up a listof devices which can be connected.

Notice: When the paired devices cannot be connected, cancel it and try again.

2.4.3 General

The adjustment of the screen brightness, the settings of the volume, language, dormancy time, and time zone are all in cluded.

2.4.4 System



System update, factory reset and about device, these 3 parts are includedMethods for system update:.

a. If there is a new version available online, then it can be downloaded and updated directly

b, Transfer the downloaded software into local file, and then update it manually.

About devices: User can check the system version, machine hardware/software parameters.

2.5 Media player

2.5.1 Media Player

 
Pause video: Press the OK button when the video is playing to pause

Volume adjustment: Press up/down button to adjust the

Fast forward/fast backward: Move the cursor, and then press OK button Exit play mode: Press the Back button;

Remarks: If the dual screen mode appeared when the video starts to play, please exit the play mode and start again

2.5.2 File management play



Pause video: Press the OK button when the video is playing

Volume adjustment: Press up/down button to adjust the volume;

Fast forward/fast backward: Move the cursor, and then press OK button

User can download and install games and other applications

Remarks: If the dual screen mode appeared when the video starts to play, please exit the play mode and start again

from app market via Wi-Fi。 2.7 All applications

2.6 Application store



All of the games, applications installed will be displayed in the option of all applications. Users can manage these installde applications. Click on the icon of delete down on the right, and then the selected application can be uninstalled

3, Points For Attention

1.Use with caution if under 16 years of age;

2.It is recommended not to use this device in patients with

pregnant women, the elderly, binocular vision abnormalities, patients with mental illness, and patients with poor heart condition); 3. Stop use immediately if you feel any physical discomfort

during use; 4.Do not use the all-in-one machine while charging;

abnormal physical conditions (including but not limited to

5.Do not expose equipment to excessive heat such as sunlight, fire, or similar conditions;

6. When wearing the all-in-one machine, please ensure the safety of the surrounding environment (suggested indoors), so as to avoid injury;

7. It is suggested that every 30 minutes to watch a proper rest, reduce visual fatigue;

8. It is recommended that the machine be used or placed in an environment where the temperature is between 5°C and 45°C and the humidity is less than 93%;

9. Prohibit sunlight and other high-intensity light directly on the lens of one machine, otherwise there is fire and other sa-

10. Batteries or battery packs shall not be used in an overheated environment

11.Please do not pull, cut the battery and the host connection 12. Please use the original accessories, such as charger 4, FAQ AND SOLUTIONS:

1) The device cannot be powered on: Please ensure that you have pressand hold the power buttonfor 3 seconds, and check the battery status

2) The splash screen happens once the application is entered: back to the previous directory and try again

3) There are three patterns in VR video: 2D, 3D, pano360, you can click the menu option downon the right and then switch

Packing list

number	Name	Number
1	VR all-in-one	1
2	The power adapter	1
3	Type C data line	1
4	Product manual	1

5, Hazardous Substances Declaration for Electronic Information Products

Toxic substancesOr Element (Hg) (Cd) (Cr(VI)) (PBB) (PBDE) 0 0 0 0 0 0 0 0 0 0 0 0 0

O: Indicates that the contents of the hazardous substances in all the homogeneous materials of the parts are below the SJ/T11363-20-06 standard

0

0

0

0

0

★ That at least one homogeneous material in the component is above the SJ / T11363-2006 limit, but the item is used only in small quantities in stock or in processed products, and according to the plan is environmental protection switch, after the switch will meet the above requirements.

Warranty Card

Notifications:

1, Welcome and thank you for choosing VR All-in-one, if there are any malfunction caused from the quality issues, please send the device back to the specified maintenance office or the sales agency. In 7 days since the purchase, the device can be returned, in 15 days, the device can be exchanged for a new one, and the validity of maintenance is 1 year.

the validity of maintenance is 1 year. 2, Improper use or disassembling which cause malfunction

are not included in freemaintenance. 3, Please safely save the warranty card and apply for

maintenance with it, and do not alter theterms stated.

Customer name	
Contact	
Address	
Product model	
Purchase date	
Invoice number	
Sales agency name	
Sales agency address	
Zip code	

Warranty range

1. This warranty applies to V300 VR device. 2. Vulnerable accessories such as power adapters are not

covered by this product warranty.

The following cases are not free warranty mainframe, but still provide maintenance services, users need to pay pay maintenance costs:

1. Exceeding the warranty period;

2. Any man-made damage caused by the sale of the product;

3. Not Properly handled or stored; 4. Unauthorized users to open the machine for maintenance

and repair: 5. Soak, damage or burn the Circuit Board;

6, the normal wear and tear causes the appearance of the

product to be damaged, scratched, damaged, etc. 7. Other reasons not related to the product

Warranty Card

Notifications:

1, Welcome and thank you for choosing VR All-in-one,if there are any malfunction caused from the quality issues, please

send the device back to the specified maintenance office or the sales agency. In 7 days since the purchase, the device can be returned, in 15 days, the device can be exchanged for a new one, and the validity of maintenance is 1 year.

2, Improper use or disassembling which cause malfunction are not included in freemaintenance. 3, Please safely save the warranty card and apply for

the validity of maintenance is 1 year.

	maintenance with it, and do not alter theterms stated.		
	Customer name		
П	Contact		
i	Address		
ı	Product model		
	Purchase date		
ī	Invoice number		
i	Sales agency name		
I	Sales agency address		
	Zip code		

Warranty range

1. This warranty applies to V21 VR device. 2. Vulnerable accessories such as power adapters are not

covered by this product warranty. The following cases are not free warranty mainframe, but still provide maintenance services, users need to pay

pay maintenance costs:

1. Exceeding the warranty period;

2. Any man-made damage caused by the sale of the product; 3. Not Properly handled or stored;

4. Unauthorized users to open the machine for maintenance

5. Soak, damage or burn the Circuit Board;

6, the normal wear and tear causes the appearance of the product to be damaged, scratched, damaged, etc. 7. Other reasons not related to the product

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

Increase the separation between the equipment and receive -Connect the equipment into an outlet on a circuit different from that to which the

The device has been evaluated to meet general RF exposure requirement The device can be used in portable exposure condition without restriction.

-Consult the dealer or an experienced radio/TV technician for help.

