 


VRSPACE

VR HEADSET SMART PLAYER

Product manual

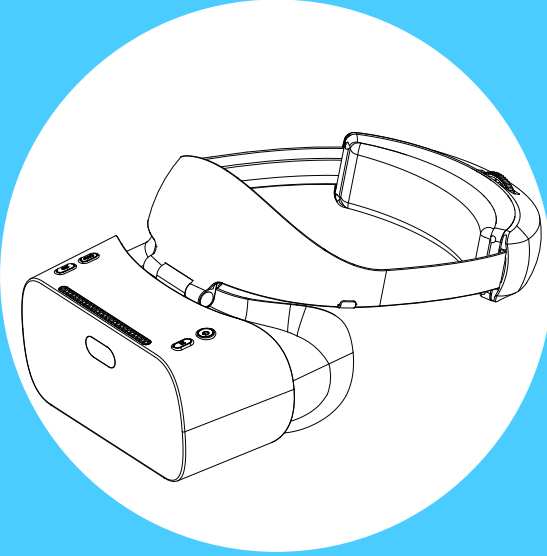

Model : V30

Please read carefully before use

User Manual

Dear Customers

Thank you for choosing and using VR products.

High quality and high performance are the characteristics that VR products possess. For better usage, please read the manual, and follow the operation steps. If you have any questions, please contact us in reference to the number and address listed in the warranty card, we' ll be at your service.

VR - sincerity always for you!

-1-

Directory

1. Notice

2. Operation guideline

2.1 Function keys instruction

2.2 Steps for usage

2.3 HMD

2.4. Home page

2.5 Settings

2.5.1 Wireless network

2.5.2 Bluetooth

2.5.3 General

2.5.4 System

2.6 Media player

2.7 Application store

2.8 All applications

3. FAQ and solutions:

Warranty card.....

3

4

4

4

7

8

8

8

9

9

10

10

11

11

12

13

User manual

1. NOTICE

A. Please use original accessories such as the power adapte

B. Please keep the machine dry

C. Please preview the user manual before operation;

D. If suddenly the machine stopped working, press and hold the power button for 15 seconds toforce a shutdown. 10 seconds later, turn the power on again.

E. Please use original adapter for charging

F. The machine will be automatically powered on during charging even when it is alreadypowered off.

G. The blue light out on the surface case will be on during charging.

H. For better charging efficiency, please keep the machine in sleep mode.

I. When the battery status is lower than 5%, please charge up the machine. If the battery isused up completely, please better turn the machine on after it has been charged for 10 minutes.

J. Insert the TF card into the slot, and then the device will identify the TF card.

K. Insert 3.5mm standard headphone connector into the target interface for audio output.

L. This product is not intended to be used directly under the sunlight which would burn and damage the screens through the lens, in this case, it shall not be included in post-sales maintenance.

-3-

2. OPERATION GUIDELINE

2.1. Function keys instruction

Headband

Battery

Headband knob

Acknowledgement key

Return key

Power button

Menu (N) key

Light perception

Reset key

Indicator light

USB

USB

TF

HOST

interface

-4-

Power key : long pressing (3 seconds) on the key to achieve power on /off , short pressing toachieve sleep/wake-up action , long pressing (15 seconds) to force shutdown.

Back: back to the previous menu

Ok key : press to confirm

Long pressing on Menu key: reset and center the HMD display

TF card slot : insert TF card

USB2.0 : insert USB flash disk

USB charging slot : charging and transmitting

 
Earphone jack : connect the earphone

Light sensation: When removed or put on, the display screen can be automatically controlled or extinguished

Headband knob: When wearing VR all-in-one machine, you can control the tightness


2.2 Steps for usage :

1.Take out the machine

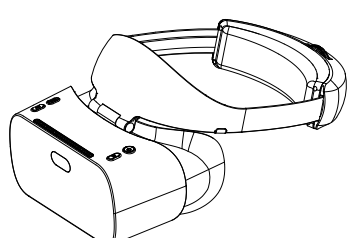


-5-

 2.2.1 Long press the power button

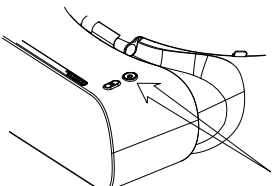


Long press

 2.2.2 Put on the VR all-in-one machine, adjust to the appropriate position, the viewing angle is facing the all-in machine, the picture is clearly displayed

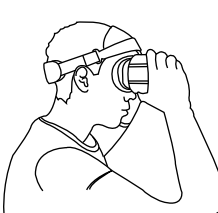


2.2.3 Rotate the headband knob to adjust the tightness of the headband

 Clockwise: Tightly Counterclockwise: Loose

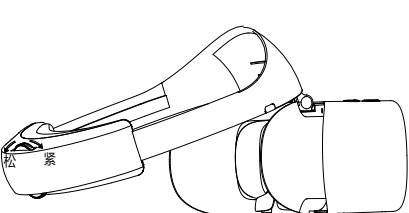


-6-

 2.2.4 When the eye is tired, it can rotate the VR body in dependently up, and it will be set in the upper part without falling. When you need to continue watching you can rotate the VR independently down

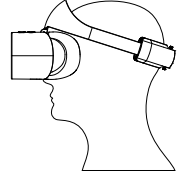

Viewing time

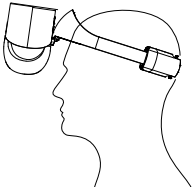 

Rest time

2.3 HMD

1) The HMD will be powered on after around 40 seconds, and there will be 6 main application icons on the main menu. The calibration of Gyroscope will be working after pressing on the menu button for 5 seconds.

2) The white dot is subject to gyro function, and can be used as the mouse cursor, Press the confirmation key to enter the functional interface for confirmation, or the Back button to back to the former directory.

 
-7-

2.4. Home page




The main menu includes local applications, online cinema, panorama view of OL, VR bar ofsingng, photos, setting and other statuses displaying such as,battery level, time, accessed devices and wireless network.

2.5 Settings

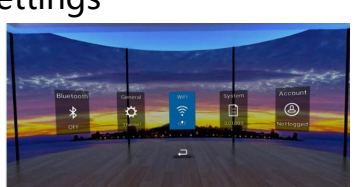

Setting options include Wi-Fi, Bluetooth, General, System, Connecting external devices.

 
2.5.1 Wireless network

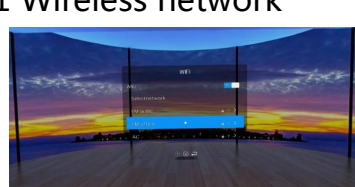

-8-

Scan for available wireless networks , choose the wireless network and enter the password to connect.

 
2.5.2 Bluetooth

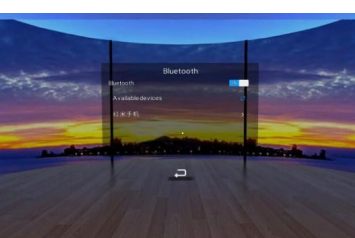

When the Bluetooth is turned on, then it will automa tically search for devices and come up a listof devices which can be connected.

Notice : When the paired devices cannot be connected cancel it and try again.

 
2.5.3 General

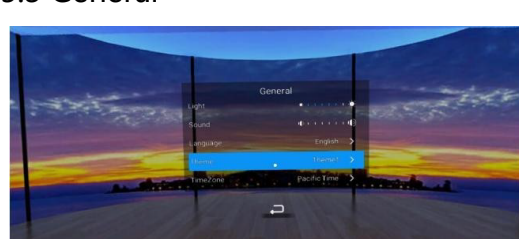

The adjustment of the screen brightness, the settings of the volume, language, dormancy time,and time zone are all included.

-9-

 2.5.4 System

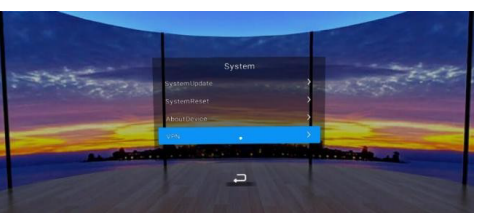


System update, factory reset and about device, these 3 parts are included.Methods for system update:

a. If there is a new version available online, then it can be downloaded and updated directly.

b. Transfer the downloaded software into local file, and then update it manually.

About devices : User can check the system version, machine hardware/software parameters.

 2.6 Media player

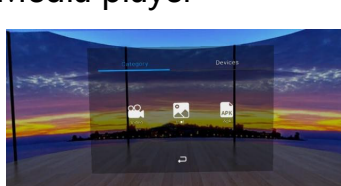

Player includes local video and online video section. Select the video : Using paired remote control or buttons on the mini host to select the video

-10-

Play video : After the video is selected, press the OK button to play

Pause video : Press the OK button when the video is playing to pause

 
Volume adjustment : Press up/down button to adjust the volume

Fast forward/fast backward : Move the cursor, and then press OK button

Exit play mode : Press the Back button

Remarks : If the dual screen mode appeared when the video starts to play, please exit the playmode and start again.


2.7 Application store

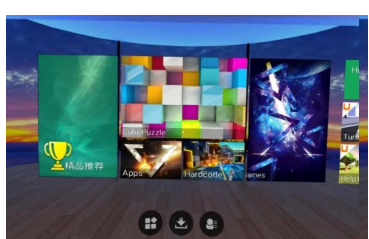

User can download and install games and other applications from app market via Wi-Fi.

2.8 All applications

 -11-

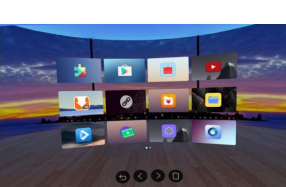

All of the games, applications installed will be displayed in the option of all applications. Users can manage these installed applications. Click on the icon of delete down on the right,and then the selected application can be uninstalled.

3、FAQ AND SOLUTIONS :

1) The device cannot be powered on : Please ensure that you have press and hold the power buttonfor 3 seconds, and check the battery status

2) The splash screen happens once the application is entered: back to the previous directory andtry again.

3) There are three patterns in VR video: 2D、 3D、 pano360, you can click the menu option downon the rightand then switch the patterns.

Packing list

No.	No.	Quantity
1	VR All-in-one	1
2	Power adaptor	1
3	USB2.0 cable	1
4	Headbands	1

-12-

Warranty Card

(user stub)

Notifications:

1, Welcome and thank you for choosing VR All-in-one, if there are any malfunction caused from the quality issues, please send the device back to the specified maintenance office or the sales agency. In 7 days since the purchase, the device can be returned,in 15 days, the devicecan be exchanged for a new one,and the validity of maintenance is 1 year.

2, Improper use or disassembling which cause malfunction are not included in freemaintenance.

3, Please safely save the warranty card and apply for maintenance with it, and do not alter theterms stated.

Customer name	
Contact	
Address	
Product model	
Purchase date	
Invoice number	
Sales agency name	
Sales agency address	
Zip code	

-13-

Warranty range

1.This warranty applies to V30 VR device.

2.Vulnerable accessories such as power adapters are not covered by this product warranty.

The following cases are not free warranty mainframe, but still provide maintenance services, users need to pay pay maintenance costs:

1. Exceeding the warranty period;

2. Any man-made damage caused by the sale of the product;

3. Not Properly handled or stored;

4. Unauthorized users to open the machine for maintenance and repair;

5. Soak, damage or burn the Circuit Board;

6, the normal wear and tear causes the appearance of the product to be damaged, scratched, damaged, etc.

7. Other reasons not related to the product.

-14-

Warranty Card

(user stub)

Notifications:

1, Welcome and thank you for choosing VR All-in-one, if there are any malfunction caused from the quality issues, please send the device back to the specified maintenance office or the sales agency. In 7 days since the purchase, the device can be returned,in 15 days, the devicecan be exchanged for a new one,and the validity of maintenance is 1 year.

2, Improper use or disassembling which cause malfunction are not included in freemaintenance.

3, Please safely save the warranty card and apply for maintenance with it, and do not alter theterms stated.

Customer name	
Contact	
Address	
Product model	
Purchase date	
Invoice number	
Sales agency name	
Sales agency address	
Zip code	

-15-

Warranty range

1.This warranty applies to V30 VR device.

2.Vulnerable accessories such as power adapters are not covered by this product warranty.

The following cases are not free warranty mainframe, but still provide maintenance services, users need to pay pay maintenance costs:

1. Exceeding the warranty period;

2. Any man-made damage caused by the sale of the product;

3. Not Properly handled or stored;

4. Unauthorized users to open the machine for maintenance and repair;

5. Soak, damage or burn the Circuit Board;

6, the normal wear and tear causes the appearance of the product to be damaged, scratched, damaged, etc.

7. Other reasons not related to the product.

FCC Cautions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and, (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

VRSPACE

HEADSET SMART PLAYER-VIRTUAL REALITY