


Sky Wise Holdings Limited

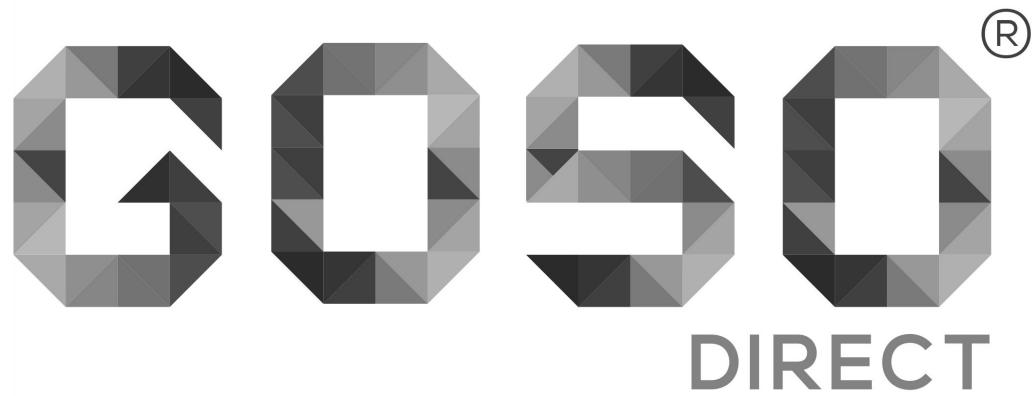

Tablet PC

H7616R

User Manual

• Content

Content.....	1
1 Introduction.....	3
1.1 Acknowledgement.....	3
1.2 Announcements.....	3
1.3 Safety Instruction.....	4
1.4 Abbreviation/Terminology.....	5
2 MID Introduction.....	5
2.1 MID Operation and Preparation.....	5
2.2 MID Status and Reminder.....	5
3 Quick Start Guide.....	6
3.1 Keys Function.....	6
3.2 Startup and Shutdown button.....	7
3.3 Open and Close of the Screen.....	7
3.4 Usage of Touch Screen.....	8
3.5 Home Page.....	9
3.6 Visit Application Procedures.....	11
3.7 USB Connection.....	11
3.8 Typing words.....	12
3.9 Operation Technique.....	14
4 Basic Setting.....	15
4.1 Wireless and Internet.....	15
4.2 Data Usage.....	18
4.3 More.....	18
4.4 Display.....	20
4.5 Storage.....	22
4.6 Battery.....	24
4.7 Application program.....	25
4.8 Location service.....	27
4.9 Security.....	27
4.10 Language and Input Method.....	29
4.11 Backup and Reset.....	31
4.12 Date and Time.....	32
4.13 Accessibility.....	33
4.14 Developer options.....	33
4.15 About Tablet.....	34
5 Multi-Media.....	35
5.1 Music.....	35
5.2 Video.....	36
5.3 Photo Gallery.....	37
5.4 Camera.....	38

6 Internet.....	39
6.1 Browser.....	39
7 Other Application Procedures.....	40
7.1 Clock.....	40
7.2 Calculator.....	41
7.3 File Manager.....	42
7.4 Recorder.....	44
7.5 Calendar.....	45
8 Installation of Procedures.....	46
8.1 Installation.....	46
8.2 Uninstall.....	46
9 Troubles Shooting.....	47
10 Fcc Warning Statement.....	48

1 Introduction

1.1 Acknowledgement

Thanks for your purchase of our product. Its CPU is RK3126, which apply the Cortex-A7 (Quad Core) , dominant frequency is 1.0GHz, it is based on Android 5.1.1 operation system, and easy to expand the third application procedure.

The product is designed with various functions. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time.

The manual systematically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

Note: pictures and content are only used in the tablet as a function of signal, may be related to the actual product is different, please in kind prevail.

1.2 Announcements

Preventive maintainance

- Please always keep the MID dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance
- Never shock, throw, prod the MID, or drop, extrude, bend the MID.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

1.3 Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the MID when driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near to the medical area.
- To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the MID or using airplane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic equipments.
- Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.
- Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.
- Never use the MID in the vicinage of high temperature, inflammable gas (gas station).
- Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the MID or PC.
- Never use the MID in bathroom or other humid environment, and please protect the MID from liquid wash or wet.

1.4 Abbreviation/Terminology

Abbreviation/Terminology	Full Name	Description
MID	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Base on IEEE 802.11bgn standard wireless LAN
T F	Trans Flash	Alternative name Micro SD, super miniature memory card

2 MID Introduction

2.1 MID Operation and Preparation

Battery Charging

 
If this navigator is first used, please use AV adaptor to fully charge it.

Apply the power adaptor to charge for MID.

2.2 MID Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Screen shot
	USB connected		USB debugging connected
	Return button		Downloading
	Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.

Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button		Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)		Increase the volume
Volume - (down)		Decrease the volume
HOME (home)		Click it in any interface will return to main interface.
Back button (back)		Click it in any interface will return to previous menu
Menu button		This button will display in menu interface.
Display recently-used application		Display recently browsed history
Screenshot		Intercept the current picture

3.2 Startup and Shutdown button

Startup

Long press **POWER key for three seconds**, you can enter into startup picture. The system enters into screen lock status, please unlock it

Notice: When the MID has crashed, long press POWER key for eleven seconds to reset.

Shutdown

1. Long press POWER, it will popout shutdown window.
2. Shutdown window contains Power off, Restart and Airplane mode three options.
3. Click Power off is the last step.

3.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, slide around to unlock the screen.



Picture 3.1

3.4 Usage of Touch Screen

MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

Before you pull, you need to hold the it with strength until you pull it into the position you want.


Rotate

For most pictures, you only need to rotate the MID sidewise to change the screen direction from horizontal to vertical. For instance, when you are typing works, and watching movies.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper.


Search

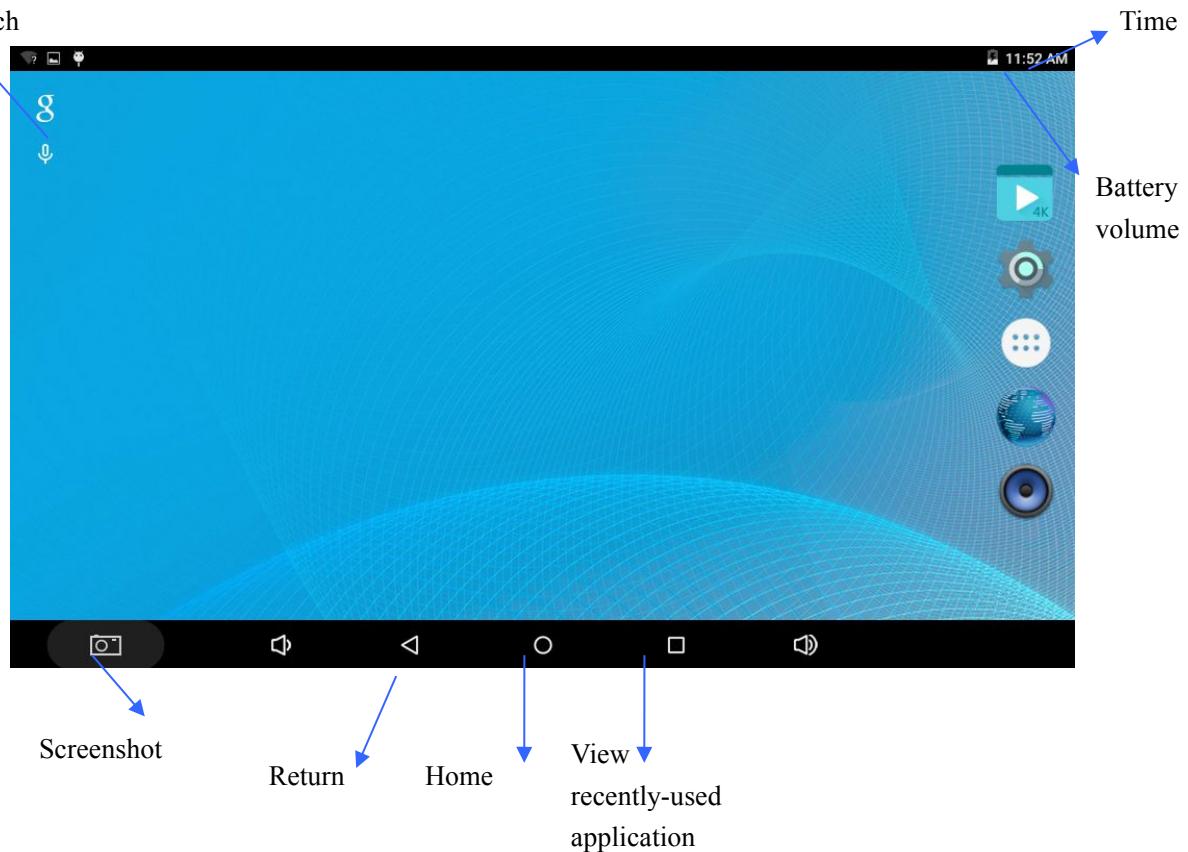

Picture 3.2


The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3.3.

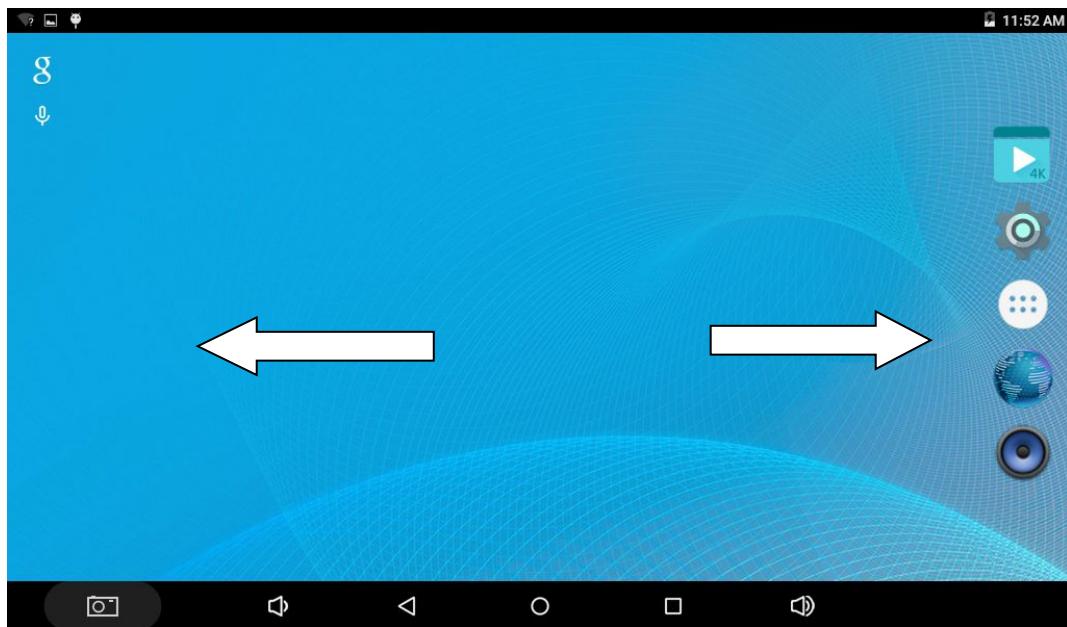

Picture 3.3

The shortcut icons management in desktop application.

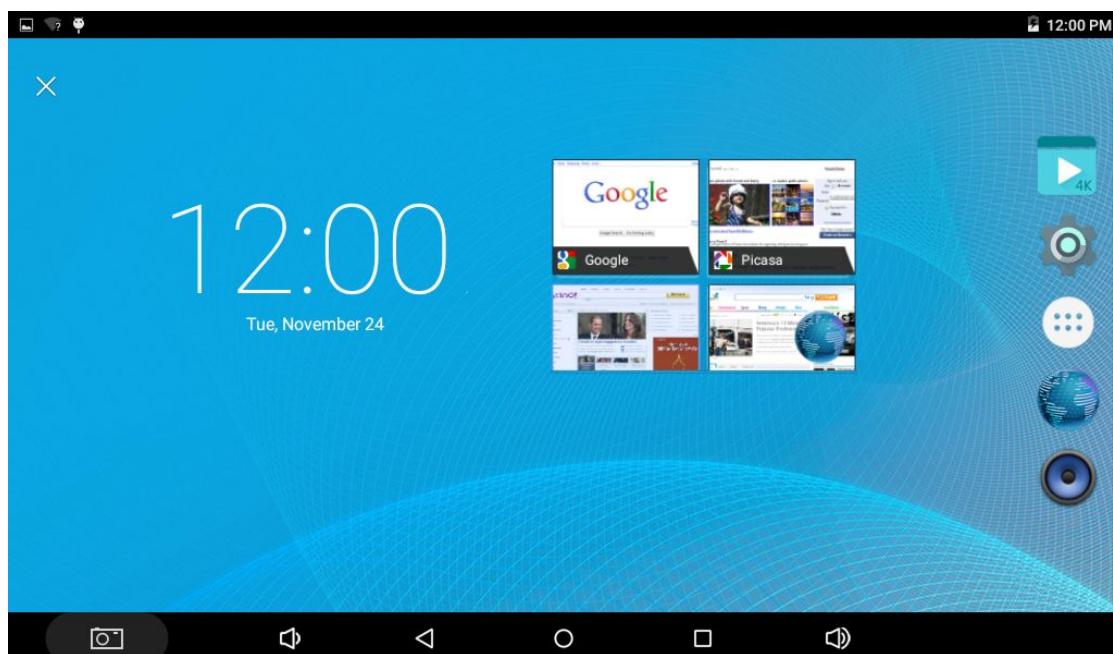


Picture 3.4

Remove the icons in desktop

1. Long press the icons need to be remove, then on the right above of the screen, it

will appear  icons.

2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

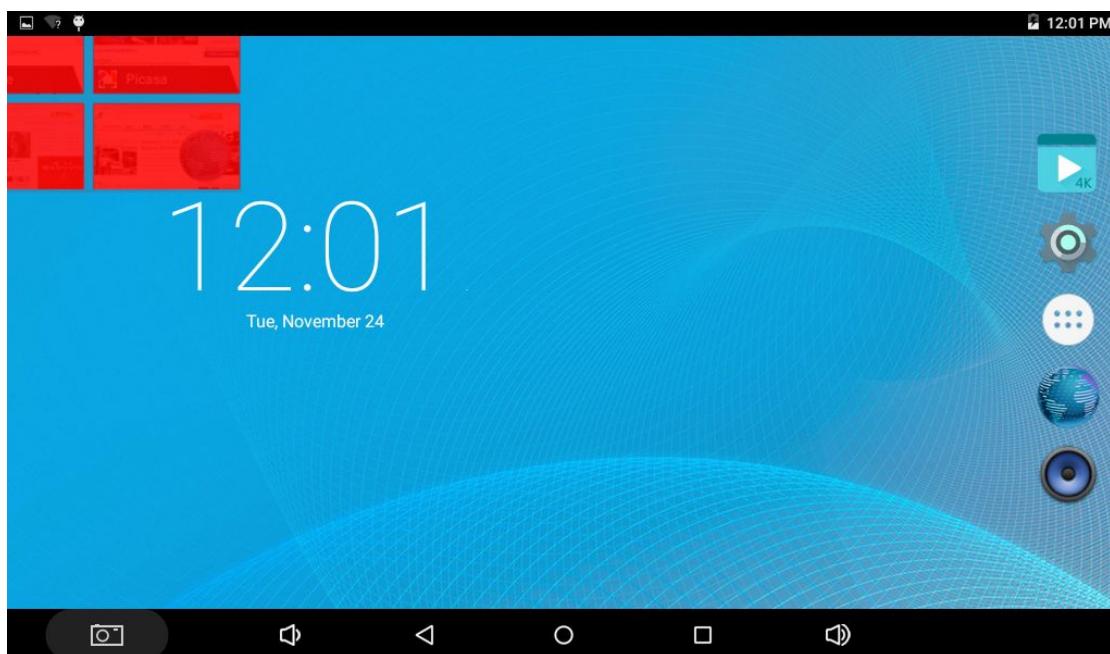

Picture 3.5

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to select WALLPAPERS.
2. Click the Pick image or default wallpaper to select the wallpaper.

3.6 Visit Application Procedures




Click  in the middle bottom of Picture 3.2, enter into main interface, choose the application procedure you want to visit.

3.7 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 3.7, then click “open USB storage configuration”.
4. Now the USB is connected successfully.

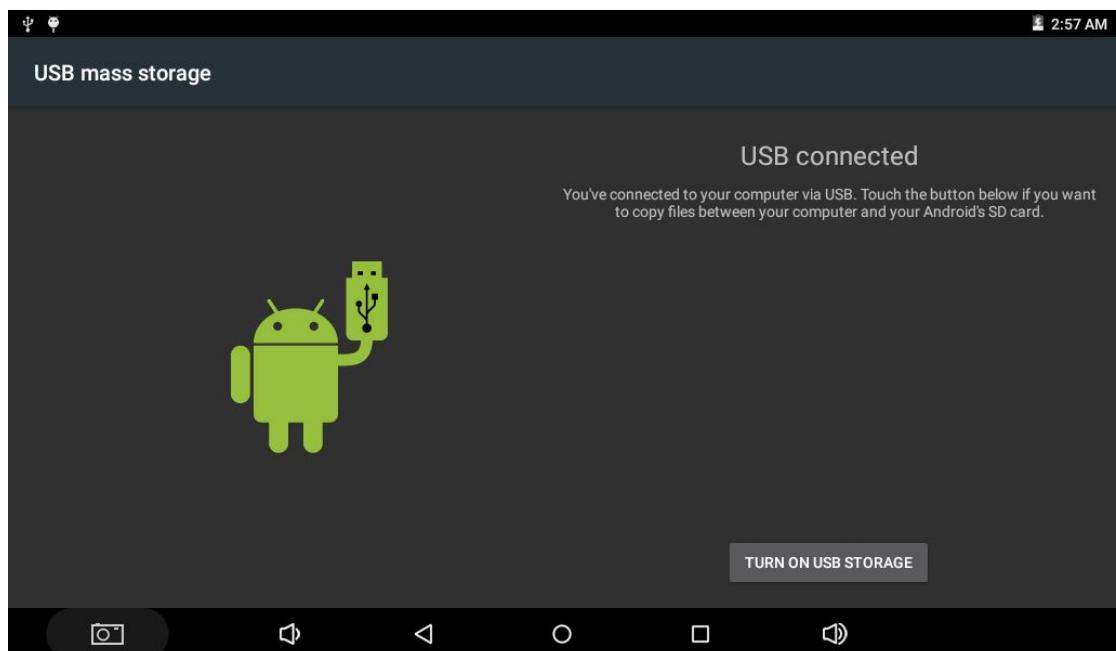

Picture 3.7

Copy the document into memory card

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

3.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen


keyboard. The keyboard contains below typing options:

Android keyboard

Choose the typing method you want

1. Click setting application in main menu interface.
2. Click Language & input.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

Use and switch of input method

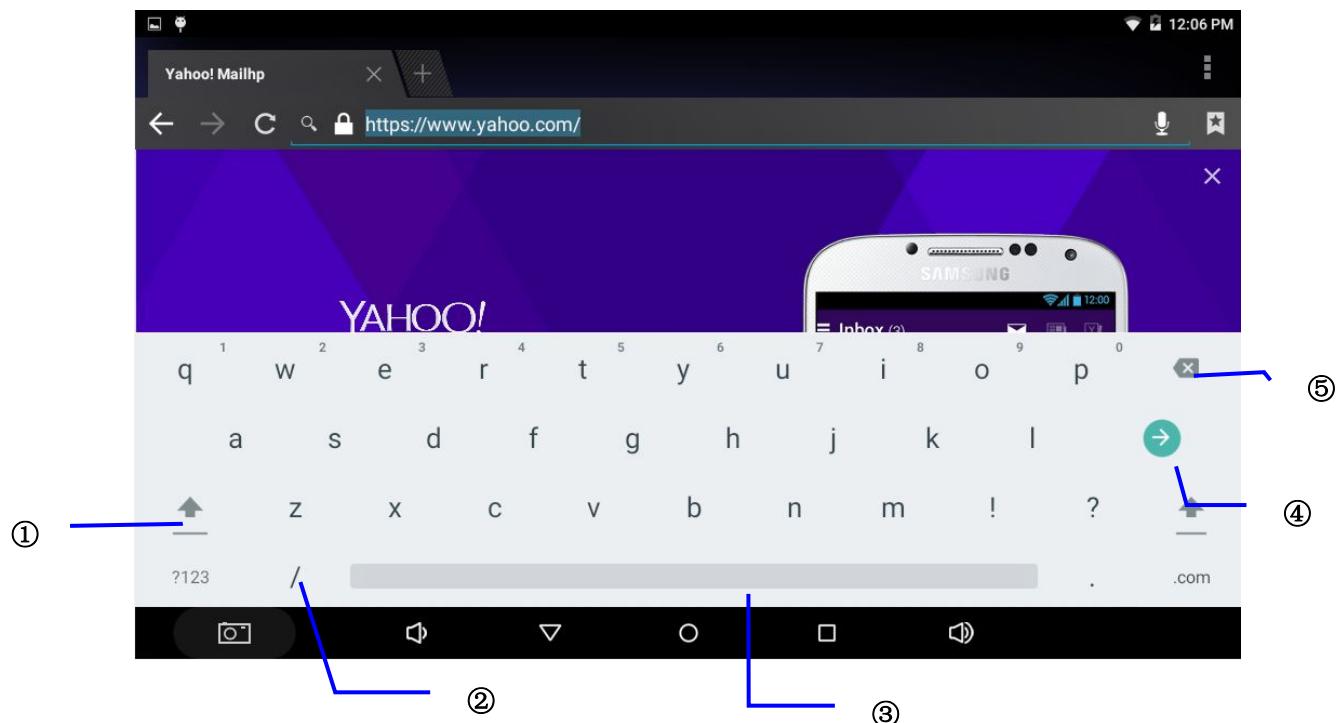


Picture 3.8

1	switch the capital and small letter
2	Long click and show input options
3	click to insert the space
4	Next\click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left on the cursor.

3.9 Operation Technique

Enter widgets interface

In home page, long press any blank space in main screen, it will popup a window to select WIDGETS. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

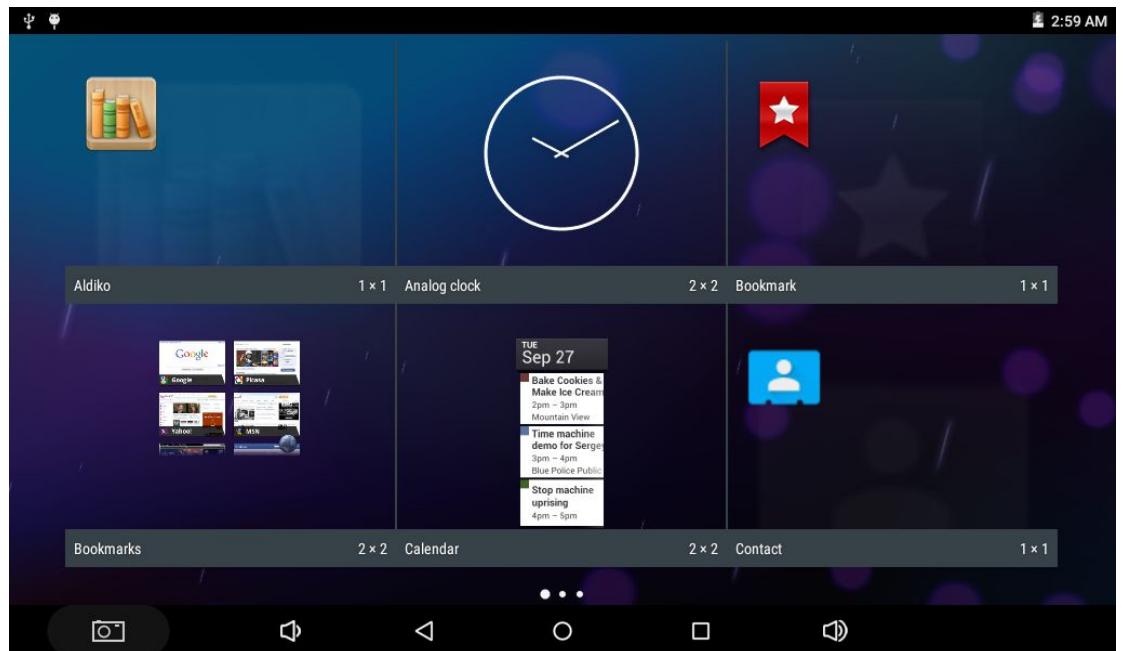

Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.


Remind: If the target position has no space, the widget won't be add in the main screen.

4 Basic Setting

4.1 Wireless and Internet

1. Connect Wi-Fi


- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click Wi-Fi, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.1
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click Connect.

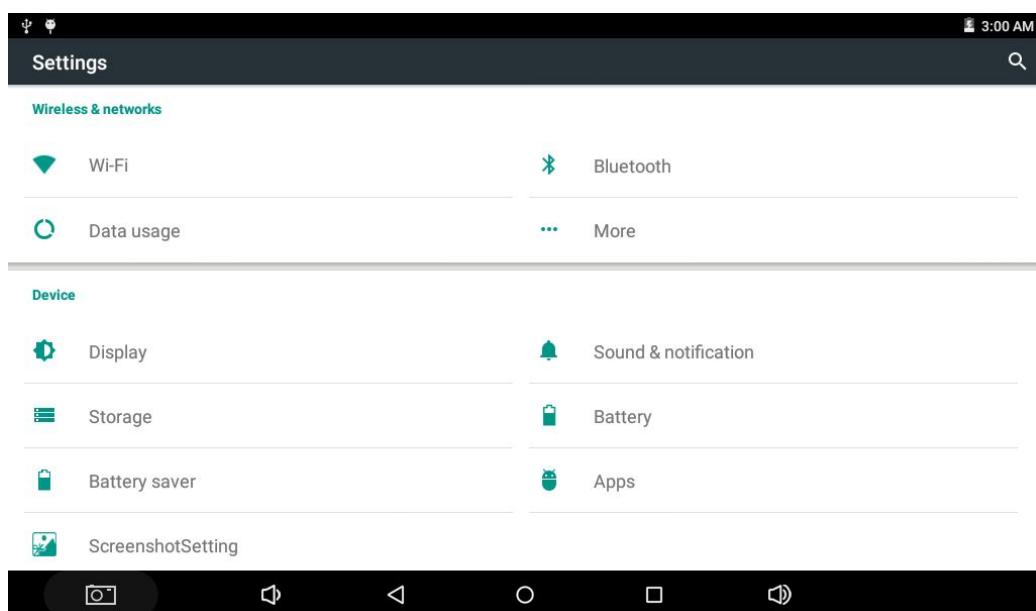


Picture 4.1

2. Add Network


- 1) Click menu icon in right top, then click “Add network” , as Picture 4.2

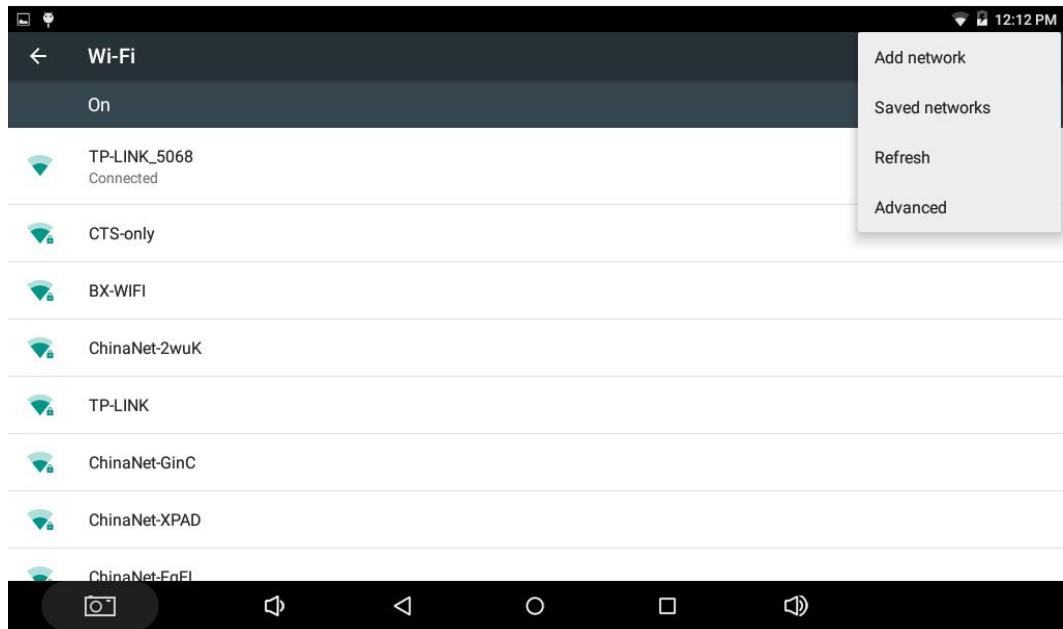

Picture 4.2

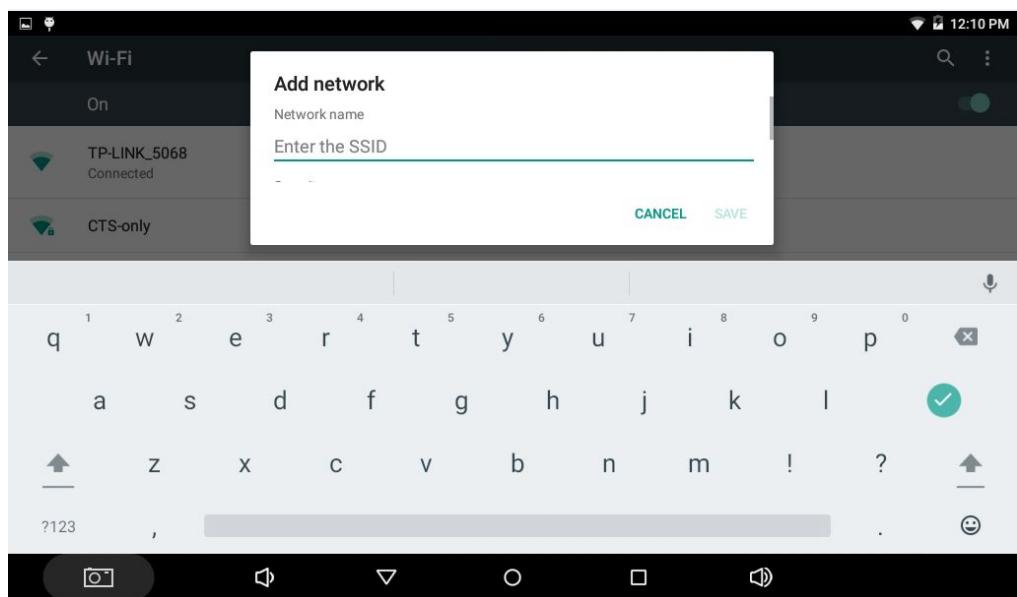

- 2) Input network SSID, the wireless network name, click Save.
- 3) Click user name already saved, click connect to use network, as Picture 4.3

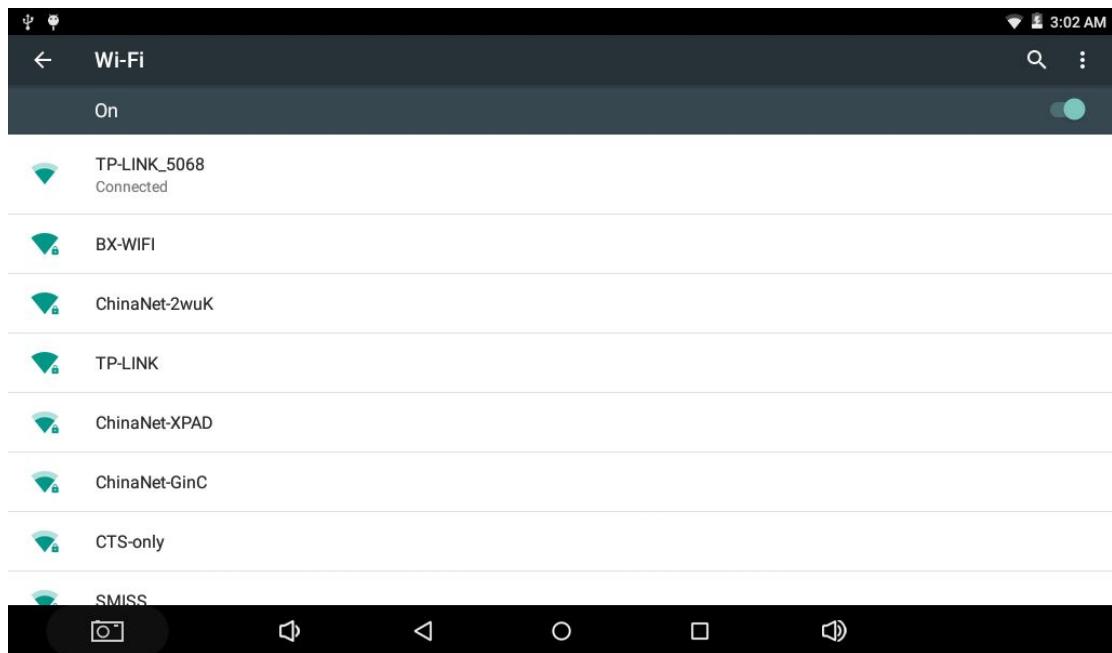


Picture 4.3

3. Network Notice

If you open Network Notice, when WIFI signal appears, the upper left will remind you available WIFI network.

4. Keep WI-FI on during sleep..


1. Click icon in right top of Picture 4.4, select **advanced**.
2. Click **Keep WI-FI on during sleep**, as Picture 4.4

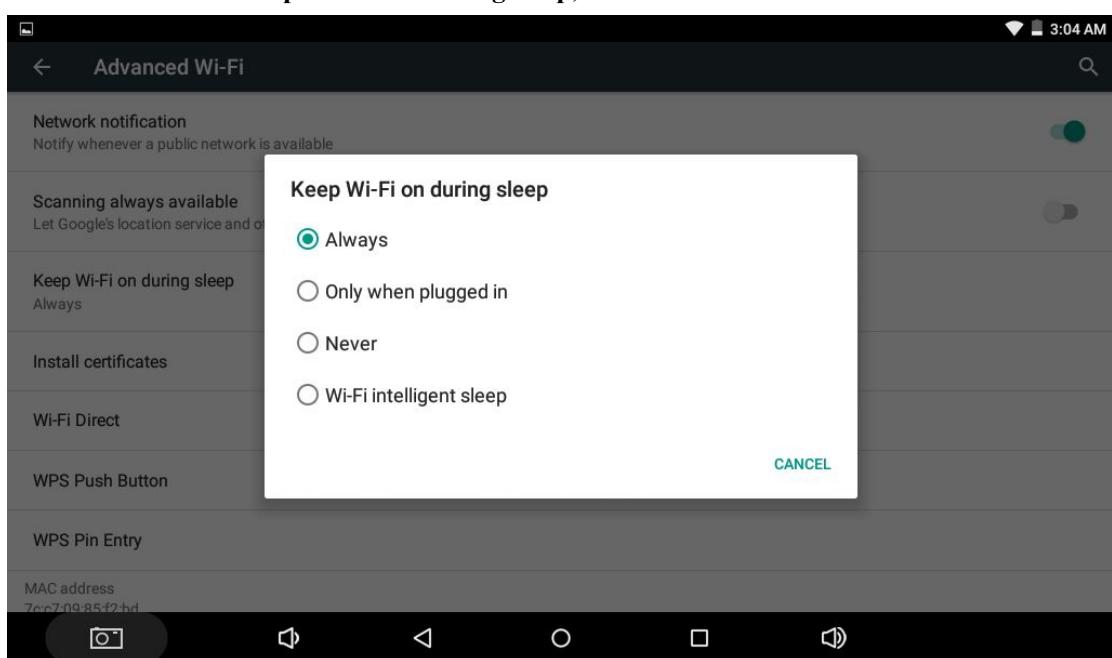

Picture 4.4

4.2 Data Usage

Check WIFI data usage, as Picture 4.9

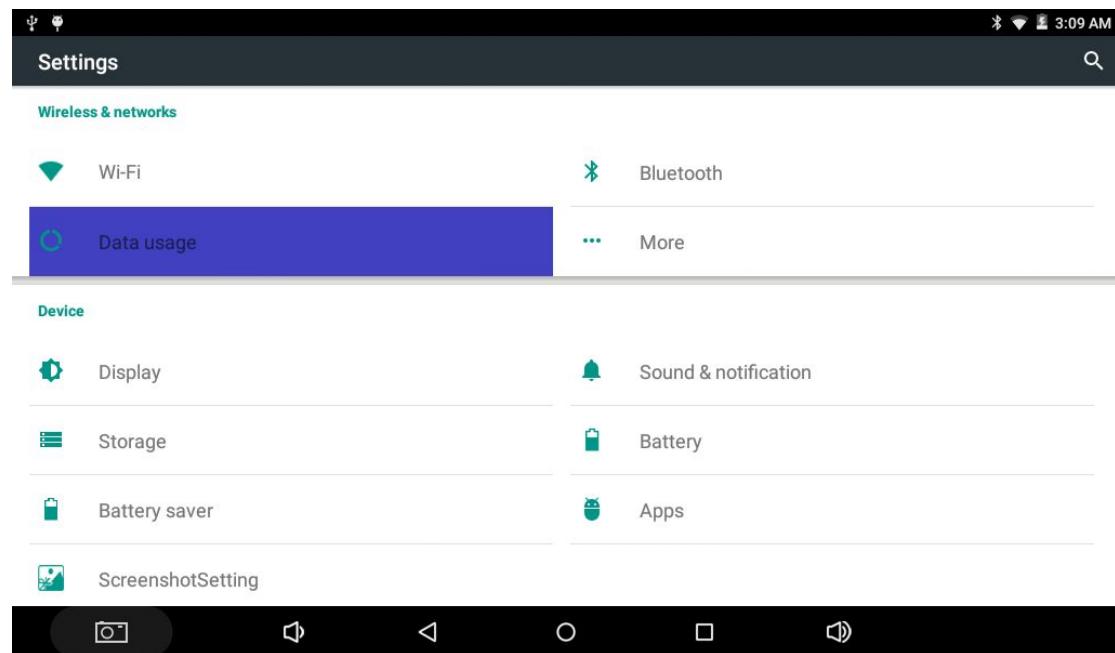

Picture 4.9


4.3 More

4.3-1 Airplane Mode

Airplane Mode can turn off WIFI quickly, when airplane mode is turned on, WIFI can't get any signal, then airplane mode is turned off, WIFI will recover to previous state.


4.3-2 VPN

Open VPN, click **add VPN network**, as Picture 4.10 Input **name** and server address, then save.

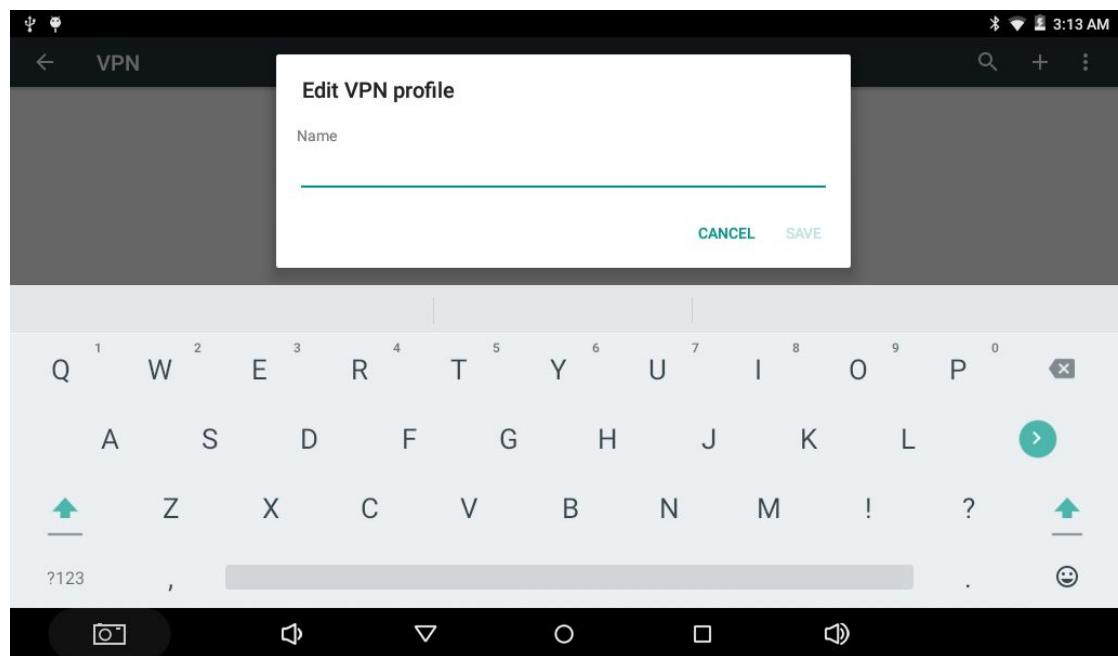


Picture 4.10

Click VPN, as Picture 4.11 input VPN user name and password, click connect.

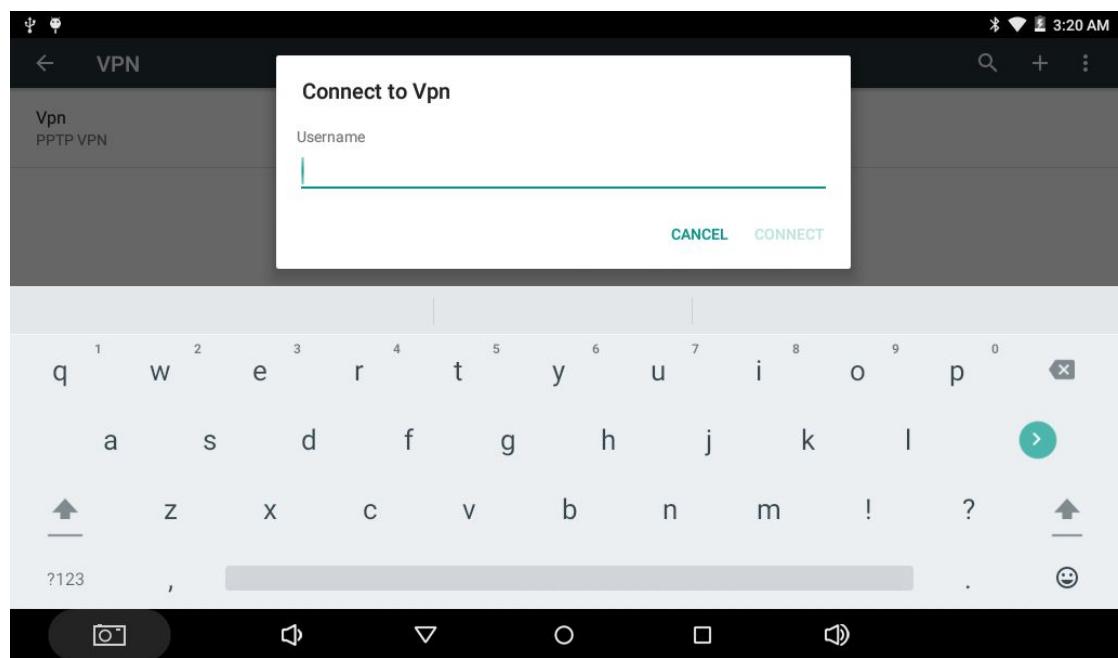


Picture 4.11

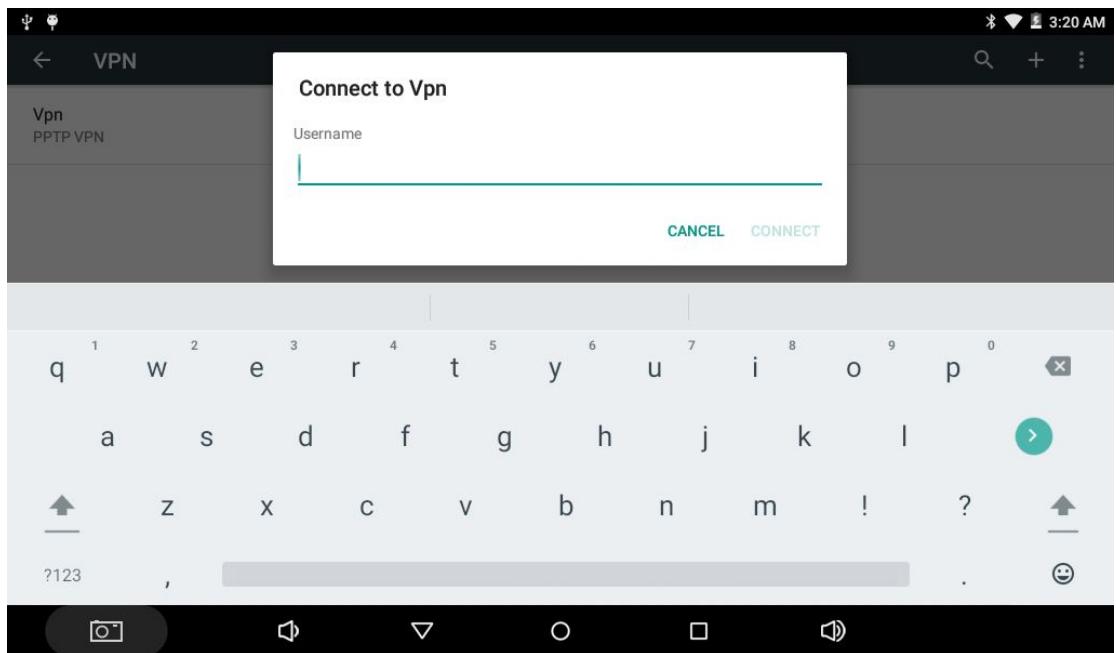

4.4 Display

4.4-1 Adjust the screen brightness


1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the progress bar to adjust the brightness volume. As Picture 4.12

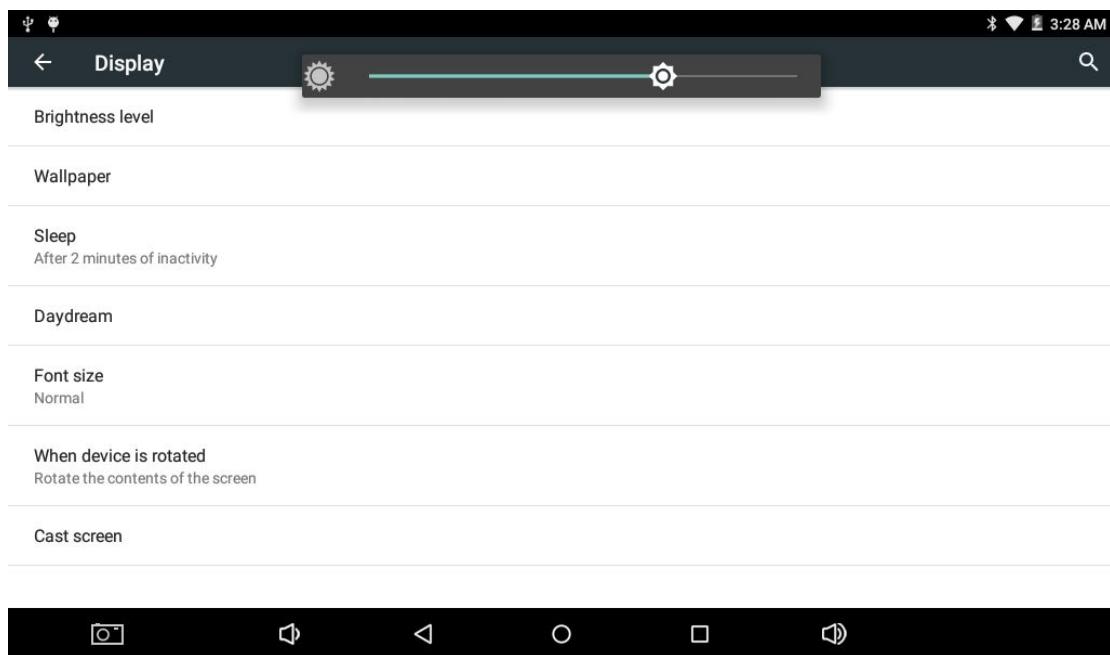

Picture 4.12

4.4-2Wallpapers


1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like---Gallery(user defined)---Live Wallpapers---Wallpapers, as **Picture 4.13**

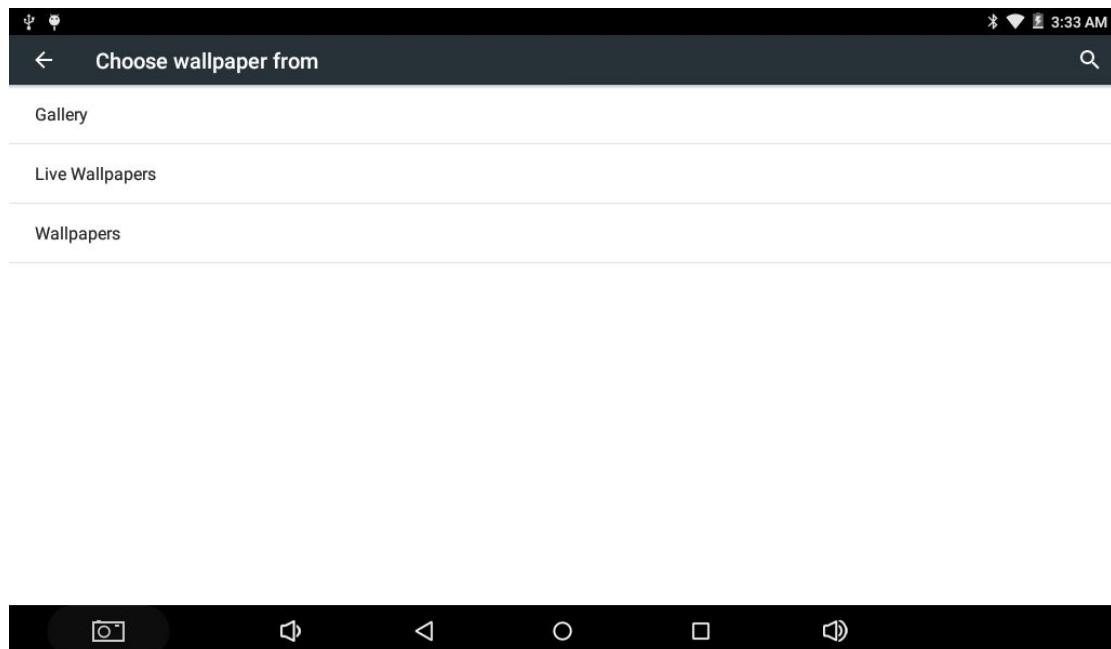

Picture 4.13

4.4-3 Sleep


1. Click setting application.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want, as **Picture 4.14**

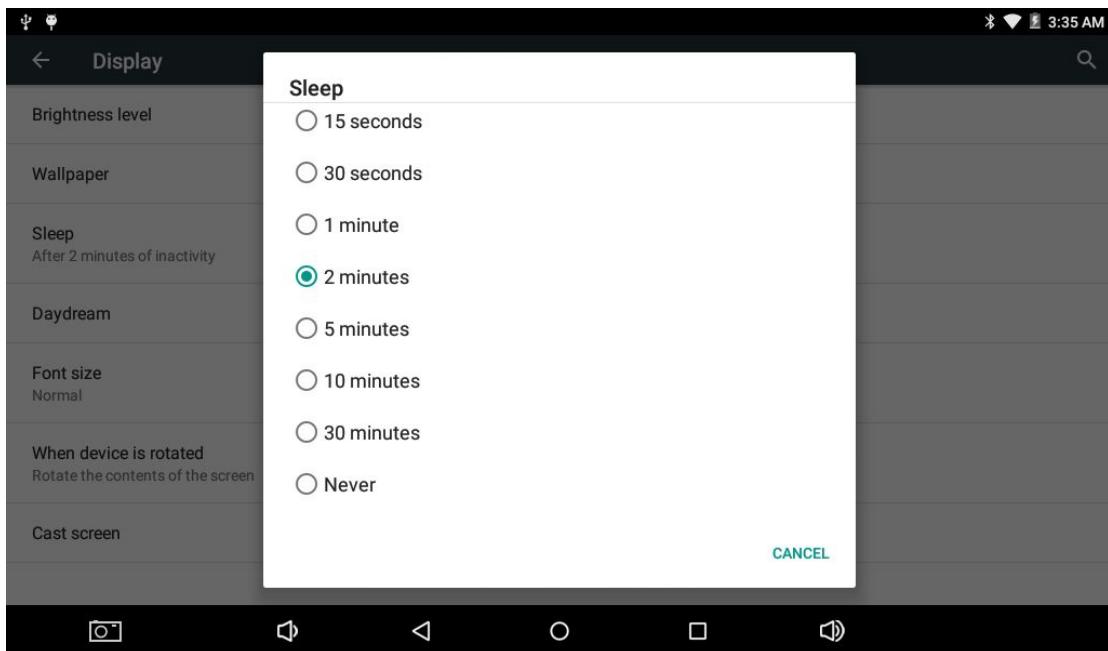

Picture 4.14

4.4-4 Font size

Click **font size** to adjust the font size, as **Picture 4.15**

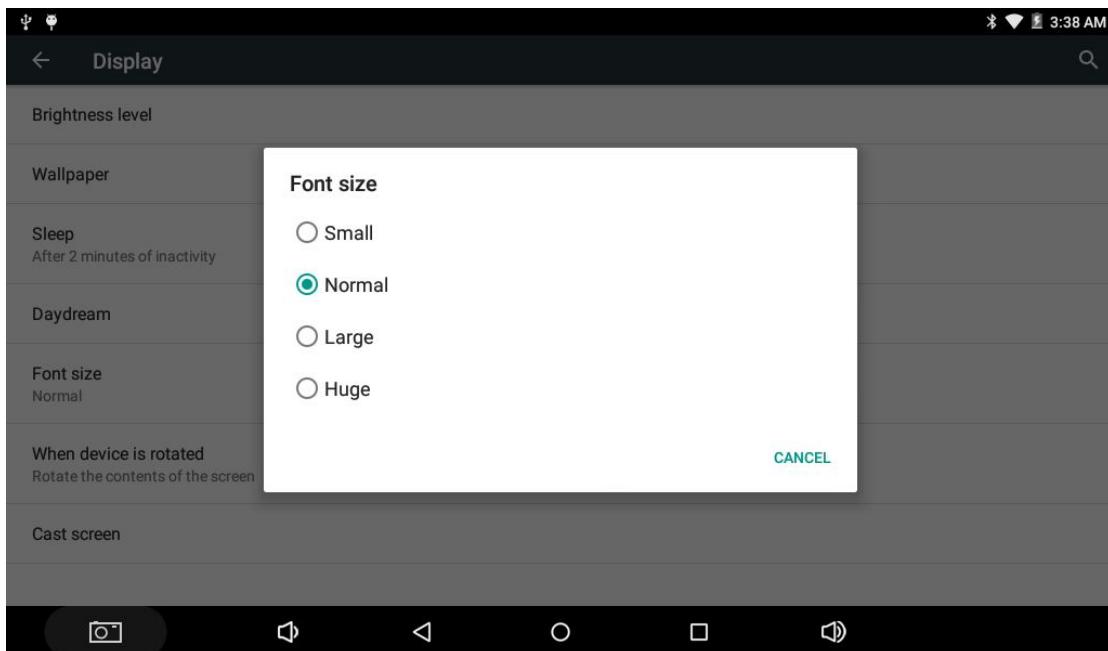

Picture 4.15

4.5 Storage

Open setting function, click memory, click preferred install location, you can choose install new application to choose preferred install location.


Check SD card and MID storage space.

1. Enter into setting application.
2. Click storage, check storage space.

1. Internal storage

1. (1) System storage


System storage is the space MID leave for system file, as Picture 4.16. it can't be viewed.

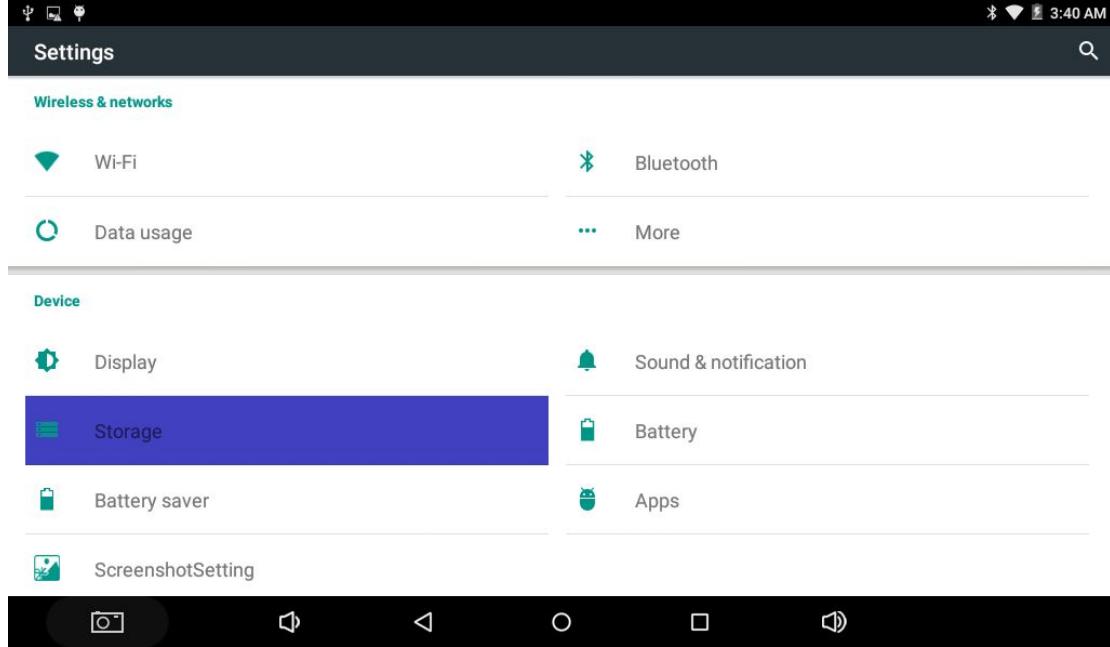

Picture 4.16

(2) Internal storage


Internal storage is MID local NAND storage, as Picture 4.17, if you need to check the storage content, you can check it in main menu.

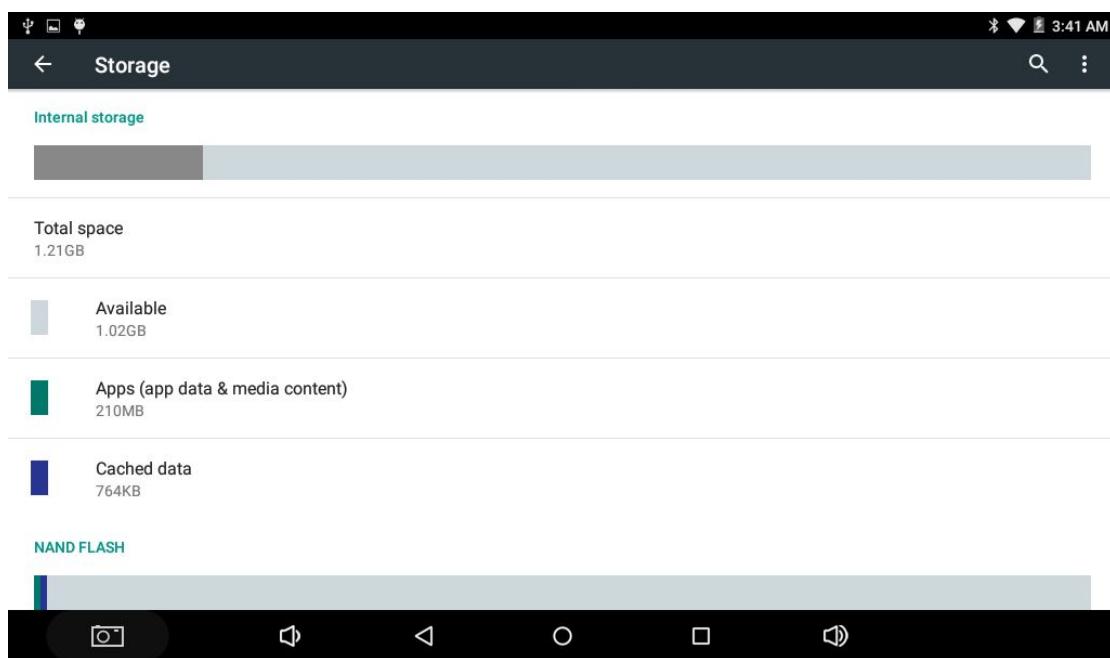

Picture 4.17

2. SD card

You can check storage space, SD card available space, unmount SD card and erase SD card, as Picture 4.18

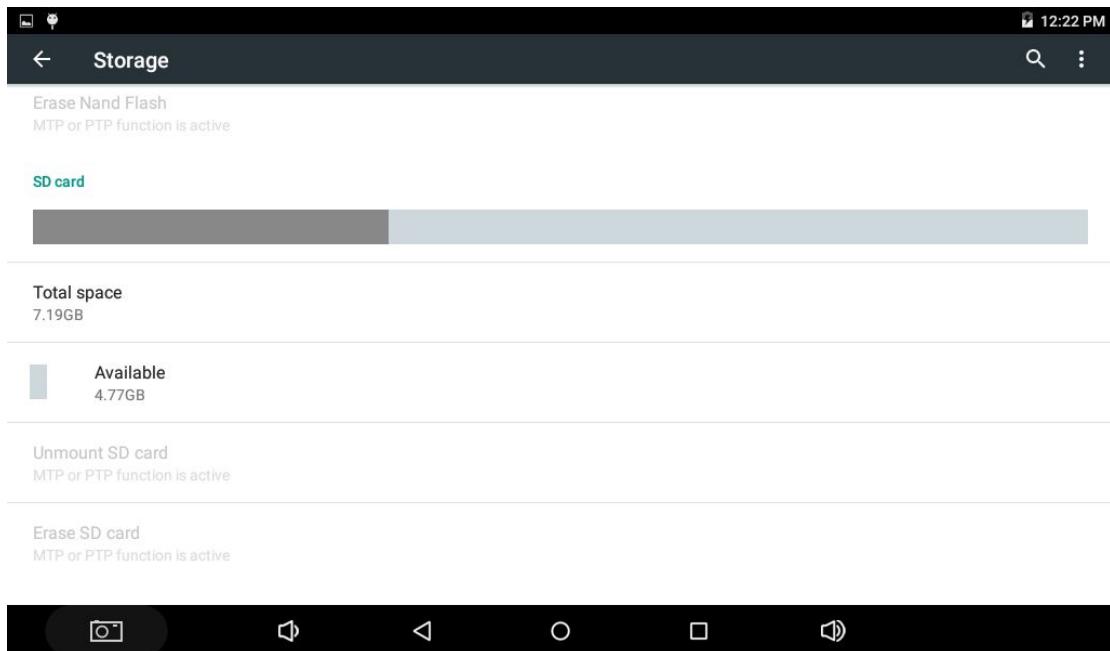

Picture 4.18


Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.
4. Now you can remove SD card safely.

[Note: Removing SD card safely can protect SD card and increase its lifetime.](#)

4.6 Battery


Click setting function, select battery, you can view the battery situation, as Picture 4.19

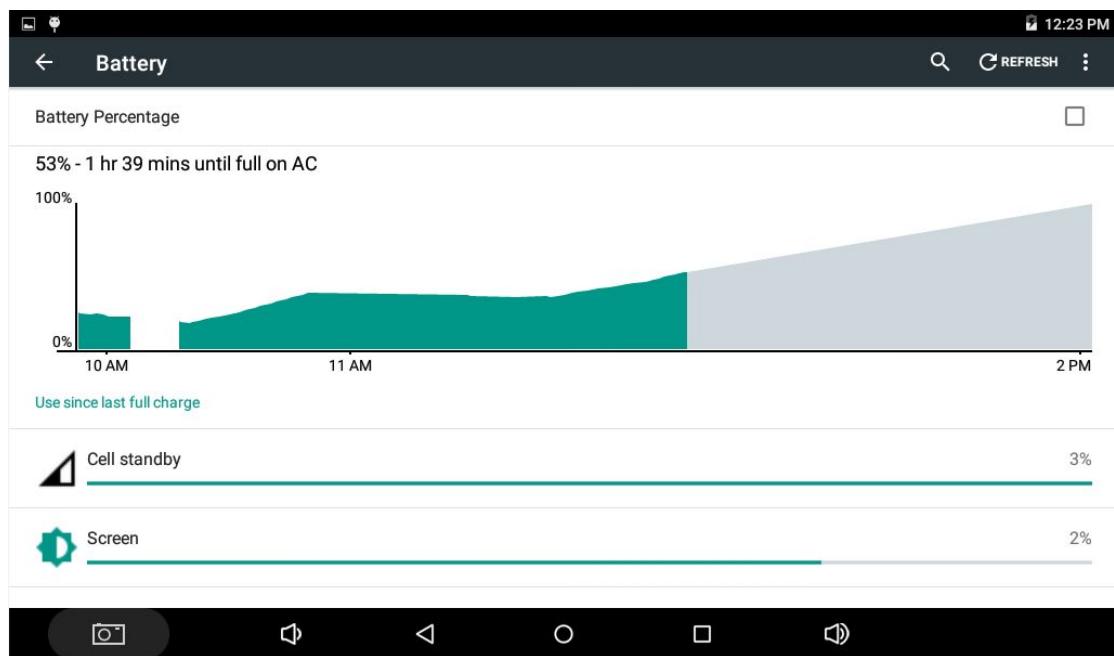

Picture 4.19


4.7 Application program

1. Click setting application in Apps.
2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (As Picture 4.20)

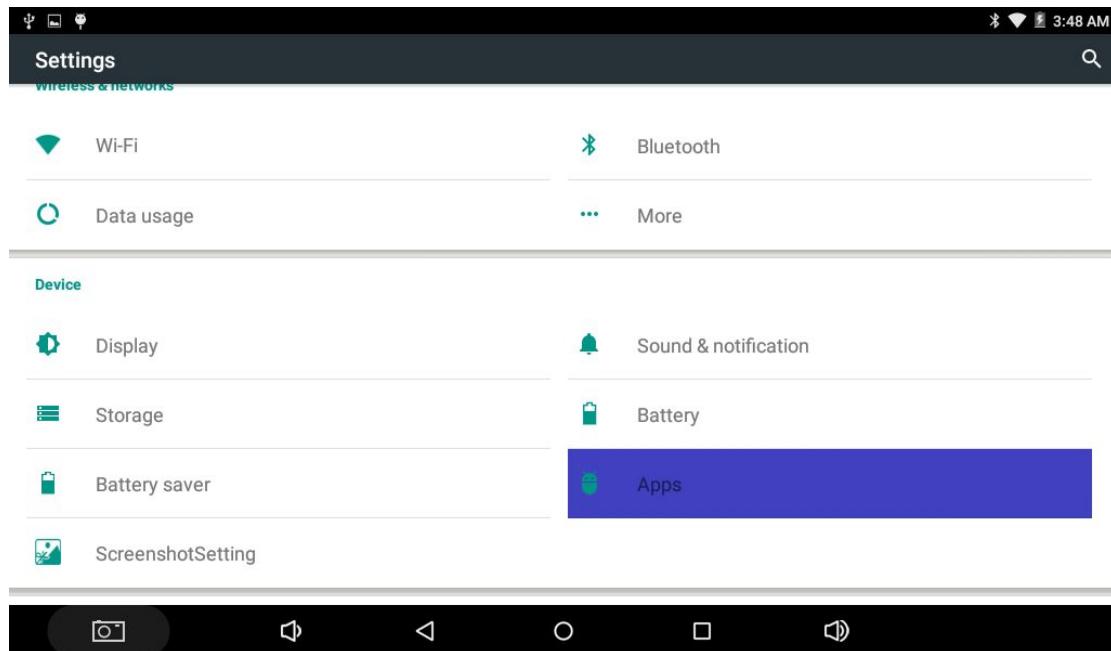


Picture 4.20

3. Download apps, as Picture 4.21

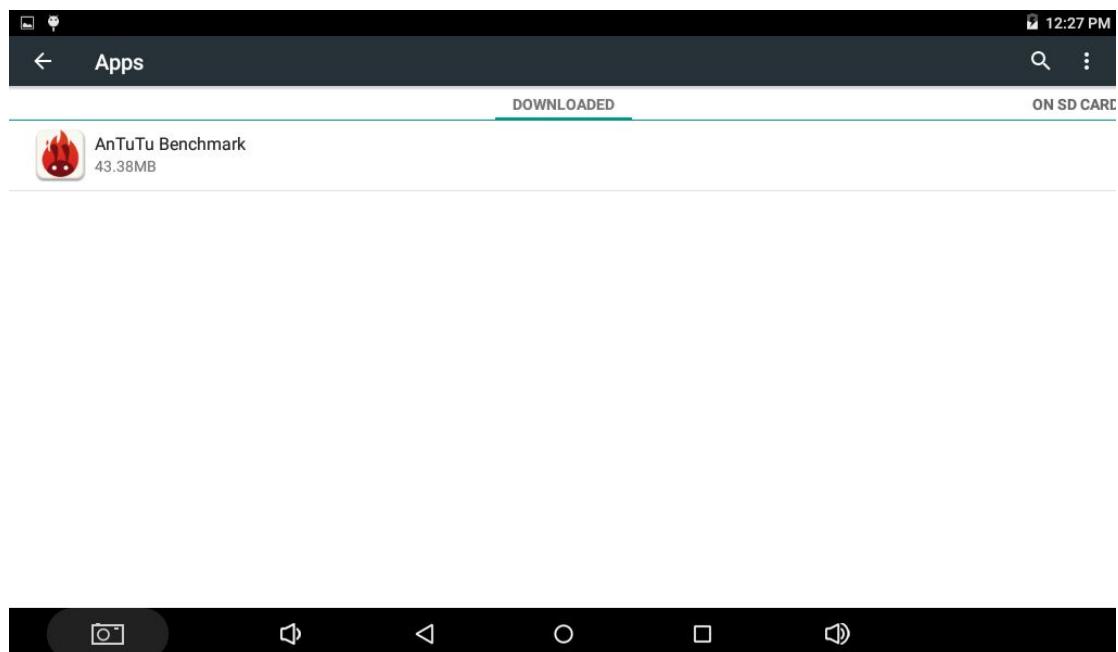

Picture 4.21


4. View the working device, used space and available space, as Picture 4.22

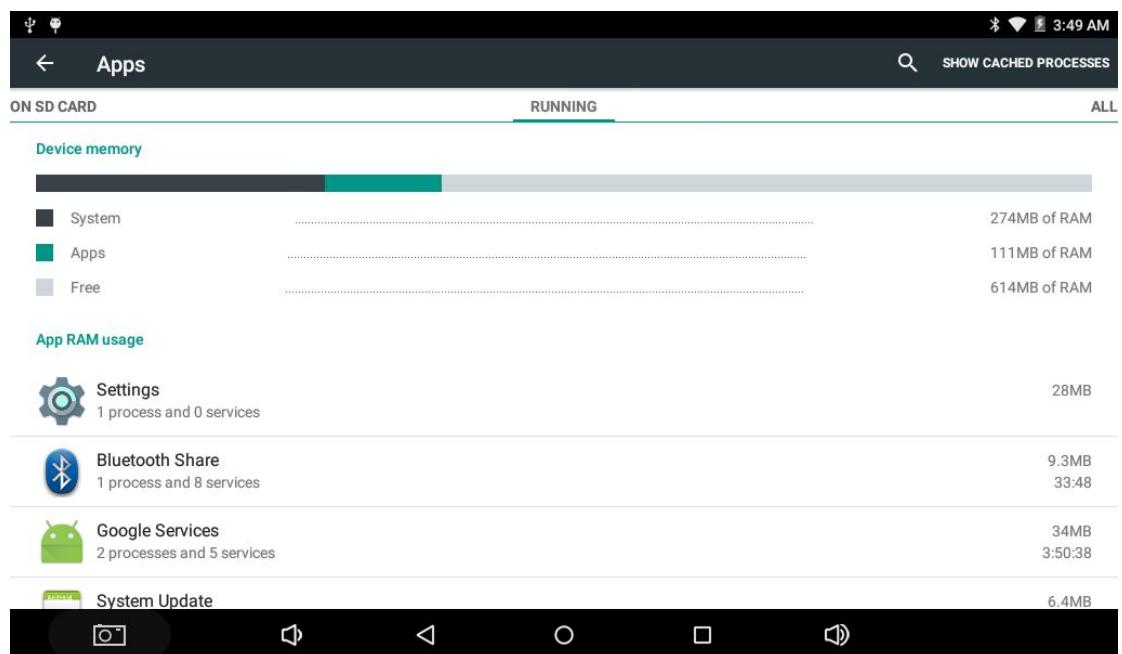

Picture 4.22

4.8 Location service

Click **setting**, select **Location**, as Picture 4.25

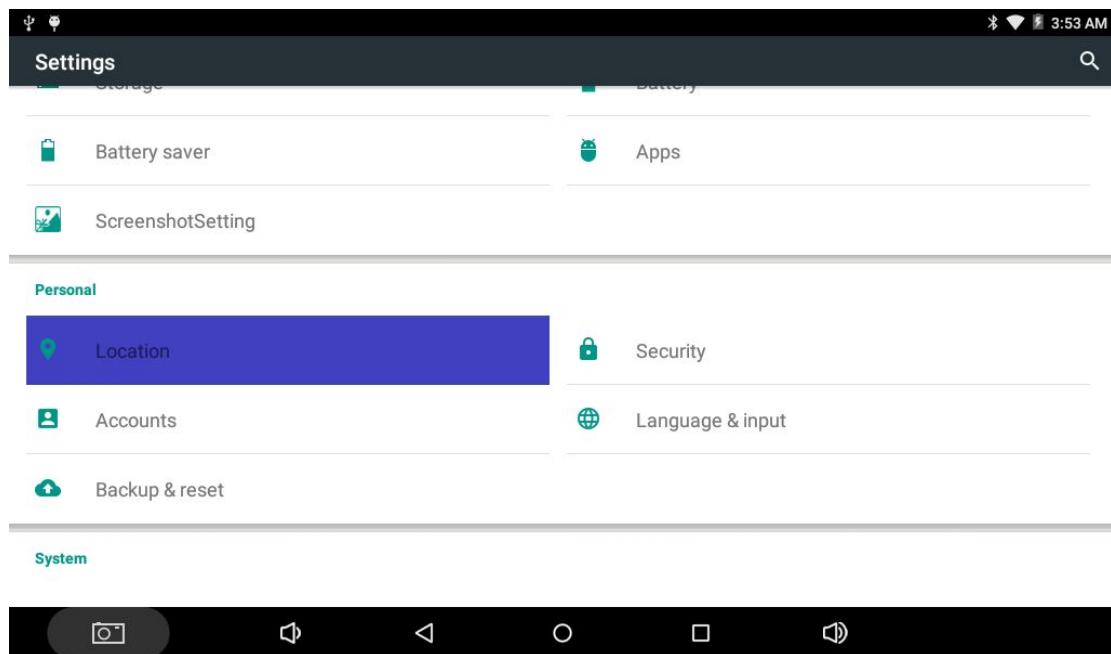

Picture 4.25

4.9 Security

Set locked screen


Lock the touch screen by unlock icon, face unlock, voice unlock, pin, password to protect your MID.

[Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked](#)

Set unlocked pattern

1. Click setting application in main interface.
2. Click **Security**
3. Click **locked the screen**.
4. Choose **pattern** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. Move your finger from the screen when finish. The system will record your new unlock pattern.

7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

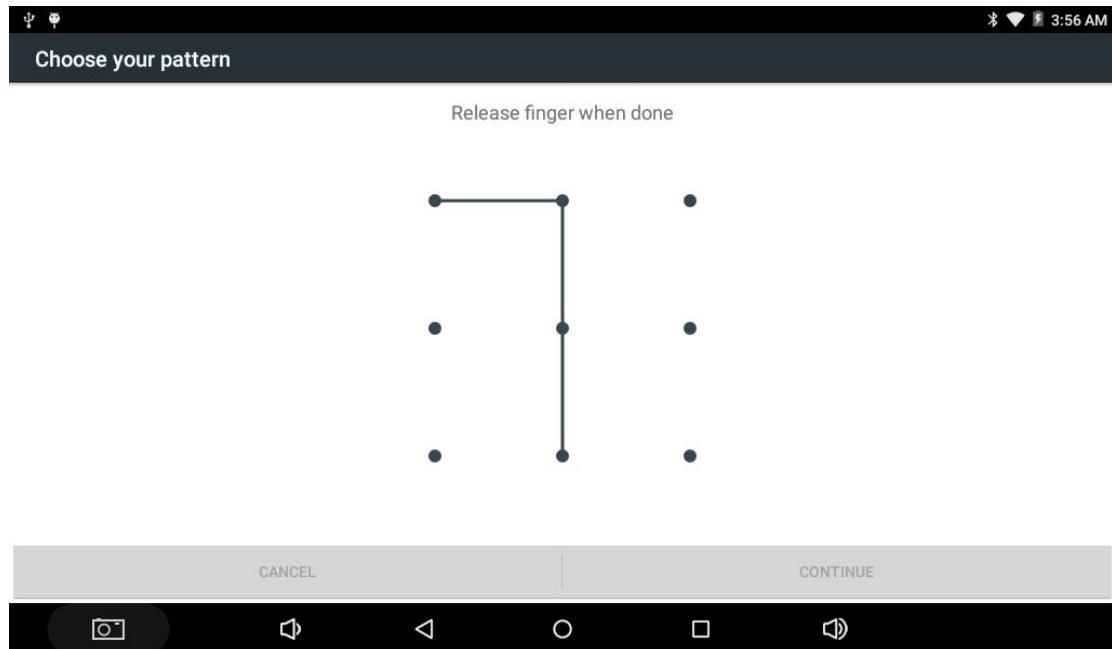

Picture 4.26

Set unlock PIN code


1. Click **setting** application in main interface.
2. Click **Security**.
3. Click **Screen locked**.
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

Set unlock password

1. Click **setting application** in main interface.
2. Click **Security**.
3. Click screen locked.
4. Set password in text seting area.
5. Set new password (letters and numbers) and then click **continue**.
6. Enter the password again and the click **confirm**.

Unknown sources

1. In main interface, click setting.
2. Click **Security**
3. Click unknown source, as Picture 4.27

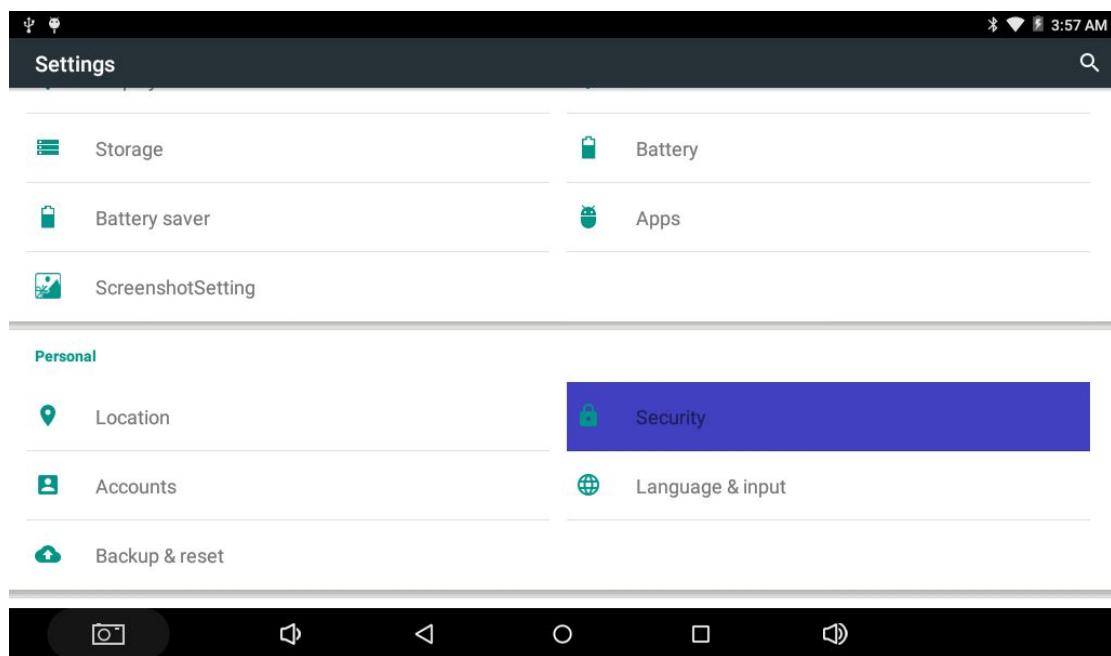


Picture 4.27

Note: Manual installing APK files needs to turn on unknown source.

4.10 Language and Input Method

Click setting, select language and input method, choose language to switch language, as Picture 4.28

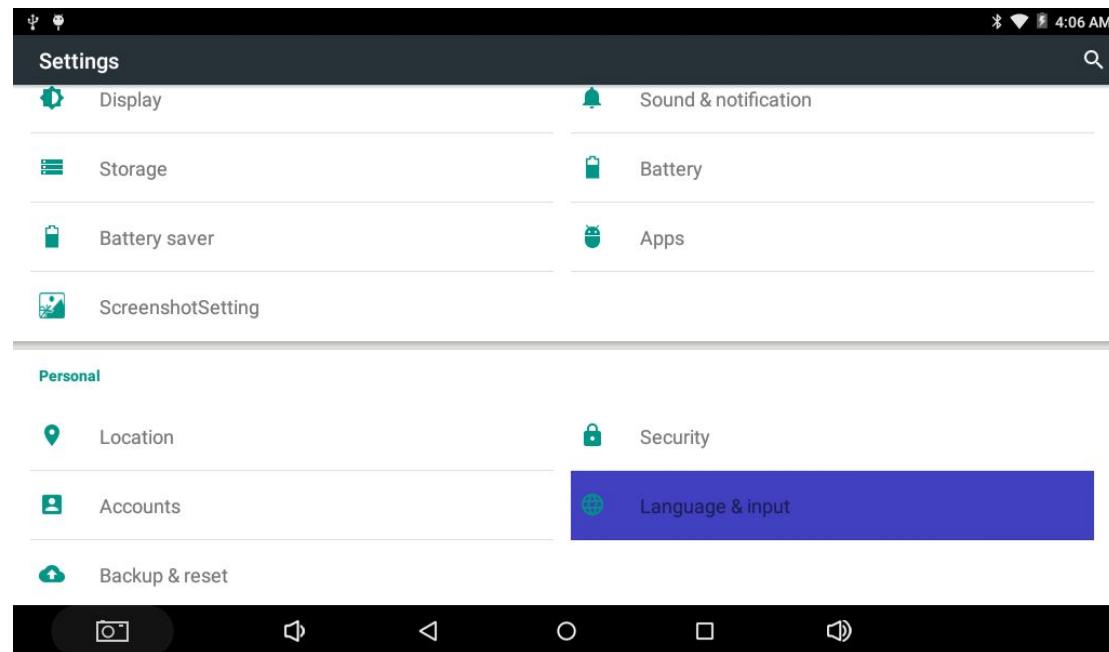


Picture 4.28

Click setting, choose **language and input**, choose **Android keyboard setting**, click input language, as Picture 4.29




Picture 4.29

Choose the language you want to change in the language list, as Picture 4.30

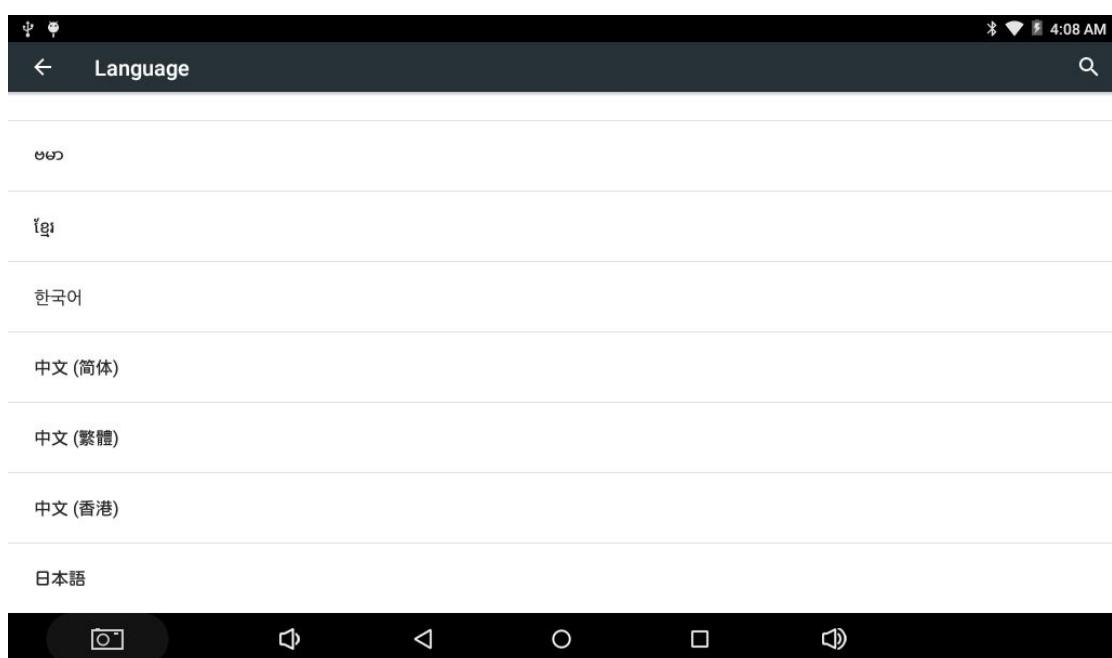

Picture 4.30

Return to **language and input method**, click **default**, as Picture 4.31, select input method you want to use

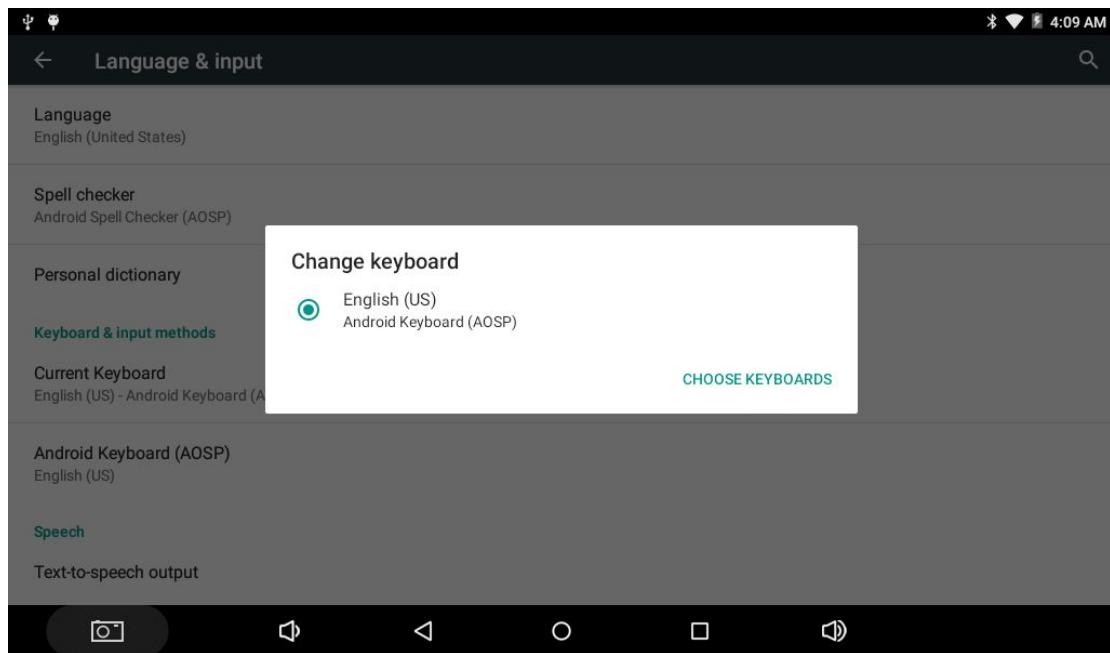


Picture 4.31

4.11 Backup and Reset

Connect WIFI and login your google account, choose **backup my data**, system will backup your data into google server.

If you need to recovery factory reset, please click **Factory data reset**, as Picture 4.32, if you need to formulate NAND, please click **DRM reset**.

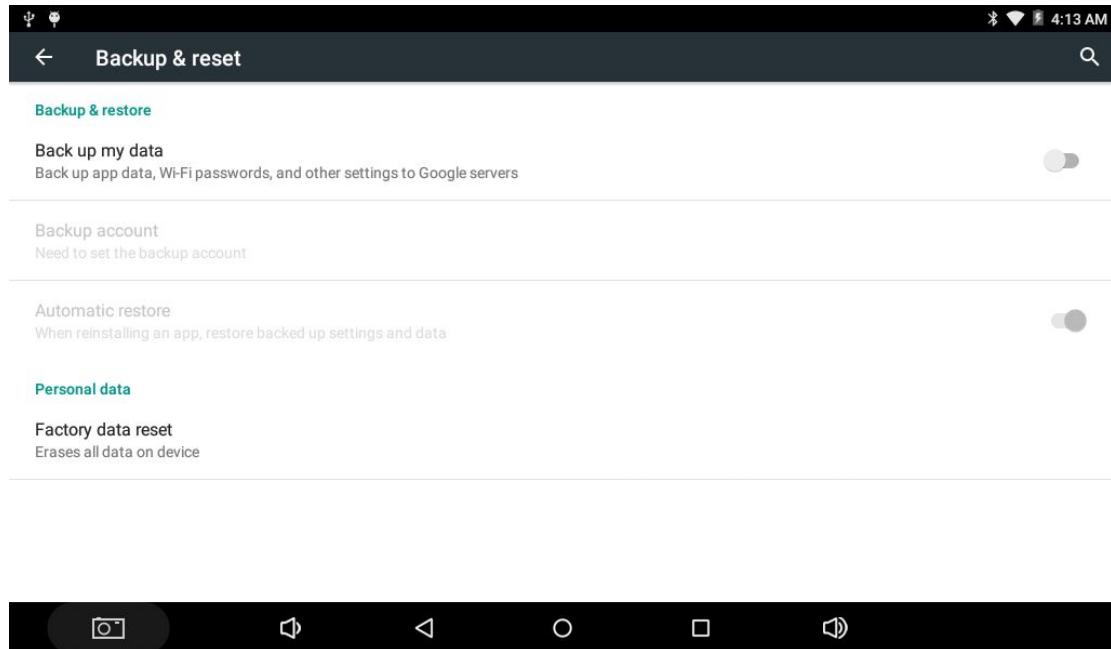


Picture 4.32

4.12 Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

Manual set date, time and zone

1. Click Setting application procedure.
2. Slide down the screen, then click **date and time**.
3. Turn off “auto setting of date and time”.
4. Turn off “auto setting zone”.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click **Date setting**, then click upper or down button to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you see 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to show on MID.

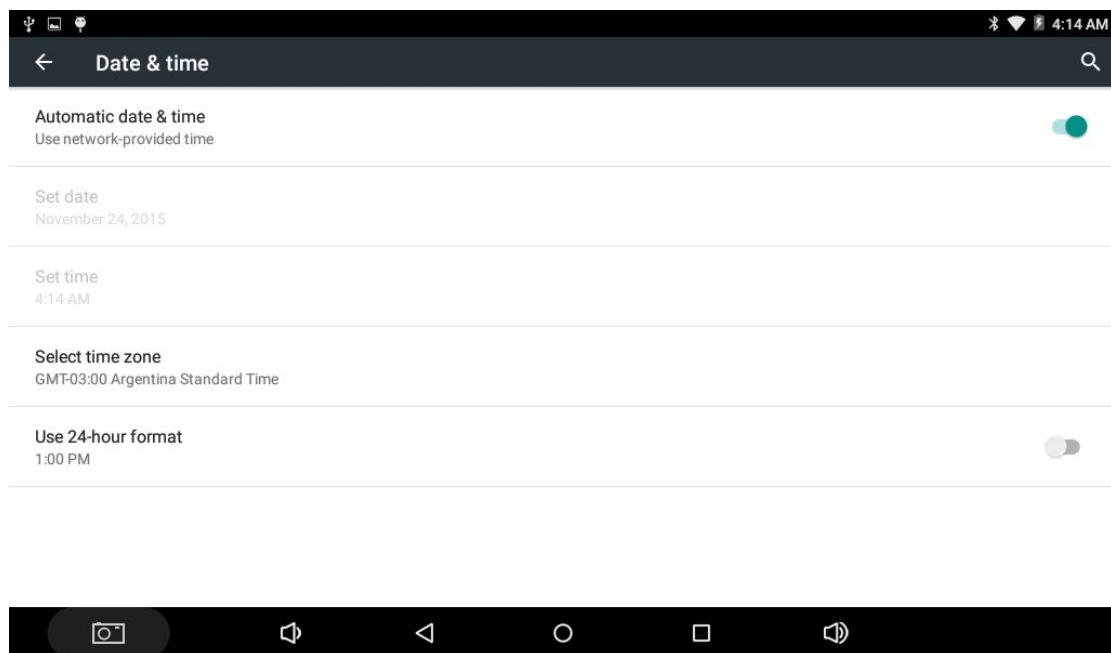

Picture 4.33

Note: If you use the time internet provided, you will not able to set the date, time and time zone.


4.13 Accessibility

1. Large text

Click it to make system font large size

2. Touch and hold delay

Click touch and hold delay to increase time, as Picture 4.34

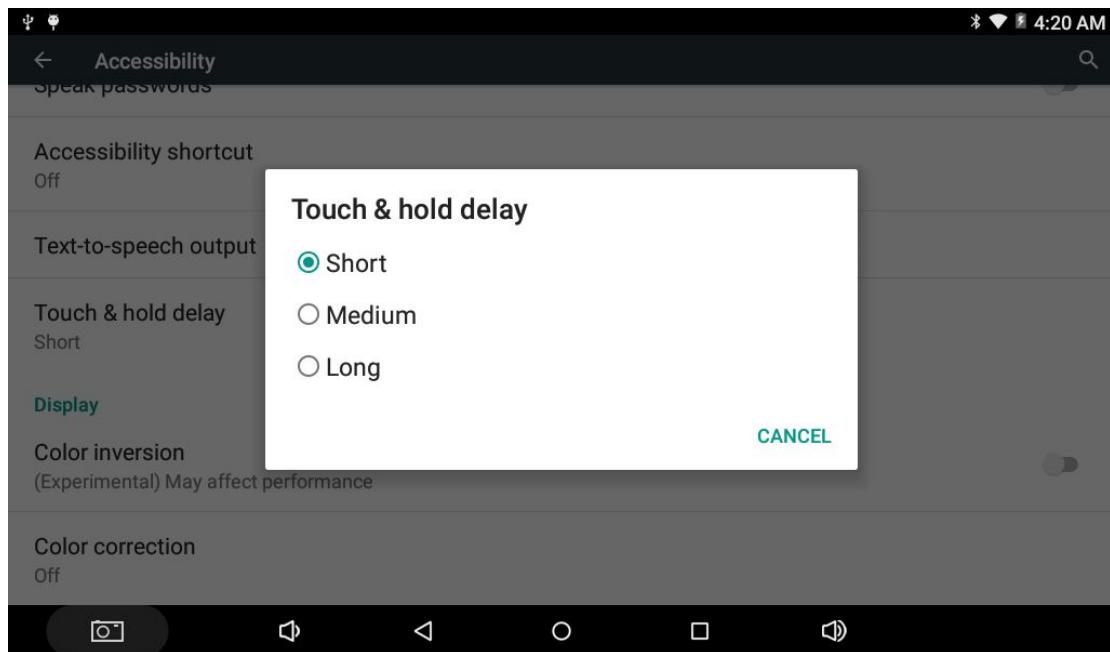

Picture 4.34

4.14 Developer options

4.14-1 USB debugging

After opening USB debugging, you can use some software to read MID software, but when USB debugging is turned on, USB storage needs to manual adjust.

4.14-2 Desktop backup password

Click **Desktop backup password**, you can set and change password.

4.14-3 Stay awake

If you open keep awaken state, it will never auto sleep when your MID is charging.

4.14-4 Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

4.14-5 Show touches

If you open display touch screen operation, it will display touch operation on the screen. It is


suggested to use with same direction as pointer location.

4.14-6 Show layout bounds/Show GPU view updatas>Show surface updatas

If you open these functions, The system will reset, it will display related area when the area is refreshing.

4.14-7 Show CPU usage

After open CUP usage, in the right top of MID will show CPU usage situation as Picture 4.35

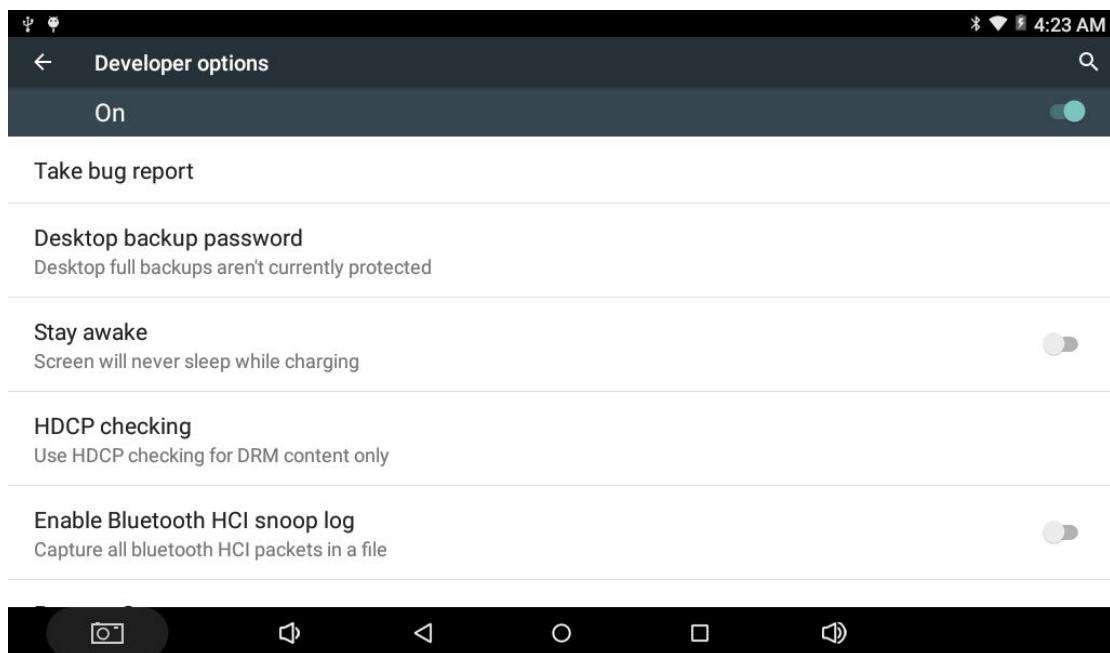

Picture 4.35

4.15 About Tablet

Check MID state


1. Check **Setting** application.
2. Click **about tablet**, check **status**, **model number**, **Android version** and so on.
3. Click **status**, check **battery status**, **battery level**, **IP address** and so on.

5 Multi-Media


5.1 Music



Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play, as Picture 5.1:

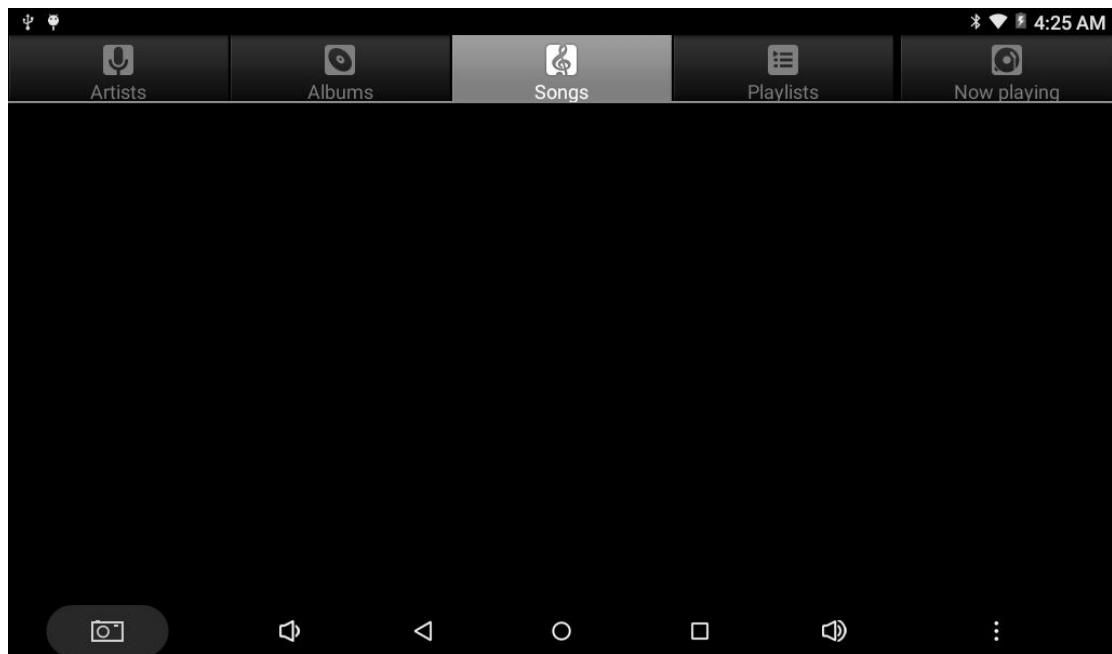


Picture 5.1

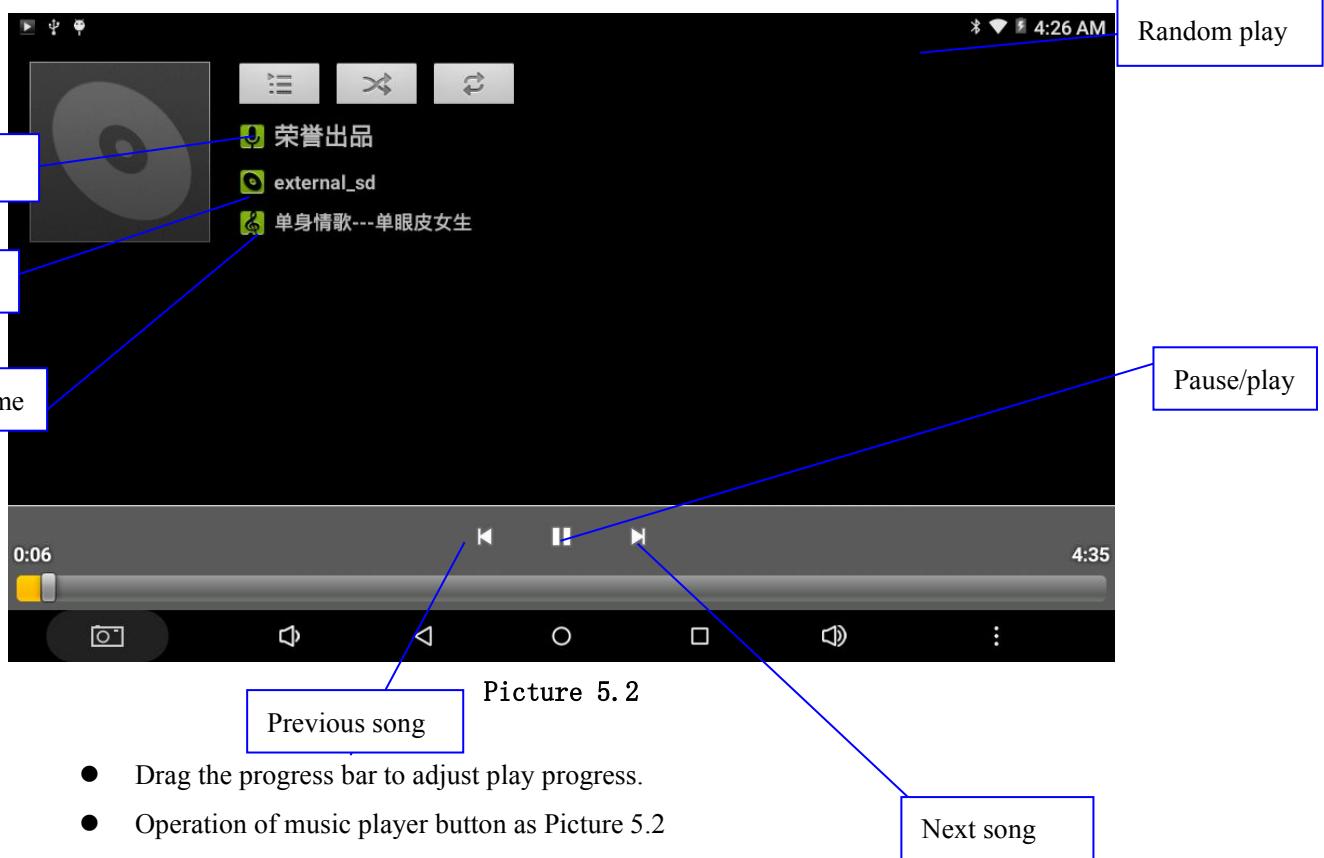

5.2 Video

- Enter video player: choose application in main menu, choose the video you want to play.
- Operation of video player button as Picture 5.3

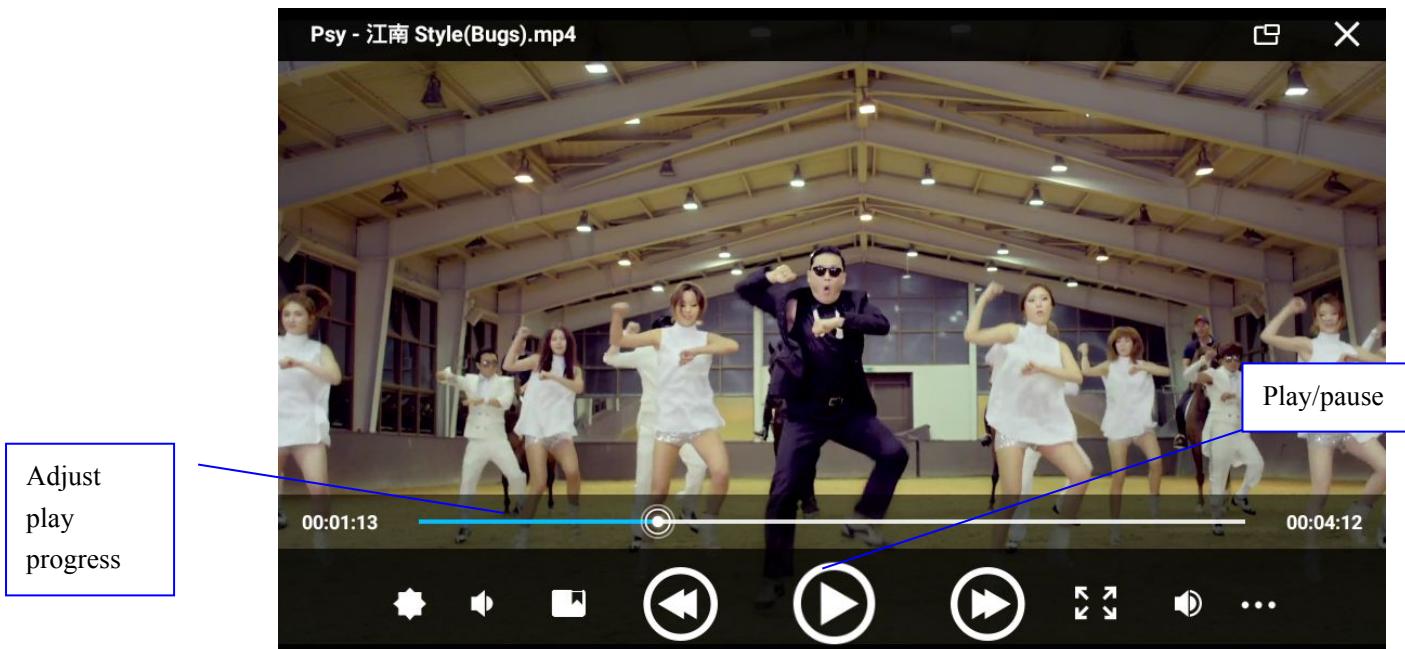

5.3 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

● **Slide Show**

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click **slide show**, it will auto loop play


● **Crop**


1. Click **menu** key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.

● **Edit**


1. Click **menu** key, display the menu selection.
2. Click **edit**.
3. Adjust the brightness, style, color, antialias setting in selection.
4. Click **save**.
5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

5.4 Camera

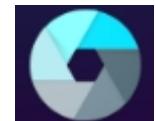


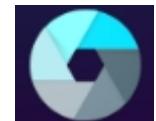In the main interface or desktop, click camera application procedure , enter into camera

- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.4

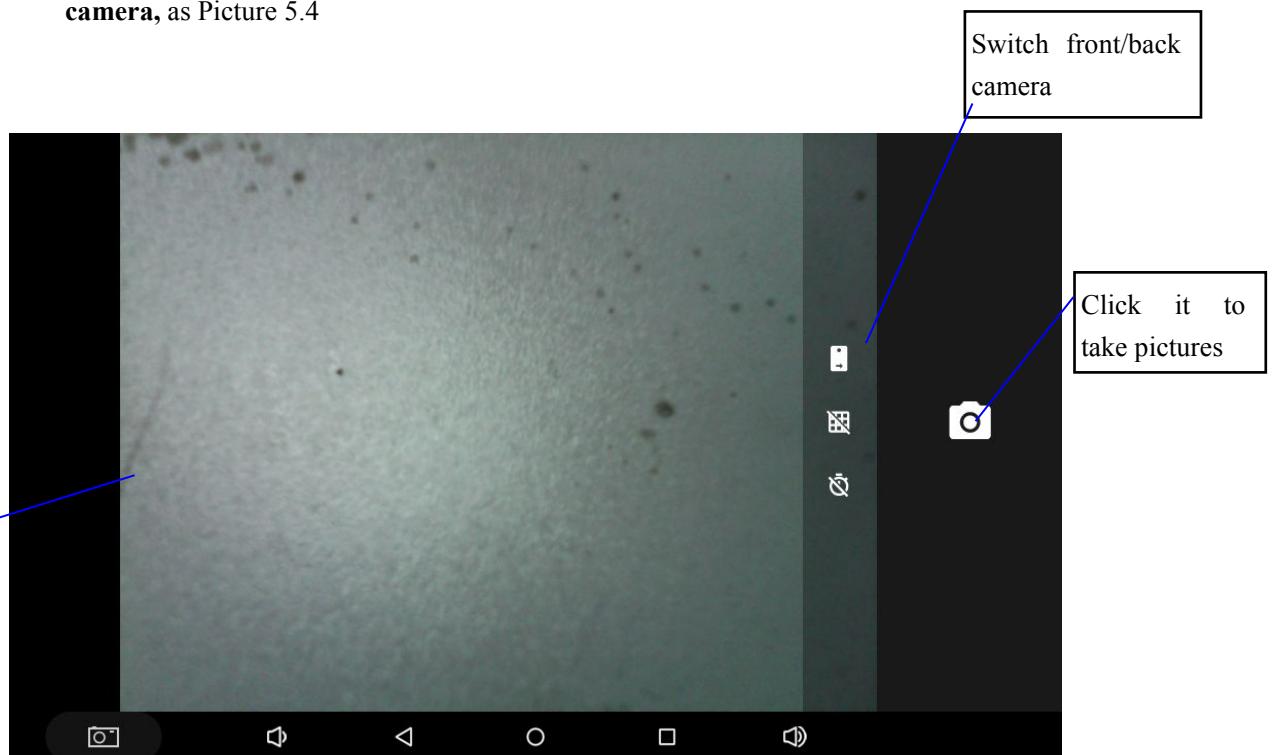


Picture 5.4

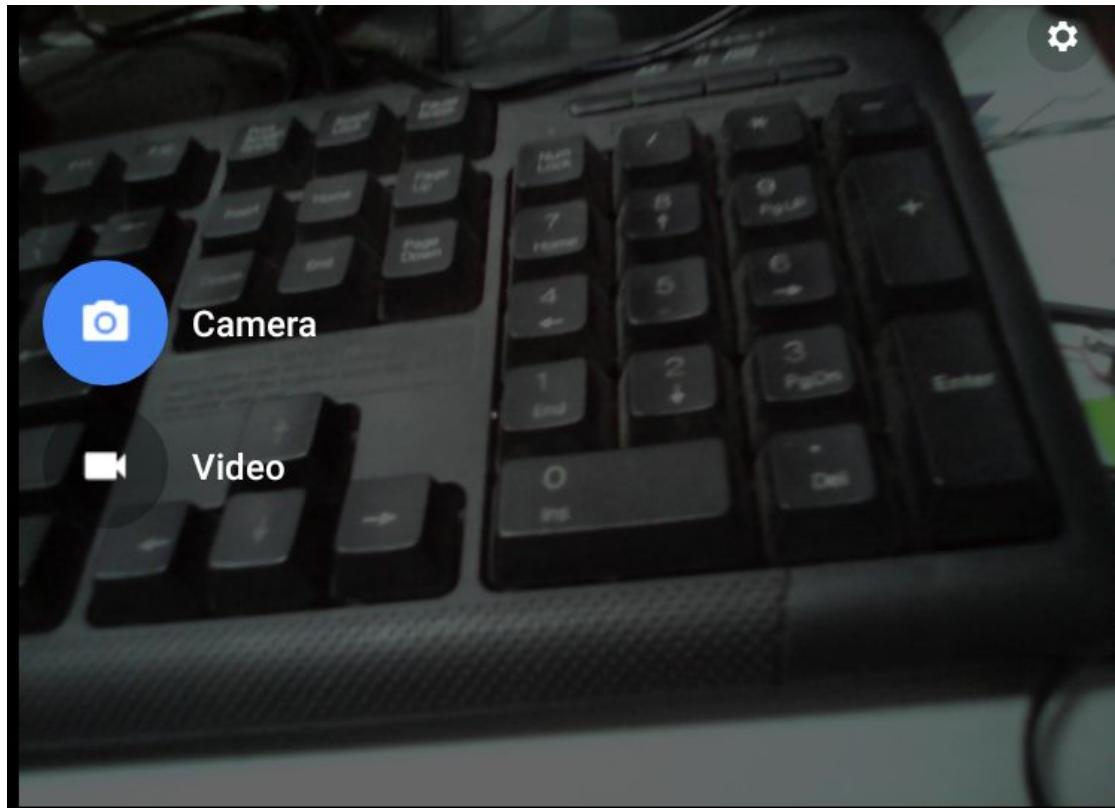

6 Internet

6.1 Browser

In case of Wi-Fi is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 7.1

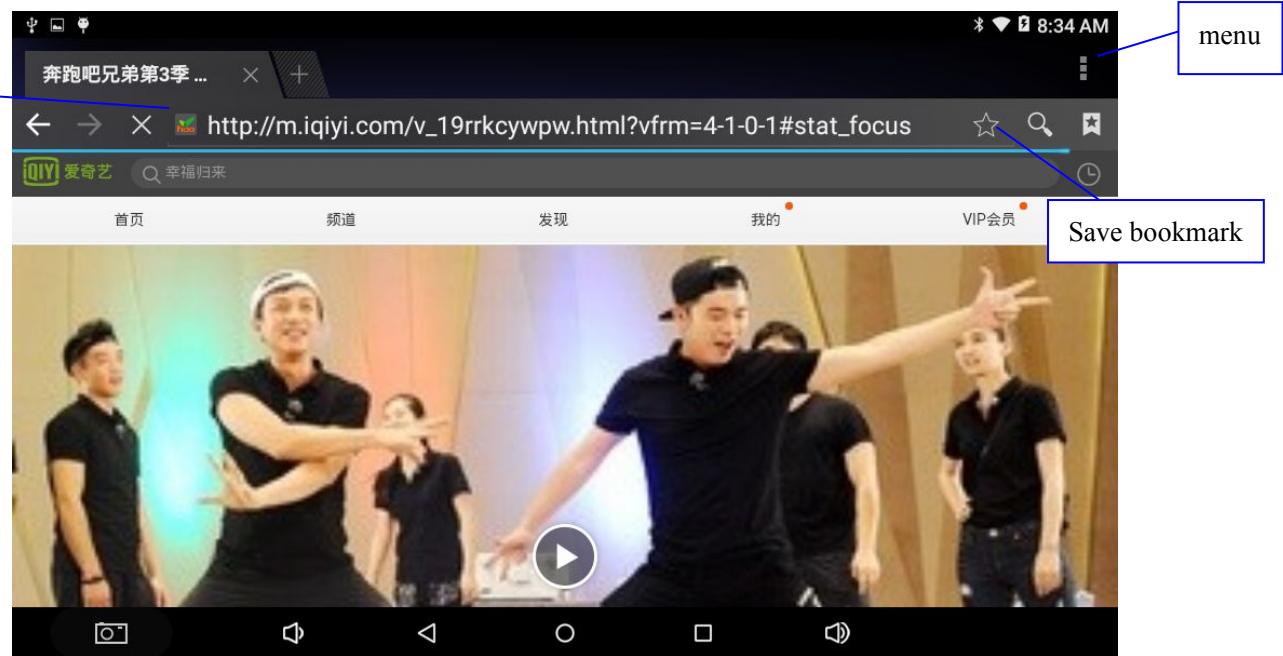


Picture 6.1

Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, and you can click the menu you can refresh, save to bookmarks, share page, bookmarks, history and setting the webpage.

7 Other Application Procedures


7.1 Clock

Click **Clock** procedure, enter into below interface as Picture 8.1.

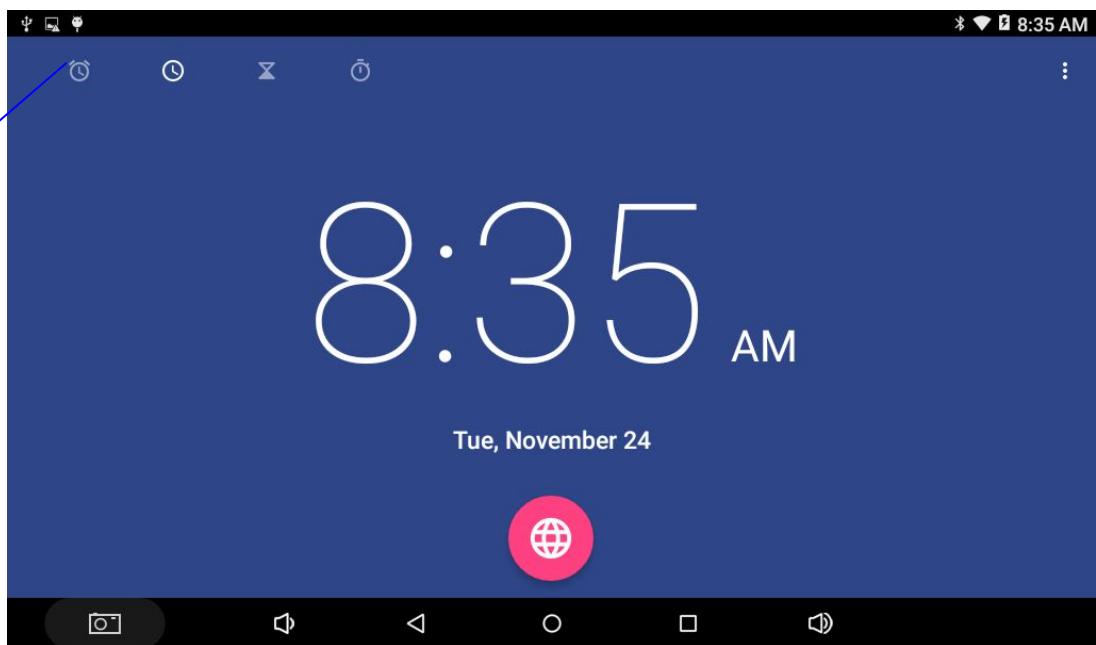

Picture 7.1

7.2 Calculator

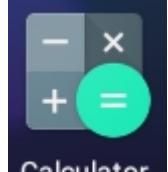

1. Click **Calculator**.
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.




Picture 7.2

7.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.




In the main menu, click the document manager icon to enter into documents manager.

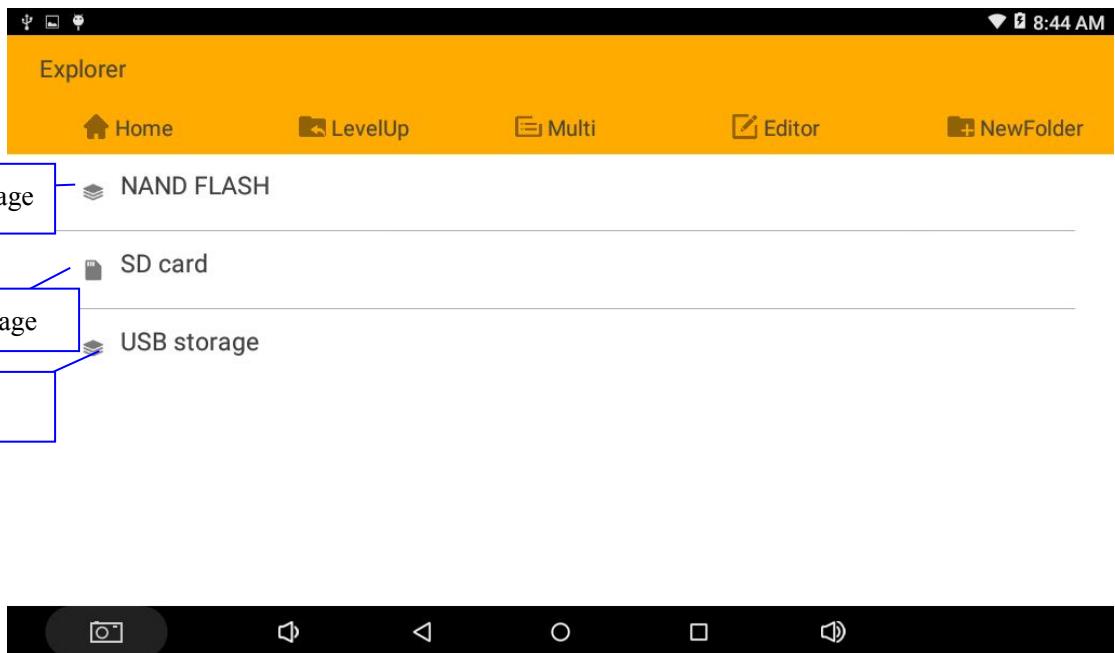


Picture 7.3


Click  go to top level, click  can chose multi files once .

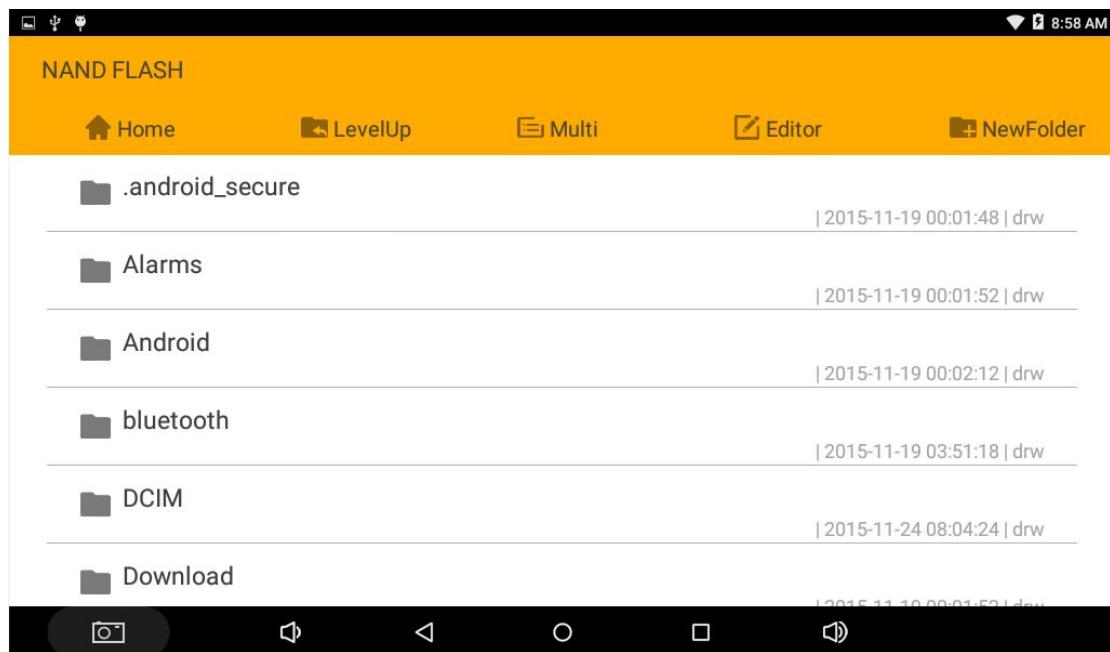

Picture 7.4

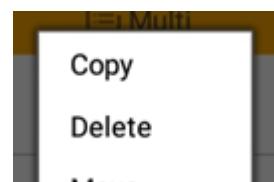


a. Long press the item, popup ,lead you to edit files .

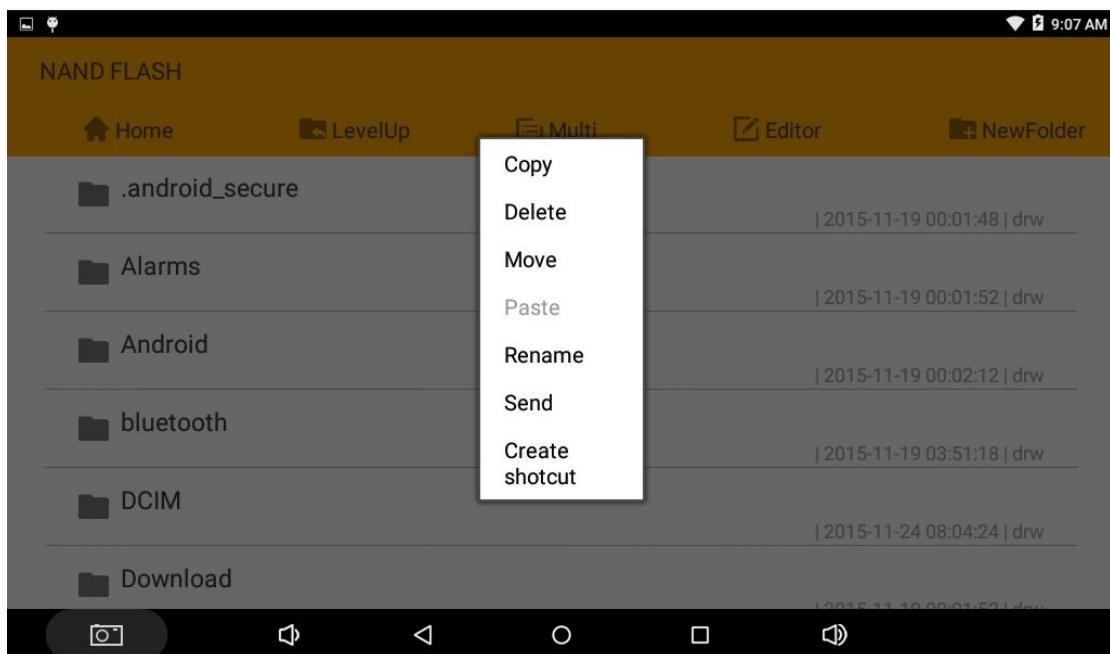

Picture 7.5

b. Share file: choose any file, long press it, it will popup “share”, choose the share way you want in the list as Picture 8.6

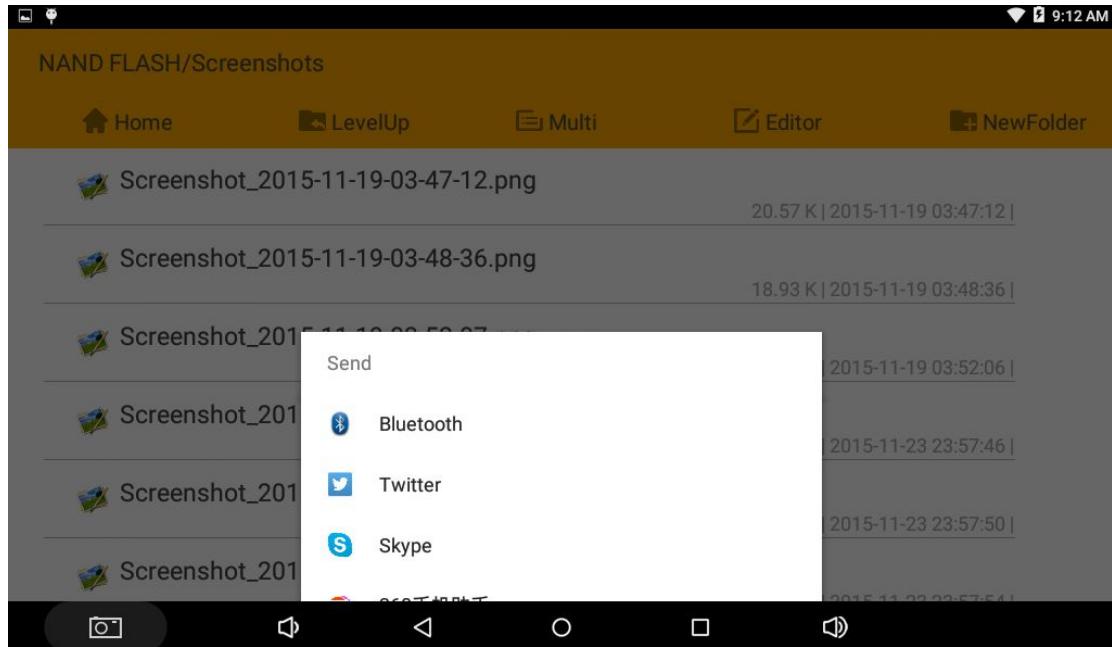

Picture 7.6

c. Install apk file: Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

d. Build new folder: Choose the menu you want to build the file, click  icon in right top, choose new folder, you can build new folder as reminder.


7.4 Recorder

In the main interface or desktop, click recorder icon  to enter into record interface as

picture8.7, click record key  to start record. Click Stop key  to stop recording.

Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.


Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

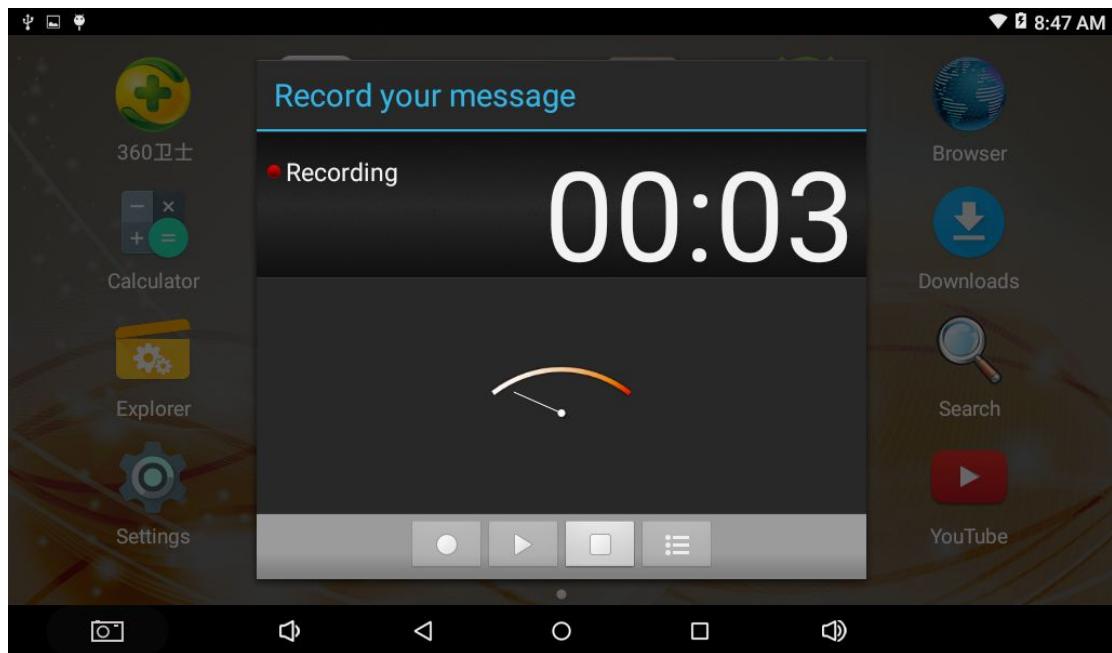

Picture 7.7

7.5 Calendar

Click calendar icon  to into calendar interface as picture8.8.Click icon  to choose the type. Click icon  to add calendar. Click icon  to menu.

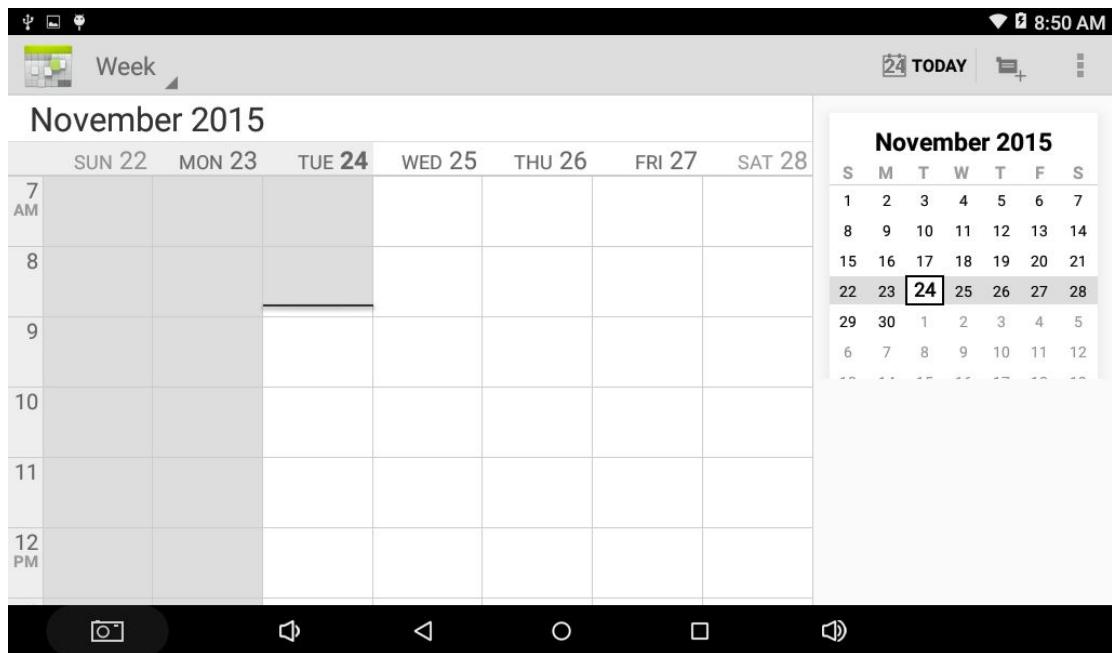

Picture 7.8

8 Installation of Procedures

8.1 Installation

Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup install, click install apk.
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

8.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures installed in the system.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many convenient methods to uninstall after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

9 Troubles Shooting

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

10 FCC warning statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet PC (FCC ID: 2AG83-H7616R) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification **is 0.399W/kg** when properly worn on the **body**. This device was tested for typical body-worn operations with the back of the Tablet PC kept **00cm** from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a **00cm** separation distance between the user's body and the back of the Tablet PC. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **0.0 cm** must be maintained between the user's body and the Tablet PC, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.