

USER MANUAL

WIRELESS MINI SPEAKER

<p>COMPONENTS INCLUDED</p> <p>Mini Speaker - USB power supply cable & 3.5mm audio cable -Remote control</p> <p>OPERATION GUIDE</p> <ul style="list-style-type: none"> Activate Bluetooth mode: Turn on the speaker, you will hear a sound that indicates "Bluetooth mode"; find in your device the signal "BBQ-SPEAKER" and pair it with your device. A sound will indicate that the connection is successful (Speaker without Bluetooth no this function). Activate Line In mode: Turn on the speaker, press "MODE" button until you hear "Audio Input"; plug the 3.5mm audio cable into the Line In port on the speaker and into your device [Compatible with MP3, MP4, computers, mobile phones and other multimedia equipments]. Activate MP3 player mode: Turn on the speaker and insert a USB or SD card, the speaker will automatically start playing MP3 format files. Activate FM Radio: Turn on the speaker, press "MODE" button until you hear "Radio Mode" and it will enter FM radio. Press [FM] key to enter into automatically search and store channels; press [M/F] key to choose the previous channel or [M/F] key for the next channel. MODE key:press this key in order to switch to different working modes [Bluetooth Mode, Radio FM Mode, Line In Mode]. 	<p>COMPONENTS INCLUDED</p> <p>Mini Speaker - USB power supply cable & 3.5mm audio cable -Remote control</p> <p>OPERATION GUIDE</p> <ul style="list-style-type: none"> To navigate between your music, press [M/F] key to choose the previous file and [M/F] key for the next file. Press for a few seconds the [M/F] key to decrease the sound level and press [M/F] key to increase the sound. Press [P/PAUSE] key to play and pause your music. Charge Mode: Insert the power cable into the DC5V port and the USB side connects to a DC5V charger or computer. <p>SPECIFICATIONS</p> <ul style="list-style-type: none"> Bluetooth: Compatible Bluetooth 2.0/3.0 (Speaker without Bluetooth no this function) Output voltage: DC 3.3-3.7V Input voltage: DC 4.2-5.0V Power supplier: power adapter 5.0V OR computer by USB cable <p>SAFETY CAUTIONS</p> <ul style="list-style-type: none"> Keep out of reach of children; in order to avoid electrical shocks or suffocation. Do not spill any liquid on the product and do not touch with wet hands to avoid getting shocked. Do not disassemble, try to repair or reconstruct the product. Do not place a flame source such as candles close or on top of the speaker. Do not locate the speaker or cord near heat sources such as radiators, heaters, air duct or direct sunlight. Stop using the speaker in the following situations: high temperatures, smoke, burning smell, unusual noise or if you notice fire coming from product. 	<p>REMOTE CONTROL</p> <ol style="list-style-type: none"> power on/off mode change of radio, SD card, USB, audio input, Bluetooth Mute pause/play, automatically search and store channels under FM radio previous file, previous channel under FM radio next file, next channel under FM radio 7 kinds of sound-effects switch decrease volume increase volume USB,SD card switch Loop choosing song file choosing
1	2	3