


User manual:

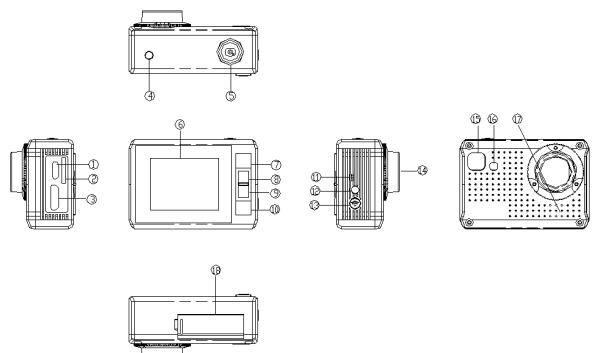

1.Micro USB

2.TF

3.HDMI-D card interface

4 charge indicator

5.OK key

6 Display

7 menu key

8.UP key

9.DOWN key

10 mode key / return key

11 microphone

12.wifi indicator

13.wifi

14 lens

15 power / mode key 16 working indicator

17 speakers

1.menu key

In standby mode, press the menu key to enter the main menu, press the menu button, press the key to press [key] or [key], select the options that need to be set.

Set up after the completion of the short press the menu key until the Exit menu settings. (the menu setting method is the same as in the video mode, the camera mode and the playback mode).

2 key (MIC)

A: on the flip function

In the menu settings and playback mode for flip function.

Two features: fast forward function

In playback mode, video playback process, short press [] key to fast forward function.

Function three: MIC recording switch

In the recording process, for the MIC switch shortcuts, short press to open and close the MIC recording function.

3 video and photo key /OK

Function: start / close the video function

In the video mode, press the confirmation key to start the video, press the confirm button again to stop the video.

Function two: camera key

In the camera mode, press the confirmation button to take a picture.

Function three: file player key

In file viewing mode, short press [confirm key] can play video.

Function four: confirm key

In the standby mode / photo mode / playback mode, short press [menu key], enter menu mode, short press [key / down key] to browse, short press [confirm key] to determine.

4 key (video mode emergency lock)

A: next page function

In the menu settings and playback mode for flip function.

Function two: rewind function

In playback mode, video playback process, short press [] key to rewind function.

Function three: emergency video lock key

In the video mode, if you want to protect the current video will not be covered, short press [emergency video lock key] to start the emergency lock function, the screen right corner of the lock file icon, then the current video is saved as a special image, the image will not be covered.

5 switch machine key

Function: switch machine function

In the shutdown state, long press the power button to open the machine power, the machine automatically start work. Press the power button on the power button and hold it for 3 seconds.

Function two: mode conversion

After starting the switch machine key can be photographed, playback, and other functional conversion

6 mode key / return key

Boot after the short press mode button can be photographed, playback, and other functions, in the menu function by short press mode button to return to the main screen.

Basic operating instructions

Battery power display

1, battery power indicator, please refer to the icon

Low quantity of electric charge

Battery charge

1 directly to the car charging in the camera USB interface, the camera automatically boot and charging, the shutdown state can also charge, charging, charging indicator light, full of.

2 USB charging, USB data cable connected to the computer, the other end of the camera is connected to the end, you can charge, the state can also charge, charging, charging indicator light, full of.

The installation and removal of TF Card

1, according to the correct direction of the TF card into the TF card slot, until the TF card is fixed in the slot.

2, remove the TF card, please press it lightly to TF card, TF card can be removed after the pop-up.

Be careful

1, please note that the insert direction of the card, if the reverse insertion may damage the machine and TF card.

2, when you put the TF card into the machine, the machine will be set as default TF card storage devices, the original TF card data can not be read.

3, if the card is incompatible with the machine, please re insert one or more TF card and try again.

4, support the highest 32G.

Mobile detection function description

1 standby mode press the "MENU" into the video settings menu, and then press the "next key" select "mobile detection" by "OK" button to open the mobile

detection function.

2 after opening the mobile detection function, in the standby non video state, when the camera is detected in front of the object will start automatically when the video, until the end of the video after 10 seconds without the object.

3 mobile detection function to capture accuracy and camera use environment, capture the relatively high accuracy in a good light, dark place to capture the lower accuracy of moving object motion detection could catch in front of about 5 meters.

4 gravity sensing function

1 standby mode press "MENU" to enter the video settings menu, and then press "next key" select "OK" button to open the gravity sensing function, according to the demand to select the gravity sensing sensitivity (high) / (in) / (off).

2 after opening the gravity sensor, the screen will appear to lock the icon and save the current video as a special image, the image will not be covered by a special image when the video is detected.

Parking mode

1, press the "MENU" button to enter the setting menu, and then press the "on / down" button to select the parking mode menu, press "OK" key to enter the parking mode;

2, there are four options after entering the "off", "low", "in", "high""

"Off" to turn off the parking mode function;

"Low" for low sensitivity mode; general in the relatively noisy environment choice

"Medium" for the sensitivity of the model; the general choice of normal living environment

"High" is a high sensitivity model; the general choice of a quiet living environment

Two, open the parking mode may encounter problems:

1, the machine is opened in the parking mode, if just into the car, the car will start in the case of vibration, this time

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.