


日期: 2023.11.20/2024.1.26

尺寸: 70x180mm

红色是折痕线

Digital Alarm Clock and Calendar Wireless Charging Stand

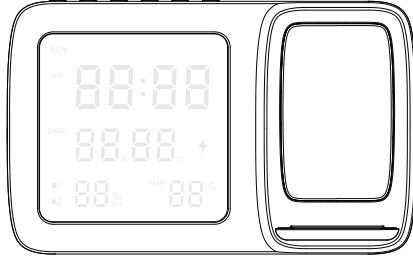

USER MANUAL



WARNING

THIS PRODUCT CONTAINS A BUTTON BATTERY


KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.


Specifications

Input:	12V=2.25A, 9V=3A, 5V=3A
Wireless Charging Output:	15W / 10W / 7.5W / 5W
Dimensions:	210 x 130.8 x 33mm

Package Contents

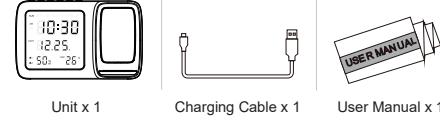


Features & Functions

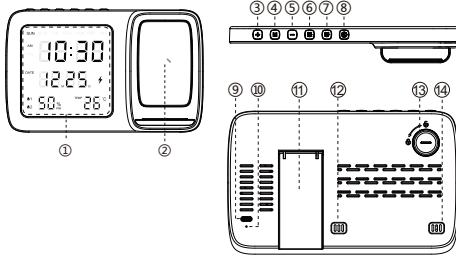

1. Display Screen
2. Wireless Charging Station and Light up Logo Area
3. Adjustment + (Clock/Alarm)
4. Mode Button: Press once to switch between 12/24H modes, press and hold to set time and date.
5. Adjustment - (Clock/Alarm)
6. Alarm 1 Setting: Press once to turn on/off, press and hold to set alarm 1
7. Alarm 2 Setting: Press once to turn on/off, press and hold to set alarm 2
8. Snooze Mode/Adjust Brightness: Press once to change display brightness, press and hold to turn on/off the display. When the alarm is on, press once to enter snooze mode.
9. Type-C Input Port
10. Power Indicator
11. Expandable Stand
12. Buzzer
13. Memory Back-up Battery: Keep Out of Reach of Children. Please remove the plastic lock before using.
14. Temperature/humidity Sensor

Anti Slip Pad (Optional, DIY)

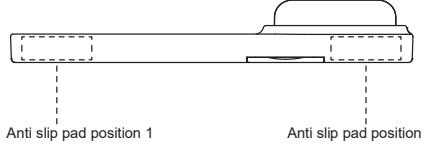


Two anti slip foot pads are included with the unit. When using the unit on a smooth desktop, please stick the foot pads in the positions shown at the bottom for a better experience.

Power On

Connect the charging cable between the unit and a wall adapter or power source (not included*). The power will switch on automatically. It is recommended to use the wall charger or power supply with PD/QC 27W or more to match the fast wireless charging.


Wireless Charging

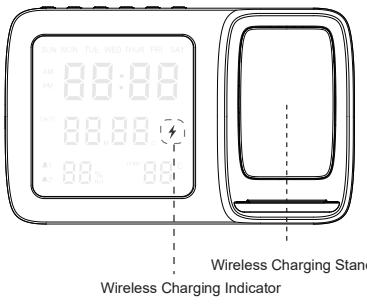

Place your phone on the wireless charging stand vertically to charge. The wireless charging indicator on the panel will light up when wireless charging is in progress.

Note: If the unit is single coil version (Confirm with your seller), please only place your phone on the wireless charging stand vertically.

 Dimming Function



Alarm and Snooze Mode

When the alarm clock rings, press the buttons '+' 'M' '-' to turn off the alarm clock, and press the button to enter snooze mode (The alarm will ring every 5 minutes, it will automatically turn off after 30 minutes).

Note:

If there is no operation after 10 seconds of adjustment, the system will automatically save and exit the adjustment mode.

Warnings


1. This unit contains a button battery, keep out of reach of children.
2. Only use the approved wall charger or power supply.
3. Do not place any foreign objects, including metals, magnetic absorbers, and IC cards, in the wireless charging detection area, as this may cause abnormal charging or overheating and damage the unit.
4. Do not use this device if you find that it is damaged in any way.
5. Do not attempt to repair this device or take apart under any circumstances, as this will invalidate your warranty.
6. Clean only with a soft, dry cloth.
7. For reasons of electrical safety, this device must never be immersed in water, exposed to damp or humid conditions or subjected to excessive forces.

FAQs

1. Why can't my Qi-enabled phone be charged wirelessly?
A: Make sure the charging cable is connected to the wall charger or power supply.
Make sure the phone is placed vertically or horizontally on the center of the wireless charging area.
2. Why can't my phone use fast wireless charging?
A: Check the charging cable is provided by us or original accessories of mobile phone, and the output of a Wall charger is more than PD/QC 27W(12V=2.25A, 9V=3A, 5V=3A).
3. Why can't the clock, alarm clock and date be saved after unplugging the charging cable?
A: Make sure the plastic lock of memory back-up battery has been removed.
B: The memory back-up battery is in low power or out of power, please replace the built-in CR2032 battery behind the battery compartment.


Warnings

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
This equipment must be installed and operated with a minimum distance of 15 cm between the radiator and user body.

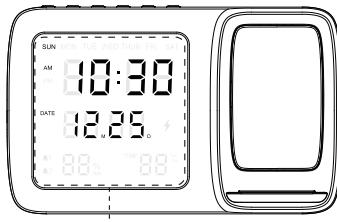


Press the button to adjust the brightness of the LED display. The light mode has three levels of brightness: High, Medium, and Low. Press and hold the button to turn on/off the LED display.

Temperature And Humidity Display

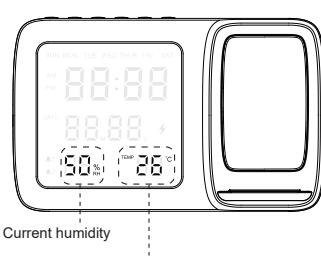

Current humidity
Current temperature(°C)


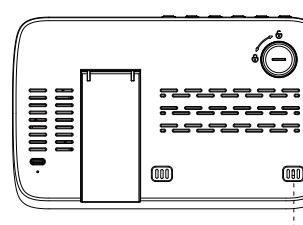


Temperature/humidity Sensor

After turning on the power of this unit, it will automatically detect and display the current ambient temperature and humidity.

*Keep this area uncovered to avoid measurement accuracy.

 Setting The Time And Calendar

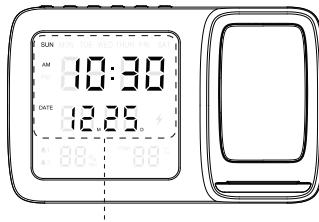

Standby mode

Short press the button 'M' to switch the time display format between 12/24. Long press the button 'M' to start adjusting the time and date.


 
Adjustment mode

1. Press the button '+' or '-' to adjust the time and date.
2. Short press the button 'M' to switch the adjustment options. Switching sequence: Hour- Minute- Year- Month- Day- Exit.

Note:

1. If there is no operation after 10 seconds of adjustment, the system will automatically save and exit the adjustment mode.
2. The day of the week is automatically displayed based on the date and cannot be adjusted.

Setting The Alarm Clock 1 & 2

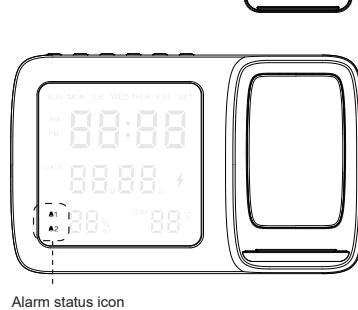

Standby mode

Short press the button or to turn on or off the alarm 1 or 2, the corresponding icon will appear or disappear. Long press the button or to set the alarm 1 or 2.

Adjustment mode

Press the button '+' or '-' to adjust the time. Short press the button or to switch the adjustment options. Switching sequence: Hour- Minute- Exit.