

True Wireless Stereo Earbuds With Touch Control

Model: CCS15156

Packaging Contents:

- 1 pairs of Wireless Earbuds
- 1x Type-C Charging Cable
- 1x User Guide

How to Use:


1. Charge Your Wireless Earbuds

1.) Prior to use, charge your wireless earbuds

Use the supplied Type-C charging cable, plug the cable into the Type-C port which is located on the back of the charging case.

2.) Charging case charging: the blue LED is flash.


Charging case full charged: solid blue

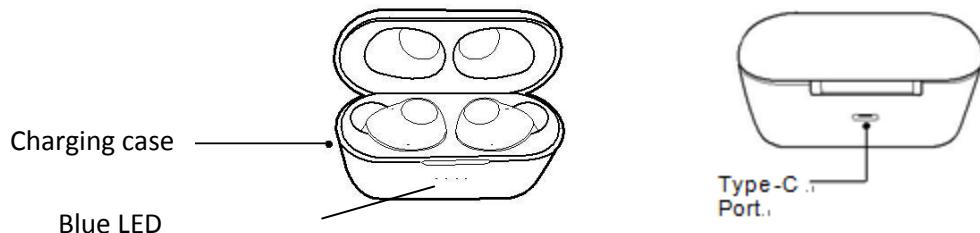

2. Selecting the Right Fit

Your wireless earbuds include three sizes of earbud caps. They are pre-assembled with medium size earbud caps. Determine which ones provide the best fit to achieve the optimal listening experience.

If the medium size earbud caps do not feel comfortable, pull them off and replace with another size.

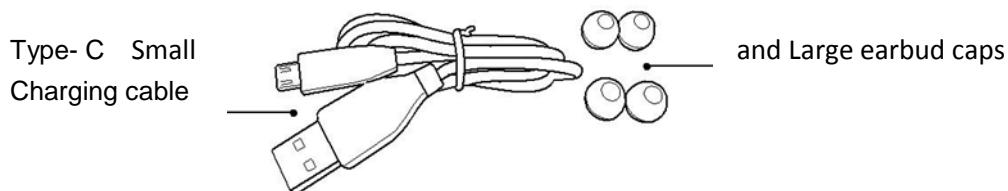

3. Connecting / Wireless Pairing

- 1.) Make sure the earbuds and your Bluetooth device are next to each other (within 3 feet / 1 meter)
- 2.) Remove both earbuds from the charging case and place into your ears.
- 3.) Turn on your device's Bluetooth. Most devices will automatically detect your earbuds. Locate and select "**CCS15156**". It will indicate that your earbuds are now connected or paired.
 - If your device does not automatically detect your earbuds, make sure Bluetooth is turned on, do a **SEARCH** for "**CCS15156**" and then click **CONNECT**.

Notes:

To shut down, touch the MFB for 4 seconds or place back into the charging case. Once paired, the range is approximately 32 feet/10 meters. Your earbud will automatically connect to the last paired and connected device when it is turned on again

4. Operating Your Wireless Earbuds

When playing music:

- To skip to the next song, touch the right ear button for twice.
- To skip to the previous song, touch the left ear button for twice.
- To increase volume, touch the right ear button for 1 second.
- To decrease volume, touch the left ear button for 1 second.

When on a call:

- To answer or hang up a call, short touch the right or left ear button for 1 second.
- To reject an incoming call, touch the right or left ear button for 2-3 seconds.

Low Battery

- You'll hear a voice prompt of "Low battery" when the battery level is less than 10%.

Earbud LED Indicators

- When your wireless earbuds are charging – the blue LED light is on.
- When your wireless earbuds have finished charging – the blue LED light is off.;
- When your Bluetooth is being paired – the blue LED light flashes quickly.

Troubleshooting


If your wireless earbuds are not pairing together OR if both earbuds are not flashing blue, use the following instructions to reset and re-pair your earbuds:

- 1.) Remove both earbuds from the charging case and turn them OFF by touching both earbuds simultaneously until the blue lights slow flashes 3 times. Please note, do not cover entire earbuds with your finger or you will not see the blue light flash.
- 2.) Next, touch and hold down both earbuds simultaneously for approximately 13 seconds, until you see the blue lights quickly flash 2 times. You will need to continue to hold and see the blue light flash a second time. This resets your earbuds.
- 3.) To pair your wireless earbuds, place both earbuds into the changing case, and take them out simultaneously;
- 4.) Make sure the earbuds and your Bluetooth device are next to each other (within 3 feet / 1 meter)
- 5.) Turn on your device's Bluetooth. Most devices will automatically detect your earbuds. Locate and select "**CCS15156**". It will indicate that your earbuds are now connected or paired.
 - If your device does not automatically detect your earbuds, make sure Bluetooth is turned on, do a **SEARCH** for "**CCS15156**" and then click **CONNECT**.

Notes:

To shut down, touch the MFB for 4 seconds or place back into the charging case. Once paired, the range is approximately 32 feet/10 meters. Your earbud will automatically connect to the last paired and connected device when it is turned on again

Label:

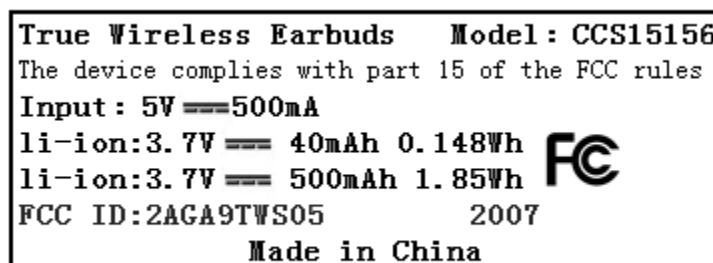

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:2AGA9TWS05