

Programming Guide



WARNING: Important safety instructions to be read before installation and use.

Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty. It is important for the safety of persons to follow the enclosed instructions.

Save these instructions for future reference.

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Follow installation instructions.
- For use with motorized shading devices.
- Frequently inspect for improper operation.
- Do not use if repair or adjustment is necessary.
- Keep clear when in operation.
- Replace battery with correctly specified type.



WARNING: Do not ingest battery, Chemical Burn Hazard.

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Do not dispose of in general waste.



Operation Temperature Range: -10°C to +50°C
Ratings: 3VDC, 15mA

FCC & ISED STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
1) L'appareil ne doit pas produire de brouillage;
2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequencyenergy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

ASSEMBLY

Please refer to separate Rollease Acmeda System Assembly Manual for full assembly instructions relevant to the hardware system being used.

BATTERY MANAGEMENT

For battery motors;
Prevent discharging the battery completely for extended periods, recharge as soon as the battery is discharged

CHARGING NOTES

Charge your motor for 6-8 hours, depending on the motor model, as per motor instructions



During operation, if battery is low, the motor will beep 10 times to prompt the user it needs charging.

INSTALLER BEST PRACTICE AND TIPS

SLEEP MODE

If pre-programmed: before shipping the motor ensure the motor is put into sleep mode so it doesn't activate during transit.

LOCK REMOTE

Prevent users accidentally changing the limit; ensure the remote is locked as your last step of programming.

ZONE / GROUPS

Ask the customer the day before to think how shades will be zoned on the remote. This may save an extra call out.

SETTLE FABRIC

Run the fabric up and down several times to ensure fabric has settled to some extent and re adjust the limits if needed.

CHARGE 100%

For battery motors ensure the motor is fully charged as per instructions.

INSTALLERS REMOTE

Use a spare remote to individually program each shade. Then use that remote to group rooms as per the user's needs. If you go back and service the installation later then, that same remote can be used to check the individual shades.

PRODUCT RANGE

The Quick Start Programming Guide is universal for all Automate Motors including:



Internal Tubular



Large Tubular



0.6 Cord Lift



0.8 Cord Lift



Curtain




Tilt Motor




Note: Curtain motor does not Jog but instead LED flashes


P1 LOCATIONS

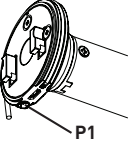


Internal Tubular

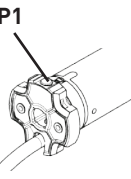


Large Tubular

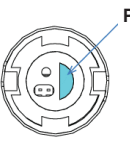

 
0.6 Cord Lift



0.8 Cord Lift

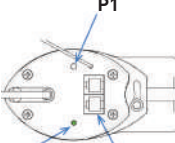

Curtain

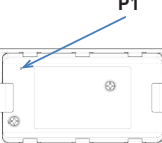


Tilt Motor



INSTALLER


QUICK START PROGRAMMING

STEP 1 ON REMOTE

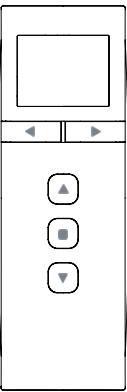

Press ◀ or ▶ buttons to select the channel that needs to be programmed

STEP 2 PAIRING REMOTE WITH MOTOR

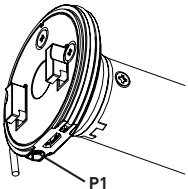

2 SECS

* Internal Tubular pictured. Refer to "P1 Locations" for specific devices

Press the **P1 button** on the motor for **2 Seconds** until the motor responds

The motor will respond with 1x Jog & 1x Beep


Within 4 seconds hold the stop button on the remote until the motor responds as below:



MOTOR RESPONSE



STEP 3 CHECK DIRECTION

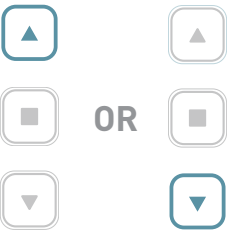


Press **up or down** to check the motor direction. If correct skip to **step 5**.

STEP 4 CHANGE DIRECTION




MOTOR RESPONSE

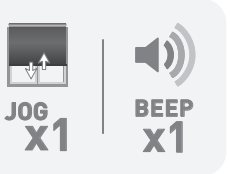

Reversing motor direction using this method is only possible during initial set-up.


This setup wizard should be used for new installation or factory reset motors only. Individual steps may not work if you haven't followed the wizard from the beginning.

STEP 5 SET UPPER LIMIT

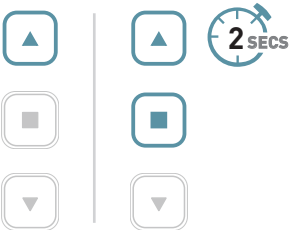


Move shade to desired top limit by pressing the **up arrow** repeatedly. Then press and hold **up & stop together 2 seconds** to save limit.

MOTOR RESPONSE

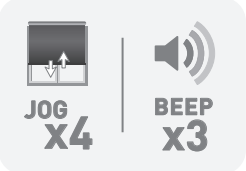


Tap the arrow several times or hold down if needed; press arrow to stop.

STEP 6 SET BOTTOM LIMIT

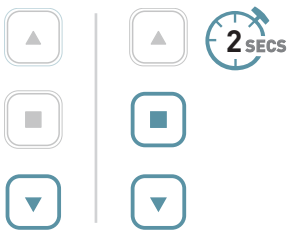

Move shade to desired bottom limit by pressing the **down arrow** repeatedly. Then press and hold **down & stop together for 2 seconds** to save limit.


MOTOR RESPONSE

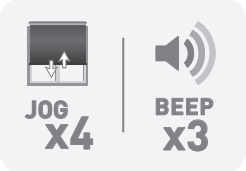


Tap the arrow several times or hold down if needed; press arrow to stop.

STEP 7 SAVE YOUR LIMIT

 6 SECS




Repeat steps 1-6 for all motors. Once complete **Push the swithc up** to lock the remote, the **L** will briefly appear on the screen.

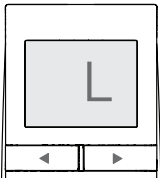

FACTORY RESET MOTOR RESET PROCEDURE


To reset all settings in the motor press and hold the **P1 Button for 14 seconds**, you should see **4 independent jogs** followed by **4x Beeps** at the end.

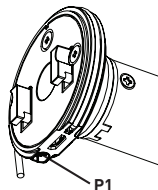

14 SECS

* Internal Tubular pictured above. Refer to "P1 Locations" for specific devices

MOTOR RESPONSE

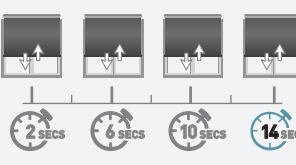

BEEP X4




USER GUIDE




QUICK START GUIDE


BUTTON OVERVIEW

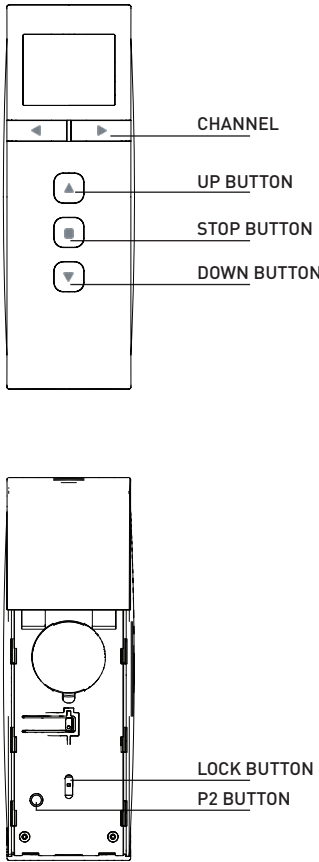


REPLACE BATTERY

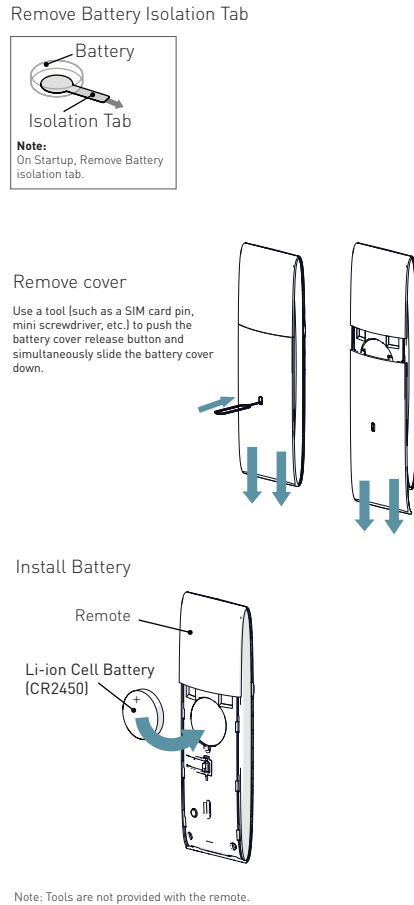

WALL MOUNTING

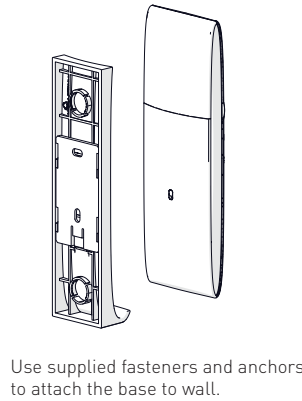

HIDE SPARE CHANNELS

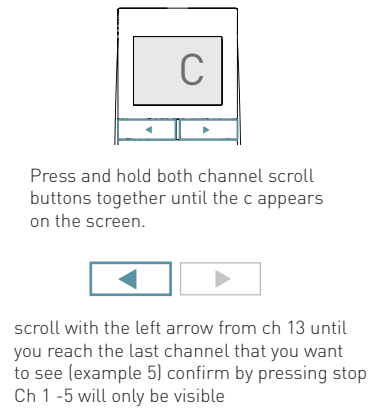

SELECTING A CHANNEL

STEP 1




Press left and right arrow; to scroll through channels as required.

STEP 2

READY FOR CONTROL


Now while the channel is active follow the control instructions.

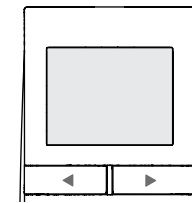

if no button is pressed within 4 seconds, the channel selection will automatically be confirmed.


GROUP CONTROL

Channel "0" is pre-set to control ALL shades paired to your Multi-channel remote.

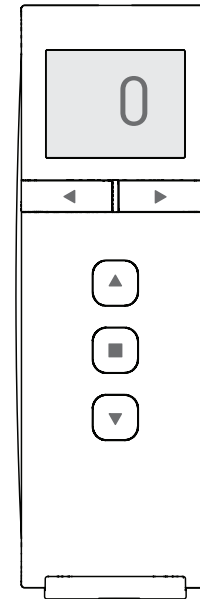

CONTROLLING A SHADE

CONTROL SHADE UP OR DOWN

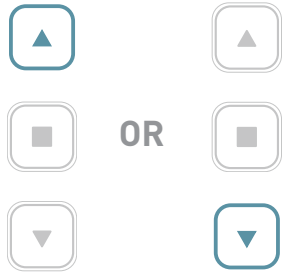

While the channel is displayed press up or down to move shade accordingly

STOPPING THE SHADE






Press the stop button to stop shade at any point

ADVANCED PROGRAMMING

DISABLE LIMIT SETTING


This mode is intended to be used after all shade programming is completed. User Mode will prevent accidental or unintended changing of limits.

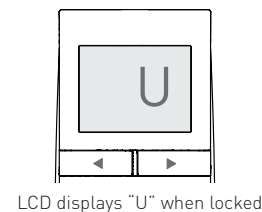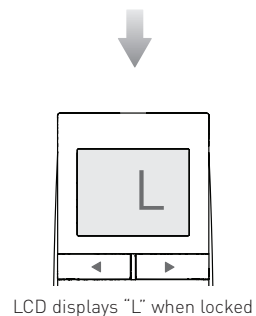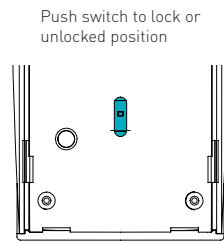


SET A FAVORITE POSITION

Repeating these steps after creating a favorite position will delete it.

Move shade to desired position by pressing UP or DOWN on the remote.

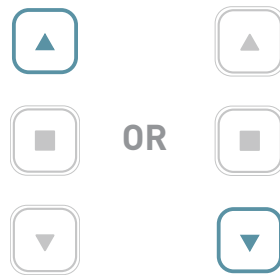

STEP 1. Press P2 on controller

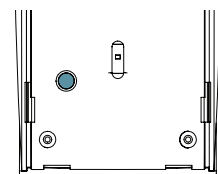

MOTOR RESPONSE



STEP 2. Press STOP on controller




MOTOR RESPONSE



STEP 3. Press STOP on controller




MOTOR RESPONSE

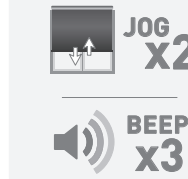


CREATE CUSTOM GROUPS

It is possible to copy one channel to another channel to create custom groups

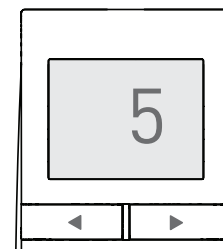

Select the channel you want to transfer


STEP 1. Press P2 on existing controller

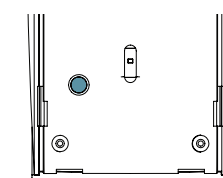

MOTOR RESPONSE




STEP 2. Press P2 again on existing controller

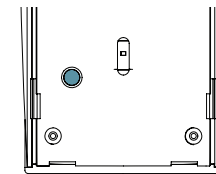

MOTOR RESPONSE




Step 3 to be completed within 4 seconds of Step 2

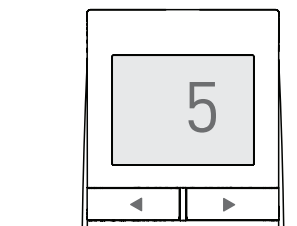

Select the channel on the new controller

STEP 3. Press P2 on new controller

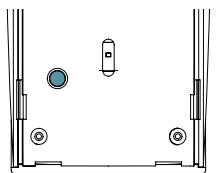

MOTOR RESPONSE

