


Water Resistant Shower Bluetooth Speaker  
USER MANUAL

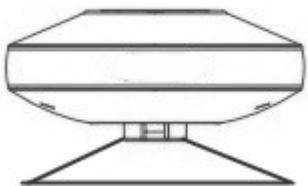


Thank you for choosing our Water Resistant Shower Bluetooth Speaker. Sincerely hope you will enjoy your music and phone call freely.


### **Safety Instructions**

Read this manual carefully before you use our Water Resistant Shower Bluetooth Speaker and keep this manual for future reference.

- Keep the device away from heat, direct sunlight and sharp edges.
- Keep the device away from naked flames.
- Do not insert any metal objects into the device in case of short circuit!
- To avoid a static charge, please do not use the device in an extremely dry climate.
- Do not repair the unit by yourself but contact an authorized specialist to help you.

### **Product overview**

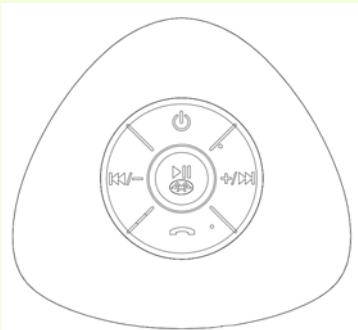

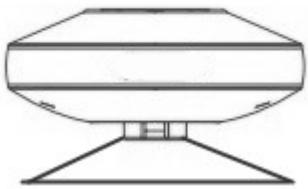

### **Accessories included**

1pc USB charging cable

### **Charging Integrated Battery**

This Bluetooth speaker is powered support by integrated rechargeable Lithium Battery. Charge the battery as follows:

- 1.Insert the charging cable into the DC 5V socket on the unit. Connect the USB plug into a PC or AC/DC adapter. The LED indicator turns red and the battery is being charged.
- 2.When the battery is fully charged, the red LED indicator goes out.

### **Pairing 2681 to Mobile phone or other device**

Active the Bluetooth speaker pairing mode by button and then there has a voice reminder says: Enter to Bluetooth. the blue LED is flashing ,means the speaker is ready for pairing.

Switch off the mobile phone Bluetooth, the speaker will say: Bluetooth canceled.

#### **Tips:**

Please make sure the speaker is in power off mode when you are trying to activate the pairing mode.

- 1.Turn on your mobile Phone and activate the Bluetooth function.
- 2.Search for Bluetooth devices, 2681 will show up.
- 3.Pair your device with 2681. If password is needed, type in “0000” ,after 2681 is paired with your device, voice reminder says; Bluetooth connected, means the speaker had connected with your device.

#### **Tips:**

Once this speaker is paired and connected to your mobile phone, next time when you switch on this speaker, it will connect to your mobile phone automatically as long as the Bluetooth in your mobile phone is on.

## Button description

 On/Off : To switch on or off the device

 Short press for the previous song, long press for turning down the volume.

 Short press for the next song, long press for turning up the volume.

 Phone: To pick up or hang up a phone call.

 Play/pause the music

- RESET button: Press the button heavily to reset the speaker

## Notes & tips:

1. You can press Phone Button twice quickly to redial the last phone No. Call.

Long press the Phone answering Button  3 seconds, disconnected from the connection between phone and Bluetooth speaker

## Troubleshooting:

Symptoms	Causes	Solutions
Can not switch the speaker on	Battery empty	Charge the battery
Unable to pair the speaker	Speaker is already switched on, and it is not in pairing mode	Refer to the section of “Pairing 2681 to mobile phone or other device”
during working no sound suddenly	Battery out of charge	Charge the battery
Buttons can not work or strange sound occurred suddenly	Product need to be reset	Press the RESET button

## Technical Specifications

Bluetooth support: 3.0+EDR

Maximum RF Range: 10 meters

Transmitting frequency:	2.4G HZ
Power supply:	DC 5 V/100-120mA
Battery:	3 .7V 400mA lithium
Charging time:	Approx. 3 hours
Operating time:	Approx.6 hours
IP grade:	IPX4
Unit weight:	Approx. 95.5g

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.