

MECOOL®


WIRELESS GAMEPAD WITH RGB LIGHTING

User Manual(GM1)

1. Direct play without any platform or complicated activation to connect.
2. Support Android, IOS phones / Tablet, PC, N-S, PS3, PS4.
3. Adopt high-precision Hall sticks and Hall trigger, say goodbye to drift, more precise control.
4. Ergonomically designed structure, comfortable grip.
5. Dazzling RGB light.
6. Supports button programming, adjustable trigger tension, dual motor vibration and TURBO function.
7. Support some cloud gaming platforms.

* Due to the official game platform software upgrade or source code changes and other non-resist factors cause of some games can not be played or connected with our gamepad. Our company has no responsibility, we reserves the right of final interpretation for this.

Instruction button function:

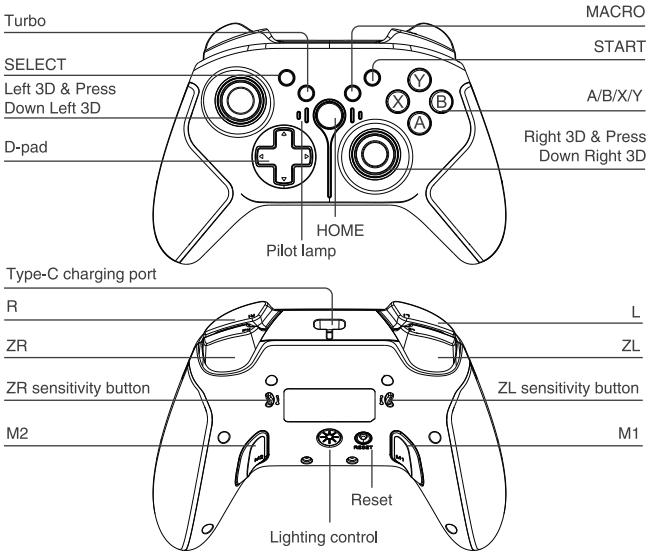


Electrical parameters:

1. Working current: 30mA(RGB Light off), 120mA(RGB Light on)
2. Static current: <10uA
3. Charging current: 260mA
4. Charging hours: 2.5 hours
5. Battery endurance: 10 hours
6. Battery capacity: 1850mWh/3.7V
7. Vibration: Yes
8. Support platform: Android / IOS phones / Tablet / PC / N-S / P3 / P4

Direct Play Mode (Android V3)

Press and hold A+HOME buttons for 2 seconds to enter Direct Play Mode (Android V3). At this time, the LED1 indicator will flash quickly, then search "GM1" on Android phone / tablet BT and pair, LED1 indicator will be always on after connected successfully!

If you connected before, press the HOME button directly, LED1 indicator will flash slowly, automatically reconnect!

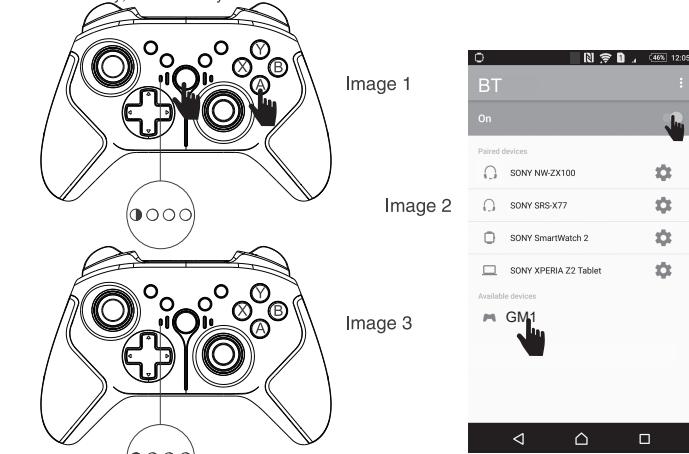

Mapping game buttons for direct play mode Android:

Follow the official account ("ShootingPlus") to check the default operation instructions. If you need to reset the game buttons, please download and install "ShootingPlus V3" APP from Google Play Store, remap the game buttons in the APP and adjust the button position.




ShootingPlus V3

Android Standard mode


Press and hold X+HOME buttons for 2 seconds to enter Android Standard mode. At this time, the LED3 indicator will flash quickly, then search "GM1" and pair it, LED3 indicator will be always on and the controller will be vibrated 1 second after connected successfully.

Press HOME button to reconnect, while the LED3 indicator flash slowly, it connected.

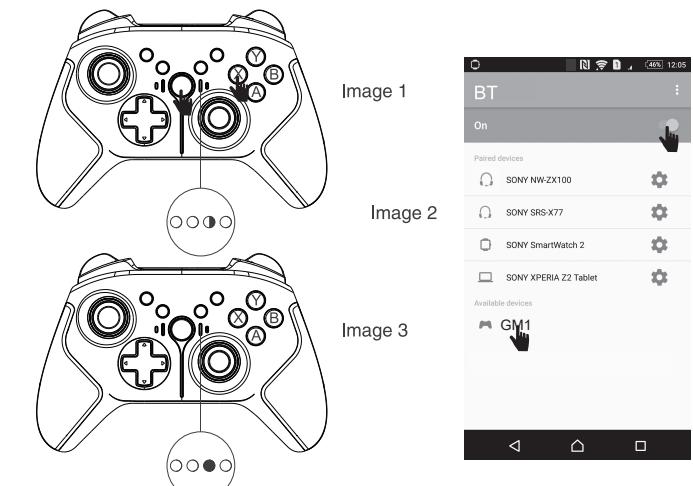

IOS mode (13.0 or above)

Press and hold B+ HOME buttons for 2 seconds to enter IOS mode. At this time, the LED4 indicator will flash quickly, then search "DUALSHOC 4 Wireless Controller" and pair it, LED4 indicator will be always on and the controller will be vibrated 1 second after connected successfully. Press HOME button to reconnect, while the LED4 indicator flash slowly, it connected.

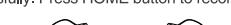

ShootingPlus V3



PC wireless mode

Press and hold R+ HOME buttons for 2 seconds to enter PC wireless mode. At this time, the LED1, 2, 3 indicator will flash quickly, then search "Xbox Wireless Controller" and pair it, LED1, 2, 3 indicator will be always on and the controller will be vibrated 1 second after connected successfully.

Streaming cloud game platform operation:

Press the B+HOME button to pair and connect with the phone, support P5/P4 streaming cloud game platform. Press the R+HOME button to pair and connect with the phone, support the XBOX streaming cloud gaming platform.

P3 / P4 mode




1. Connect the controller to the P3/P4 console using a Type-C USB data cable. Press the HOME button to initiate the pairing process. Once the pairing is successful, the LED4 indicator will remain on continuously. The controller is now ready for wireless connection and to be used.

2. If the controller has been previously connected successfully, you can simply press the HOME button, and after the indicator light flashes, the LED4 light will remain on continuously, indicating a successful reconnection.

3. In P4 mode, press down L3+MACRO to enter touchpad mode. Use R3 to control the simulated touchpad. Press down L3+MACRO again to exit touchpad mode.

N-S wireless mode

1. Turn on the N-S console and navigate to the main menu. Using your finger, touch and select "Controllers" and then "Change Grip/Order" on the console. On the controller, scroll down the ZR sensitivity button to the lowest position, press and hold the "ZR+HOME" button for 2 seconds to turn on the controller and enter pairing mode. The LED1, LED2, LED3, and LED4 indicator on the controller will flash rapidly simultaneously. Once the connection is successful, the controller will be in Xinput wired mode, indicated by the LED1 indicator staying on continuously.

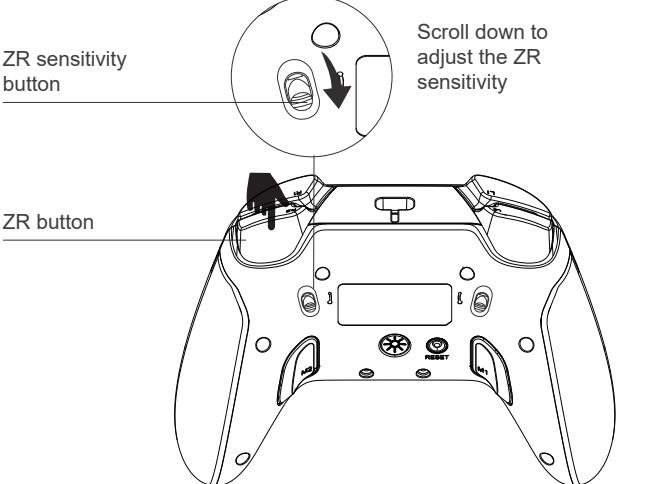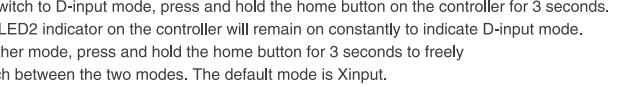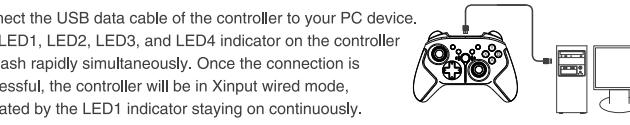

Operations mode

	Android Wireless mode	IOS Wireless Mode	N-S Wireless Mode
Pair Mode(Press for 2 seconds)	Android V3	Android Standard mode	IOS MFI mode
Indicator	A+Home	X+Home	B+Home
Note	Not Support vibration	IOS 13.0 or above	Support vibration
	P3/P4 Wireless mode	PC mode	
	P3 Wireless mode	P4 Wireless mode	PC wired mode
Pair Mode	Connect console with a USB data cable, then press HOME	Connect PC with a USB data cable	R+Home
Indicator	LED 4	PC P3 mode: LED2 PC 360 mode: LED1	LED 1, LED 2, LED 3
Note	Support vibration		

Turbo Function Setting

Action keys (A / B / X / Y / L / ZL / R / ZR) also support the turbo function


1. Press and hold Turbo + tap once Action keys to turn on the burst function.
2. Press and hold Turbo + tap once Action keys to set the Auto burst function.
3. Press and hold Turbo + tap once Action keys to clear the turbo function.

RGB Control

1. The default mode is a gradual color-changing effect. The 3D surround lights have a breathing gradient effect.
2. Pressing the lighting control button once will fix the red color, stopping the gradual color change effect.
3. Pressing the lighting control button again will cycle through 8 different lighting effects: gradual color change, red, green, blue, yellow, cyan, purple, and white. Pressing the lighting control button once more will turn off the RGB lights, and the cycle will start again.
4. The lighting duration is set to 5 minutes. After 5 minutes, the lights will turn off. To turn them on again, you will need to press the lighting switch once more.

Programming function

1. There are two programming buttons on the bottom of the controller, M1 and M2.
2. Each programming button can be used to map a single action button or program multiple buttons. (e.g., A/B/X/Y/L/ZL/R/ZR/L3/R3/Up/Down/Left/Right) can all be programmed.
3. Each programming button can support up to 14 key combinations.
4. The programming buttons do not have TURBO rapid-fire functionality.

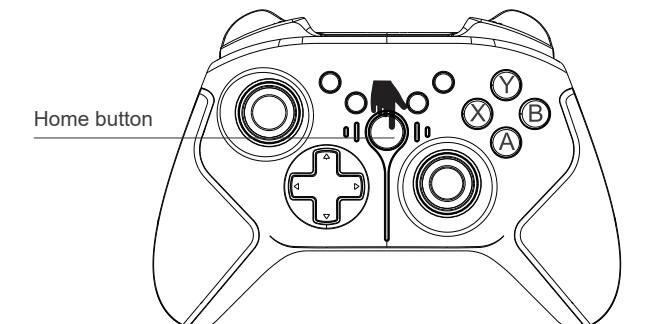


Charging / sleep / wake up / off function

1. Charging function:
 - When the power is low, the LED 4 indicator flashes quickly;
 - When charging, the LED 4 will be flashes slow;
 - When fully charged, the LED 4 will be always on;
- Note: charging status can't pair, only can reconnect.
2. Sleep / wake up / off function:
 - The controller will automatically turn off if no pair within 5 minutes.
 - When you need to use the controller again, simply press the HOME button to wake it up and it will reconnect.
 - While power-on, press and hold the HOME button for 3 seconds to turn off the controller. All LED indicators will turn off.
 - If the device can't be searched, automatically turn off in 3 minutes. And turn off in 30 seconds while can't reconnect.

Note

1. Please do not store this product in wet or high-temperature areas.
2. Don't knap, beat, drub, pierce, or try to decompose this product, to avoid unnecessary damage to the product.
3. Non-professionals disassemble this product by mistake otherwise it will not be covered by the after-sales warranty service.
4. Non-professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.

Accessories List

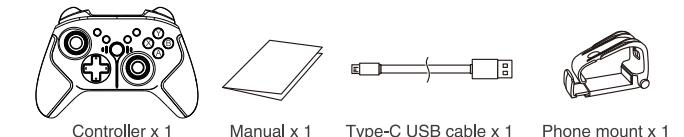

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AGKB-GM1