


INSTRUCTIONS FOR USE

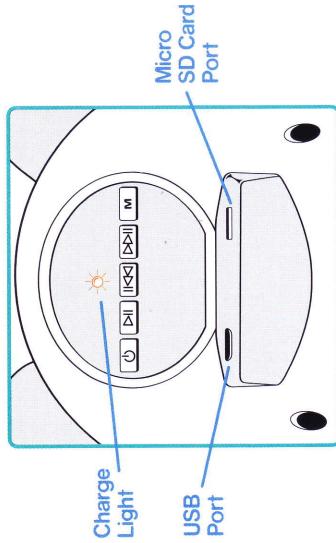


Sound Effects Mode

- Glow to Sleep includes 10 different sounds for you to choose from once you are in Sound Effects mode (to get to this mode, press the mode button **M** until you hear a sound effect).
 - To change the sound, press the forward or back buttons **[◀▶]**. The sounds are in this order: Babbling Brook, Car Ride, Heartbeat, Lullaby, Soft Rain, Rainforest, Rumbling Train, Ocean Waves, White Noise and Shushing.
 - Once you choose a sound, that particular sound will play continually until you pause it or turn unit off.
 - To adjust the volume, you will use the forward and back buttons **[◀▶]** but this time hold them down. Hold down the forward arrow button **[▷]** to raise the volume (the unit will beep when it reaches maximum volume), and hold down the backward arrow button **[◁]** to reduce the volume. Simply release the button when you have reached the desired volume.

Set Up

- Always set Glow to Sleep™ on a flat, stable surface, out of the reach of children.
- Plug the included micro USB cord into the back of the unit, and then plug it into an outlet using your own USB wall/power adapter. Please ensure the cord is not a hazard.
- If the unit is unplugged, the backup battery will work (when fully charged) for approximately 2 to 4 hours.
- When the battery is getting low, the unit will give you an audio alert. When charging, you will see a red light. When the unit is fully charged, the red light will turn off.
- To turn on the unit, press the power button **[P]** on the far left, at the back of the unit. You will hear an audio alert confirming power is on.
- There are three sound modes: Bluetooth® (default), Sound Effects and SD Card. Use the mode button **M** on the far right to switch modes.
- The lights are on as default. If you wish to turn the lights off and only use sound, press and hold down the mode button **M** until the lights turn off.

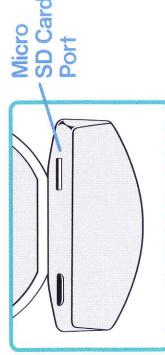

Micro SD Memory Card Mode

- You may use your own SD card with Glow to Sleep to play your own recorded sounds, songs, stories, etc.
- Insert your SD Card. You must press down on your card as you insert it. Use your fingernail or other thin, flat tool to push down on the card as you push it in. This will get it to stay in and play. Use the same technique to remove your SD card.
- You will hear an audio alert confirming your SD card is properly inserted.
- The audio on your SD Card will play through to the end, so keep this in mind when filling your Micro SD Card. The audio will not loop, or play over and over continually. It will play from beginning to end once.
- To adjust the volume, you will use the forward and back buttons **[◀▶]**. Hold down the forward arrow button **[▷]** to raise the volume (the unit will beep when it reaches maximum volume), and hold down the backward arrow **[◁]** to reduce the volume. Simply release the button when you have reached the desired volume.

WARNING: This item is not a toy. Do not place product in crib. Not suitable for children. Strangulation hazard.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions and keep them for future use.
 - Observe all warnings and follow instructions.
 - Do not tamper with the cord for any reason.
 - Only use this product as it was intended.
 - Do not use near water.
 - Do not use near any heat source or apparatus that produces heat.
 - Clean only with a dry cloth.
 - Only use cord as intended.
 - Do not leave unit plugged in during lightning storms or when left unused for long periods of time.
 - Do not attempt to service the unit yourself. All servicing should be referred to qualified personnel, and done so under the following conditions:
 - When power supply or cord has been damaged.
 - When liquid has been spilled, or objects have fallen into the unit.
 - If liquid has been spilled, or objects have fallen into the unit.
 - If the unit is exposed to rain or water.
 - If the unit has been dropped or damaged in any way.
 - If the product does not operate normally when following the instructions.
 - When the product exhibits a distinct change in performance.
 - In the event that a replacement part is needed, ensure the service technician uses parts specified by the manufacturer to avoid fire, electric shock or other hazards.
- Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





For these and other Mirari®
toys, clocks and night-lights,
visit myMirari.com



Bluetooth® Mode (default)

You may use Bluetooth® with Glow to Sleep to play your own recorded sounds, songs, stories, etc. Make sure your unit is in Bluetooth mode (to get to this mode, press until the audio alert says "Bluetooth mode." Bluetooth is also the default mode when turning on your unit).

- Any device with Bluetooth can be used with the unit (e.g. smartphone, tablet, computer). Simply pair your device with the unit by going into your device settings. Once the unit is paired, you will hear an alert confirming the connection.
- The unit is basically now acting as a speaker for your "playlist." The audio will play looped, repeated, etc., however you set it up on your device.
- You can control volume and song selection from your device, or from the Glow to Sleep unit using the buttons on back:

- To change songs/sounds, tap the forward or back buttons [◀] [▶].
- To adjust the volume, you will use the forward and back buttons, but this time hold them down. Hold down the forward arrow button [▶] to raise the volume (the unit will beep when it reaches maximum volume), and hold down the backward arrow button [◀] to reduce the volume. Simply release the button when you have reached the desired volume.

- It is important to keep in mind that because the unit is acting as a speaker for your device, any audio alerts (phone calls, texts, etc.) can come through to the unit. We recommend setting your device in Do Not Disturb mode.

LIMITED WARRANTY

Making a Warranty Claim, Outside of the United States

This product is distributed outside of the United States, in select regions, by authorized distribution partners. Patch Products does not handle foreign warranty claims. For warranty service please contact your point of purchase for assistance. Patch Products products purchased from U.S. retailers and shipped to international locations are not covered under our domestic warranty policy.

Note: Actual product may vary slightly from images shown.

Coverage: In the United States, Patch Products, LLC warrants this product against defects in original material and workmanship for a period of one year under normal use and conditions. Warranty coverage outside of the United States may vary. Please see information regarding non-U.S. warranty claims, below.

Non-Coverage: This warranty does not cover customer instruction, installation, or set up problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification. This warranty does not cover damage due to improper operation or maintenance, connection to an improper voltage supply, or attempted repair by anyone other than Patch Products, LLC. This warranty does not cover products sold "as is" or "with all faults". This warranty is valid only in the United States and is invalid if the product serial number has been altered or removed.

Making a Warranty Claim, United States

Please check patchproducts.com for the latest information pertaining to warranty claims. At the company's discretion, Patch Products, LLC will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or received invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE. NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

© 2015 Patch Products, LLC. All Rights Reserved.
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.