

MANUAL BOOK

WELCOME

Congratulations on your new phone purchase!

This guide will help you to quickly come up to speed on the important features of your phone. Keep in mind your phone has....

A Fast Processor

Featuring the 1.3GHz Quad-Core ARM® Cortex™-A53 CPU that delivers amazing gaming experience, great performance for speedy application, web page loading, fast multitasking, and smooth video playback.

Intelligent Camera

 
Capture the moment in challenging environments with an intelligent camera featuring a 13MP AF rear camera. Featuring advanced image processing for quality, color accuracy, low light capture and facial detection. These smart features mean that no matter how you capture your images, they come out exactly the way you want them.

Great Entertainment Section


Watch movies and record videos in HD & FHD resolution at 30fps.

Note: Screen images and icons are simulated for the purpose of this guide. Actual displays may vary. Instructions in this guide may change depending on the software version on your device.

YOUR PHONE FRONT-VIEW

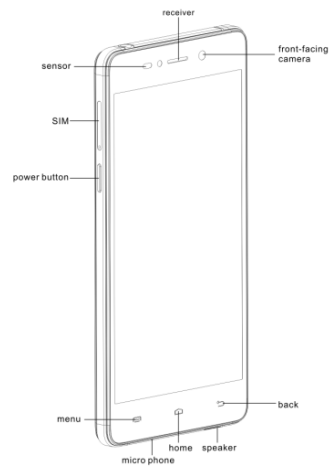

YOUR PHONE BACK-VIEW

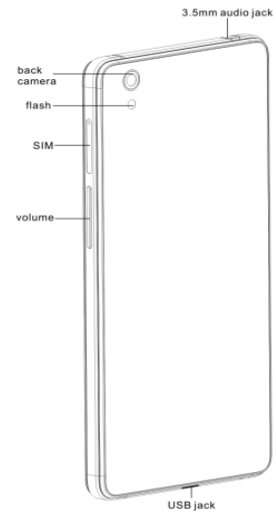 


CHARGE THE BATTERY

Before using your phone for the first time, charge the phone for four hours.

To charge the battery:


1. Attach one end of the USB cord to the phone's micro-USB port and the other end to the plug.
2. Plug the phone into the socket.

 For the best battery life, let your battery drain down to at least 20% before recharging, and do not leave your phone plugged in after it is fully charged.

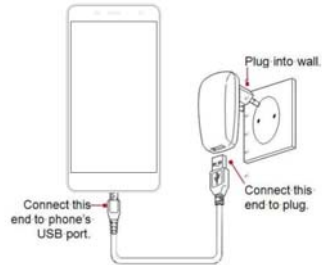


INSERT SIM AND MicroSD CARD

 Please follow as shown on the label on the phone. Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.

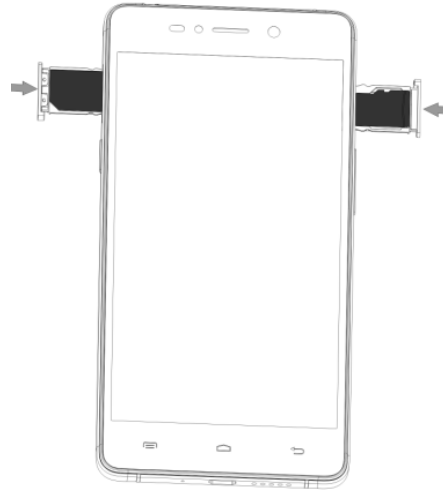

TURN THE PHONE ON & OFF

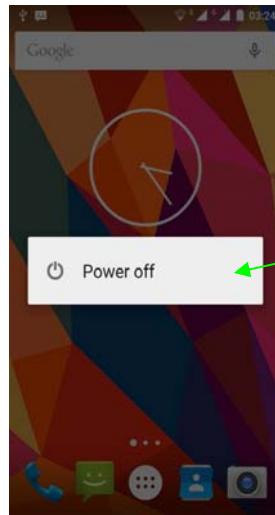 

Hold down the power button to turn the phone on.

 
Hold down the power button then touch **Power OFF** to turn the phone off.



DIM, LOCK & WAKE THE PHONE


When the power is on and you want to dim the screen, press the power button.

When the screen is dimmed and you want to wake the phone, press the bottom and slide up to unlock

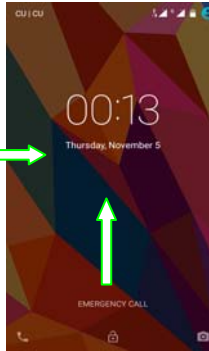

*For additional protection, easily set a security lock.
Press menu → **settings** → **Security**→ **Screen lock**.*

 HOME SCREEN

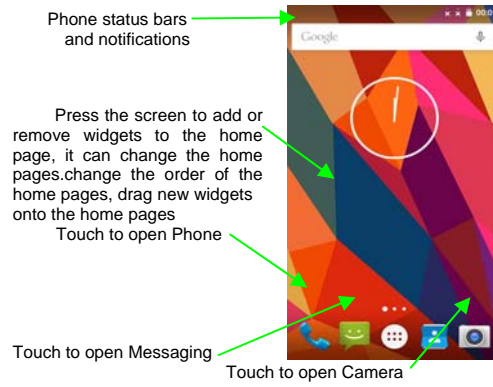





Tip: To move any icon, touch and hold the icon, then drag it to a new location.

STATUS BAR

The Status bar shows your phone's status and notifications.
(Notifications are described on the next page.)



Icon	Description
	Mobile network strength
	WLAN connection
	Battery strength/charge
	Airplane mode.

 
NOTIFICATION PANEL

The Notification panel is your center for new events—like new e-mail, voicemail, updates, and more.



Drag down to display
notifications

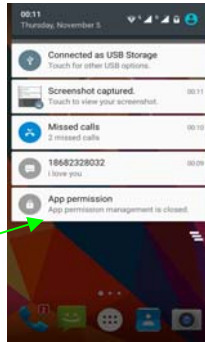

Touch a notification to
respond






MAKE & ANSWER A CALL

1. From the Home screen, touch .
2. Dial a number using the dial pad.
3. Touch  to make a call.
Tip: You can use the call log, contacts tabs to quickly make a call.




Answer a call: press answer

SEND A TEXT

1. From the Home screen, touch .
2. Touch .
3. Touch the To field, then enter a recipient.
4. Touch the space field, then enter a message.
5. Touch  to send the message.

 
SET A RINGTONE

1. From the Home screen, press settings→sound¬ification
→  →phone ringtone.
2. Touch a ringtone to hear it, then touch OK to select it.


TAKE A PICTURE

1. Touch the camera icon to enter camera interface.
2. In the Camera app, tap the screen to focus on a specific area.
3. Press the camera button all the way down to take a picture.



TIP: Also launch the camera by pressing the camera icon on the home screen. Capture the photo using the on screen camera button.

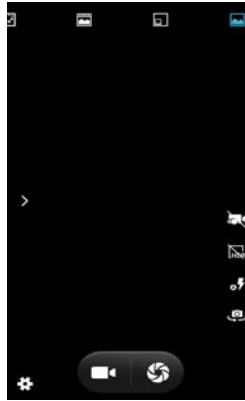

SHOOT A VIDEO

1. Touch the camera icon to enter camera interface.
2. In the Camera app, select Video. 
3. Press the camera button to begin filming, and press again to stop filming.

 SHARE A PHOTO

1. From the Home screen, touch 
2. Touch an album to open it then touch the picture you want to share.
3. Touch 
4. Touch an application for sending the photo (such as Gmail to mail the photo, or Messages to send the photo via messaging).

CONNECT TO Wi-Fi

1. Press → settings → Wi-Fi
2. To turn on Wi-Fi.
3. Touch a network to connect to it.

The information contained herein is subject to change without notice. All statements, information and recommendations contained herein do not constitute a warranty of any kind, either expressed or implied. Please review this product guide thoroughly, with particular attention paid to any safety sections, to be sure that you use your phone safely.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types 4G-LTE Smartphone (FCC ID: 2AGMA-SGB1G) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, and wireless router(hotspot) are 0.323W/kg, 0.814W/kg, and 1.268W/kg respectively. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation

is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Thanks for Being
With