

YY151 what's this do?



HOW do I...?

Turn it on/off? Press and hold to power Pipsqueak® on. To power Off, press and hold then select "Power Off" from the pop up menu.

Pair it to a smartphone? On Pipsqueak®, select from the homescreen, then Select the "Make Device Discoverable" button. On your smartphone, turn on Bluetooth in Settings, and select "Pair Device" when prompted to do so. To change the name Pipsqueak Broadcasts, select "Rename Device" and input the desired name (for example, "Lilah's Pipsqueak").

Load Music, Videos & Photos? With Pipsqueak® powered on, plug the included USB cable into the bottom of Pipsqueak and into a computer. Open up C: drive on the computer, Pipsqueak® should be viewable like an external drive. Drag and drop the desired media files saved in the following formats: Music-MP3, WAV, MIDI, Videos-MP4, MOV (best formatted in standard definition at 320x240 pixels), Images-JPG, GIF, PNG, BMP.

Make and receive calls? Be sure Pipsqueak® is paired and connected to a "parent" phone with active calling service. When a call comes into the "parent" phone, Pipsqueak® will ring along with the parent phone. To answer the call on Pipsqueak®, press . To hang up an active call, press . Press the center button during a phone call to turn the speakerphone (your answer) on and off.

Charge it? Use the included "Vital" USB cable and adapter to charge Pipsqueak® in approximately 100 minutes.

HOW do I...?

Navigate the menus? Use the D-Pad buttons (up, down, left, right) to move through the menu choices. Press to select. Press one time to back up one level in any menu. Press and hold to go back to the main home screen.

Listen to Music? Select from the home screen. Use the arrows to scroll through the song choices, press to select a song. Press to play a song, press again to pause the song. Press the arrows to skip songs. Press and hold to fast forward a song, press and hold to rewind a song.

Watch Videos? Select from the home screen. Use the arrows to scroll through the video choices, press to select a video. Press to play a video, press again to pause the video.

Remove the covers? Using the included "key," insert the tab into the slots at the top of Pipsqueak® and twist until the cover plates "pop" loose. Add Dangles to the two hooks located near the bottom.



Access the Micro SD card? Remove the front and back covers from Pipsqueak®. Use a finger nail to gently press the Micro SD card inward until it "clicks" then release pressure. To reinsert the card, pull it with the gold contacts facing up in the same direction as the display, then gently press in until the card "clicks" back into place.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.