



Digital CD Microsystem with Bluetooth®

NS-439



Instruction Manual

Please read carefully before use and keep for future reference.

Table of Contents

Thank You	3	AUX Mode	14
In the Box	3	Basic Operation	14
At a Glance	4	Setup Mode	15
Top View	4	Clock/Display	15
Bottom View	5	CD Care & Maintenance.....	16
Digital Display	5	Handling CDs	16
Remote Control.....	6	Cleaning CDs	16
Cleaning the Lens of the CD Player.....	16	Cleaning the Lens of the CD Player.....	16
Getting Started.....	8	Warnings and Precautions.....	17
Mounting the NS-439	8	Troubleshooting Guide.....	21
Connections	10	Specifications	22
CD Mode.....	11	Support	23
Basic Operation	11		
CD Functions.....	11		
Program Operation.....	12		
Radio Mode	12		
Basic Operation	12		
Preset Stations.....	13		
Bluetooth® Mode	13		
Basic Operation	13		

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at **www.naxa.com** and see all that we have to offer!


In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they cannot help you, please contact our Naxa Support team at **www.naxa.com/naxa_support**.

- NS-439
- Stereo Speakers (x 2)
- Remote control
- 3.5mm AUX cable
- Mounting plate with screws (2 x 10 PWA)
- Table top stand
- AC power cord


At a Glance

Top View

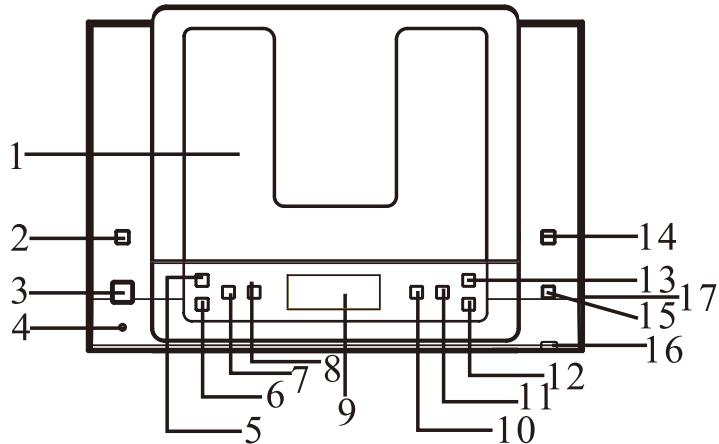


1. CD Door
2. FUNCTION button (CD/Radio/BT/AUX)
3. STANDBY button
4. Standby/Bluetooth LED
5. REPEAT/M-UP button
6. RANDOM/M-DN button
7. ▶/FM ST. button
8. ■/BAND
9. LCD display lens
10. SKIP/SEARCH ◀◀
11. SKIP/SEARCH ▶▶
12. VOL-
13. VOL+
14. OPEN button
15. PROGRAM button
16. Remote sensor
17. AUX IN jack

Bottom View

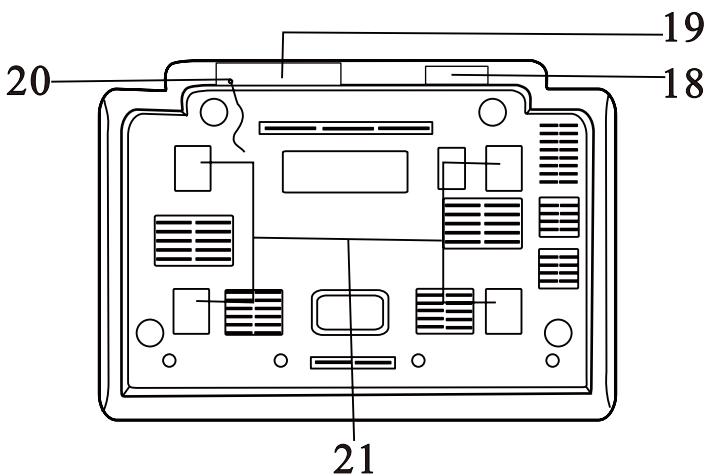


- 18. AC IN jack
- 19. Speaker jacks
- 20. FM antenna
- 21. Wall mounting slots

Digital Display

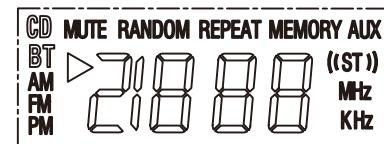


Remote Control

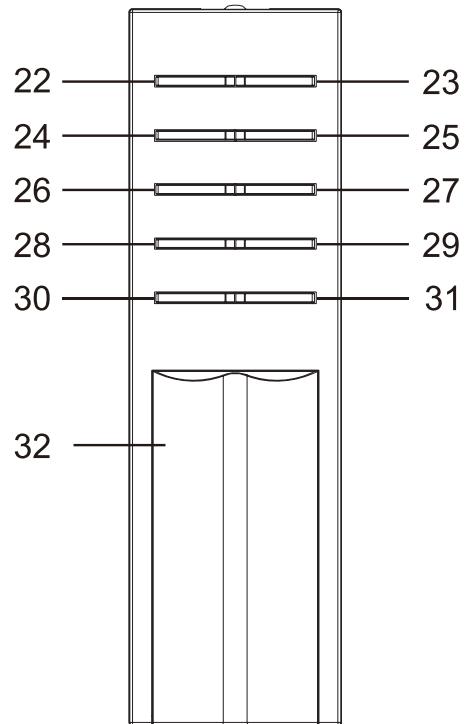

- 22. STANDBY
- 23. FUNCTION (CD/RADIO/BT/AUX)
- 24. ▶/FM ST.
- 25. ■/BAND
- 26. REPEAT/M-UP
- 27. PROGRAM
- 28. SKIP/SEARCH ◀◀
- 29. SKIP/SEARCH ▶▶
- 30. VOL-
- 31. VOL+
- 32. Battery compartment

About the Remote Batteries

Refer to the diagram. Remove the battery compartment cover located on the front of the remote control. Insert 2 x "AA" batteries, making sure to match their polarities (+/-) to the markings found on the inside of the compartment. Replace the cover.

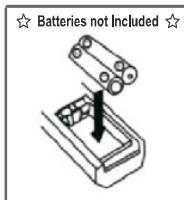

To use the remote, point it at the remote sensor of the player. Operate the remote within 15 feet of the sensor and at an angle of +/-60 degrees.

Batteries in the remote will last for approximately 6 months under normal use. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.

Remove the batteries from the remote if it will not be used for a long period of time.




The battery used in this device may present a fire or chemical burn if mistreated. Do not recharge, disassemble, incinerate, or heat the battery (~212°F). Keep batteries away from children.

Getting Started


Mounting the NS-439

To mount the unit to the stand

1. Seat the mounting bracket on the stand while making sure that the screw hole positions are aligned with each other (refer to the drawing below).


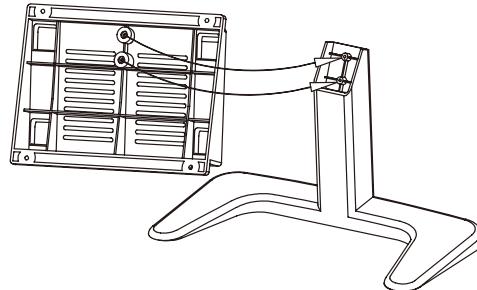


2. Use two of the included screws to fix the bracket to the stand. Mount the unit onto the bracket by aligning the 4 slots on the bottom of the unit with the 4 hooks of the bracket.

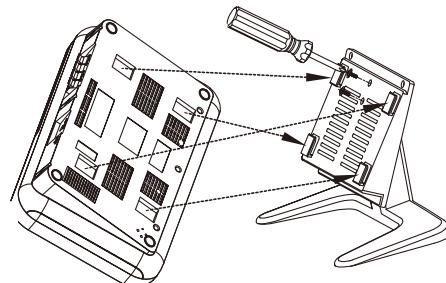

To mount the unit to the wall

1. Mark 4 points on the wall and then drill holes at each point. (Use the mounting bracket and a level as a guide when marking the points.)
2. Fix the bracket to the wall with 4 screws.
3. Mount the unit onto the bracket by aligning the 4 slots on the bottom of the unit with the 4 hooks of the bracket.

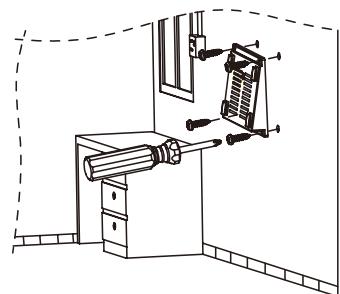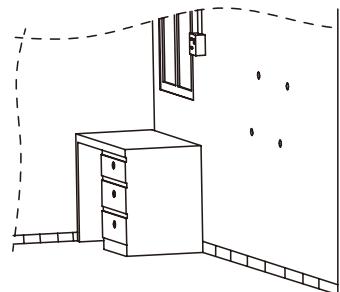

If mounting onto drywall, you will need to install drywall anchors before screwing the bracket into the wall.

Connections

Speakers

Always connect the speakers before connecting the power supply.

- Connect the black wire of the left speaker to the black terminal marked “L-” on the rear of the main unit.
- Connect the red wire of the left speaker to the red terminal marked “L+” on the rear of the main unit.
- Connect the black wire of the right speaker to the black terminal marked “R-” on the rear of the main unit.
- Connect the red wire of the right speaker to the red terminal marked “R+” on the rear of the main unit.

Auxiliary (optional)

Use a 3.5mm male-to-male line-in cable to connect the line-out or headphone out jack of an audio device to the AUX IN jack [17] of the unit.

Power

This unit runs on AC 120V power.

1. Plug the power cord into an AC wall outlet.
2. To turn the player on, press the STANDBY button [3].

CD Mode

CD Mode allows you to play regular audio CDs.

Basic Operation

- Press **FUNCTION** repeatedly to select the CD mode.
- To open the CD Door, press the CD open button on the top of the unit. Insert a CD with its label facing up. Close the CD door (it will click into place).
- The system will read the disc and then start playback automatically.
- Press the **VOL+** and **VOL-** buttons to adjust the volume level.

CD Functions

Play/Pause/Stop

- Press **▶/FM ST.** during playback to pause. Press **▶/FM ST.** again to resume playback.
- Press **■/BAND** during playback to stop the disc.

Scan through the current track

- Press and hold **SKIP/SEARCH◀◀** to scan through the current track in reverse.
- Press and hold **SKIP/SEARCH▶▶** to scan through the current track in a forward direction.

Previous/Next Track (skip)

- Press **SKIP/SEARCH◀◀** to skip to the next track.
- Press **SKIP/SEARCH▶▶** to skip to the next track.

CD Repeat Modes

While a CD is playing, press the **REPEAT/M-UP** button to select the following repeat options: Repeat, Repeat all, Random Play.

- Repeat: Repeat the current track.
- Repeat All: Repeat all track on the CD.
- Random: Play all tracks on the CD in random order.



Random play mode will not work during Program play mode.

Program Operation

CD tracks can be programmed to play in the order you want.

In CD Disc Mode

1. Press **■/BAND** to make sure playback is stopped.
2. Press the **PROGRAM** button to enter program mode. The LCD screen will display and flash **[P01]** and **[PROG]**.
3. Press **SKIP/SEARCH** **◀◀** or **SKIP/SEARCH** **▶▶** to select a track number, and then press the **PROGRAM** button to store it in memory. The LCD will display and flash **[P02]** and **[PROG]**.
4. Repeat the previous step until you have selected up to 20 tracks. Press **■/FM ST.** to start Program play.



*Pressing **SKIP/SEARCH** **◀◀** or **SKIP/SEARCH** **▶▶** during Program play will display the programmed track number. Press **■/BAND** twice to clear the program list. The program list will also be cleared if you open the CD door or if the unit is unplugged.*

Radio Mode

Listening to AM or FM radio broadcasts.

Basic Operation

- Press **FUNCTION** to select the tuner mode.
- Press **■/BAND** to select the AM or FM band.
 - AM: Listen to AM broadcasts.
 - FM: Listen to FM broadcasts.
- Press **■/FM ST.** to change between FM stereo and FM mono reception modes.
 - Choose FM stereo mode for stations with a strong signal. The FM ST indicator will light on the LCD display when the tuner is locked on a stereo broadcast.
 - Choose FM mono mode for stations with a weaker signal.
- To optimize reception:
 - For FM broadcasts, extend and reposition the FM radio antenna located on the rear of the