


Setup Photographs

X-axis (EUT sits straight up), 30-1000 MHz




Y-axis (EUT sits on its long side), 30-1000 MHz

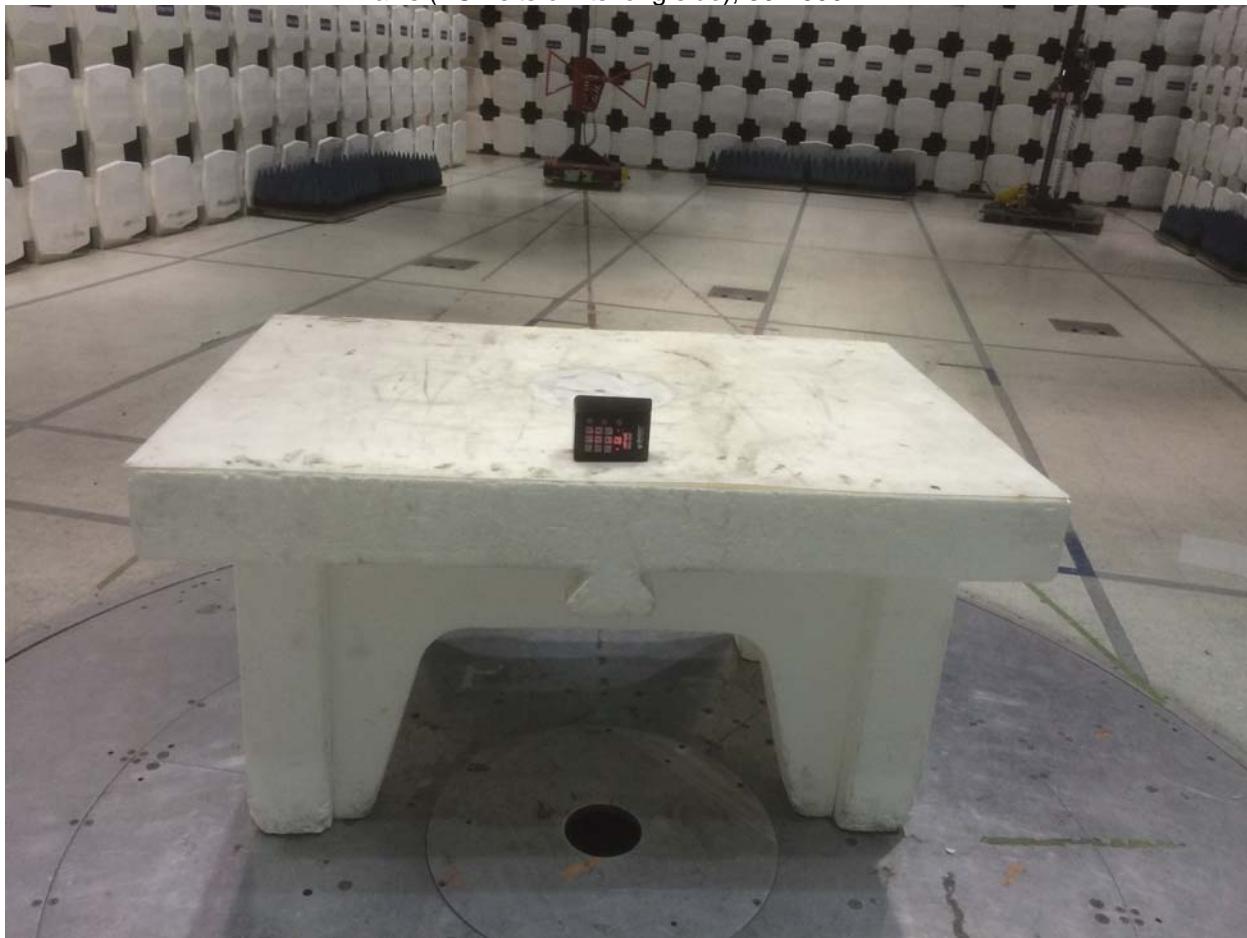


Z-axis (EUT sits on its back), 30-1000 MHz



X-axis (EUT sits straight up), 1-4.5 GHz

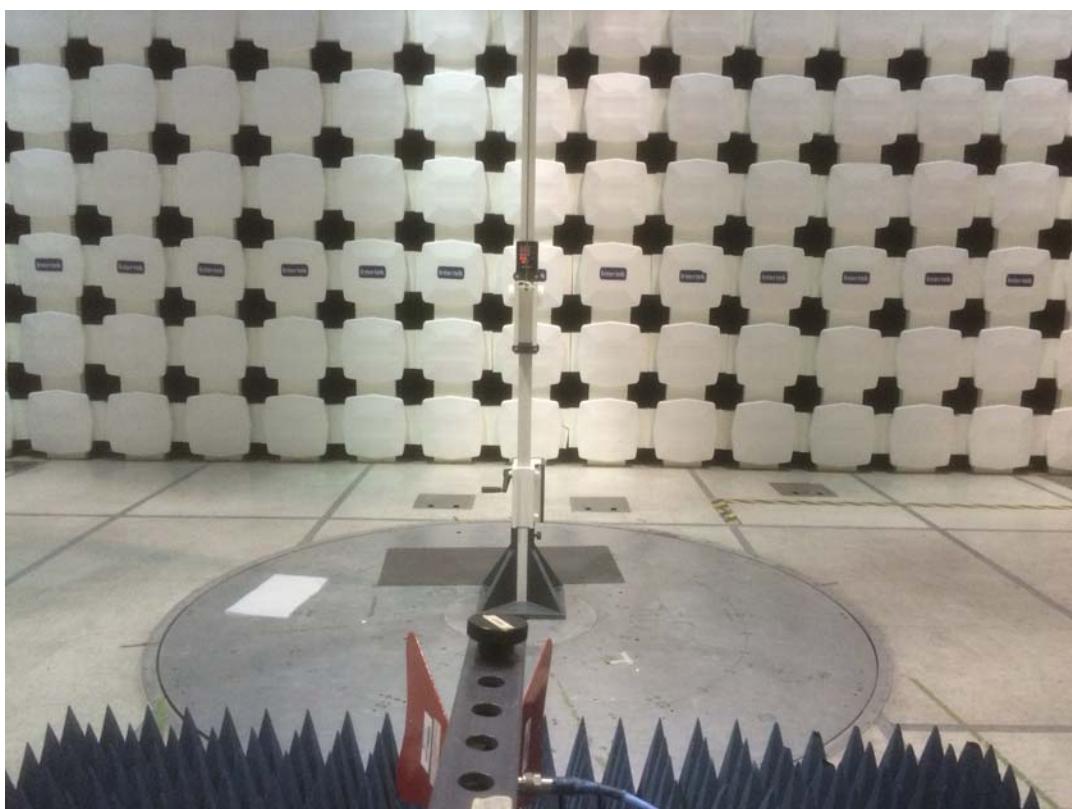

Y-axis (EUT sits on its long side), 1-4.5 GHz

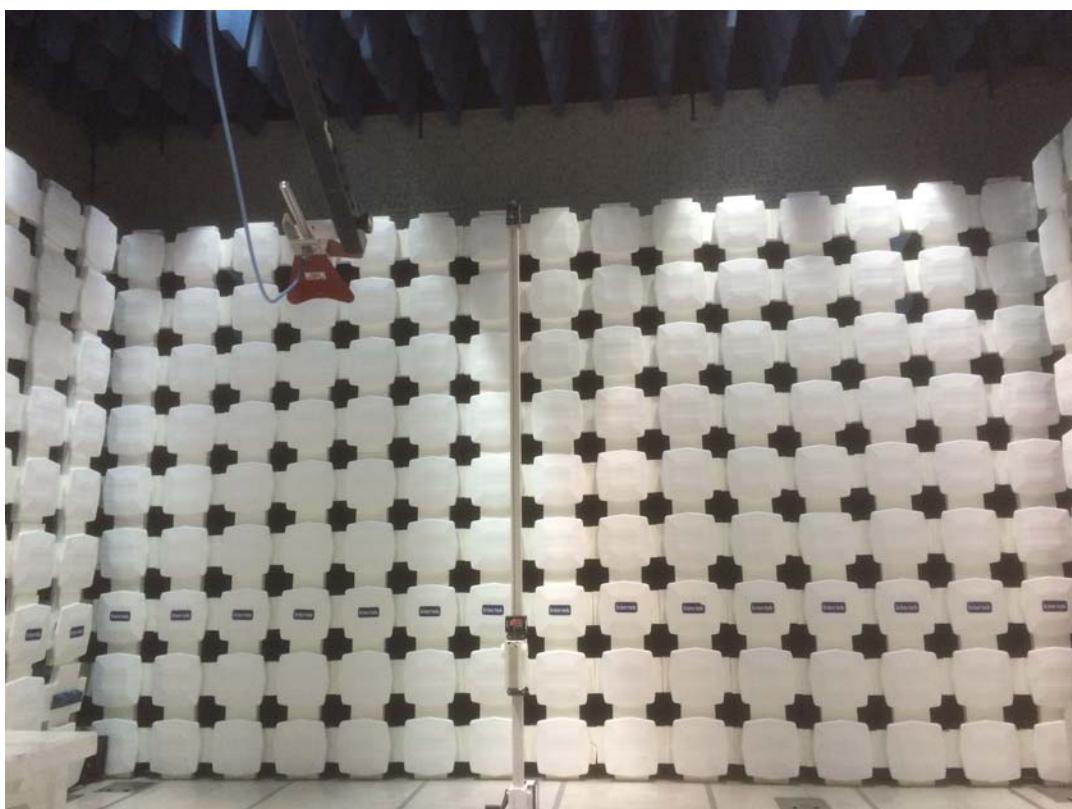

Z-axis (EUT sits on its back), 1-4.5 GHz

