

4. The alarm will sound again after 5 minutes. The **z<sup>z</sup>** icon (**A2**) flashes on the display during the snooze time. This process can be repeated 7 times. After snoozing the clock 7 times, the alarm will not sound again.
5. When the alarm sounds,  icon (**A4**) flashes on the display.
6. Slide  ALARM switch (**B1**) to **OFF** to deactivate the alarm function or press any of the buttons to stop the alarm, with the exception of the **SNOOZE / DIMMER** button (**C3**). If no selection is made, the alarm signal will sound for 3 minutes and then stop automatically.

## USB PORT

The maximum current output of USB port is 2A.

*NOTE: Only charge devices that self-regulate.*

## BACKLIGHT

### Backlight Brightness Adjustment

Press the **SNOOZE / DIMMER** button (**C3**) to switch the backlight brightness. There are three selectable options: Low, Medium, High. Every press of the **SNOOZE / DIMMER** button (**C3**) will alternate through the 3 options.

### LED Backlight Colour

1. Press the ▼ or ▲ button (**C1** or **C4**) to select your preferred LED backlight colour.
2. To have the LED backlight colour change automatically, hold the ▼ or ▲ button for 2 seconds. Press the ▼ or ▲ button again to stop the color changing.

## QI WIRELESS CHARGING

*NOTE: You must have a Qi enabled device to use the Qi Wireless Charging function of this clock. If you have an iPhone 7 or older, you likely are not able to use this function. You must check your device's user manual to confirm if your device is compatible with this feature.*

1. Place your Qi enabled device at the center of the charging pad **(C2)**.
2. When a successful link occurs between the clock and the device, the  icon **(A6)** will appear on the screen. While the device is charging, the ⚡ icon **(A7)** will continually flash on the screen. When the device is fully charged, the ⚡ icon **(A7)** will stop flashing.
3. If an **ERROR** icon flashes on the screen, it means there is a problem which prevents the device from charging. Here are some possible fixes to try:
  - Remove any metallic object between the device and charging pad **(C2)**, including metallic cases.
  - Remove the device from the charging pad **(C2)** and wait until the **ERROR** icon disappears. Place the obstruction free device at the center of the charging pad **(C2)** to try again.

### WARNING:

Do not place any metallic object between the Qi enabled device and charging pad **(C2)**, this may lead to overheating and cause damage to both the device and the charging pad **(C2)**.

## CLEANING


1. Do not expose the unit to extreme temperatures, water, or severe shock.
2. Avoid cleaning the unit with any corrosive materials, such as perfume, alcohol, or cleaning agents. Always clean the unit with a damp cloth. Never spray any cleaning agents onto the unit directly.

*NOTE: You must unplug your clock from the electrical outlet before cleaning to avoid the risk of shock or damage.*

Our Products contain high quality components and are designed to facilitate recycling. Our products or product packaging are marked with the symbol below. The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment. For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales / service representatives.



## VUE D'ENSEMBLE

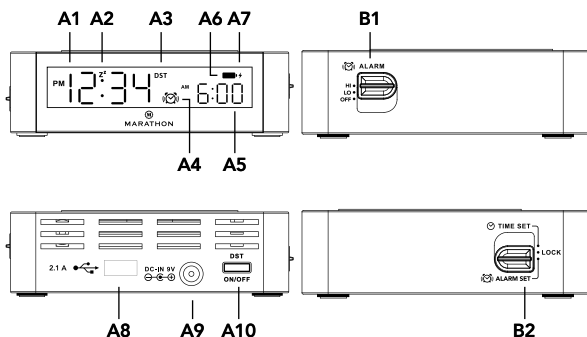


### Partie A – Recto et verso

- A1: Temps
- A2: Icône zzz
- A3: Icône **DST**
- A4: Icône
- A5: Temps d'alarme
- A6: Icône
- A7: Icône
- A8: Port USB
- A9: Prise pour adaptateur de climatisation
- A10: Bouton **DST** ON/OFF

### Partie B – Côtés

- B1: Interrupteur ALARM
- B2: Interrupteur  
 TIME SET / ALARM SET

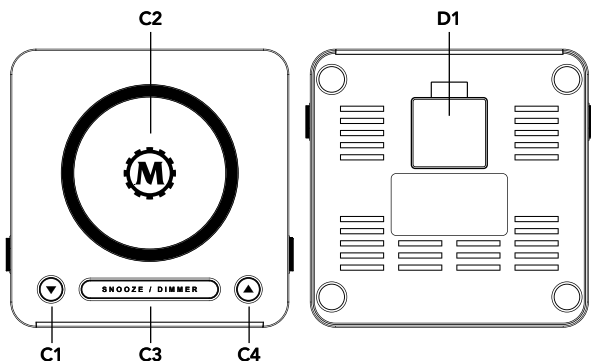

### Partie C – Haut

- C1: Bouton ▼  
 C2: Bloc de charge  
 C3: Bouton  
       SNOOZE / DIMMER  
 C4: Bouton ▲

### Partie D – Bas

- D1: Compartiment  
       des piles

## CARACTÉRISTIQUES

- Charge sans fil Qi: Il suffit de placer n'importe quel appareil de recharge sans fil compatible avec le Qi sur le bloc de recharge. Aucune connexion par câble n'est nécessaire.
- Horloge numérique avec fonction d'alarme quotidienne.
- Écran LED couleur vif et lumineux.