


4.


76.2 mm

76.2 mm

Portable LED Wireless Speaker



FCC ID: 2AGR4-GS104768




Instruction Manual

SPECIFICATION

- Item: GS104788
- IPX4
- 33ft operating distance
- 1200mAh battery
- 40mm driver
- Approx. 3-4 hour play time
- Output power 5 watt
- Input - 5V/1A
- TF Card, 3.5mm Aux-in, Type-C Charging port

BUTTON FUNCTIONS

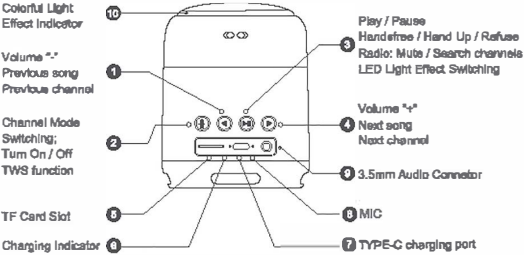

1. Short press to the previous song;
Long press volume down;
When in Radio mode, shot press to previous channel.

2. Long press to power ON/OFF;
Short press transfer to Radio Function;
Double press to turn on TWS funtion.

3. Short press to play/pause/handsfree/hand Up;
Long press to refuse the phone call;
When in Radio mode, short press to mute the speaker and long press to search for channels;
Double click to switch the light effect of top LED light circle.

4. Short press to next song;
Long press volume up;
When in the Radio mode, short press to next channel.

5. TF card Slot.

6. Charging indicator light, the red light is always on when charging, and the red light is off when fully charged.

7. Type-C charging port.

8. MIC.

9. 3.5mm Audio connelor.

10. Dazzle light indicator on the top.
1) The top LED light for turning on is blue and flashing quickly;
2) There are 7 colors: blue, red, orange, yellow, green, white, and purple, double press the Pause/Play button to switch different colors and effects;
3) Same LED light effect for TF card, Radio, and Wireless mode;
4) AUX-in mode, the blue LED light is always on, press Pause/Play button, it flashes like a breath.

PAIRING THE DEVICE

Press the ON/OFF button for 2-3 seconds or until you hear "di di di"

On your device's wireless connection menu, find and select "GEMLINE SPKR" to play music.

TWS FUNCTION

Turned on two speakers, press one of the "Ⓢ" buttons two times then will hear "di di di" sound, TWS paired. Turn on the wireless feature on your mobile device, find and pair with "GEMLINE SPKR" to play music.

1

2

3

CHARGING THE SPEAKER

- Plug the charging cable into the charging port of the speaker.
Plug the USB into a compatible power source
- The red LED will turn on and indicate if the speaker is charging.
- Once the speaker is fully charged, the red LED will turn off. When the device Indicates the battery is low, approx. 2-3 hours of charging time is needed to fully recharge the battery.
- When the battery is low (around 20% battery) , the speaker will pop out "didi" sound and top LED light will flash red.

SAFETY INFORMATION

- Do not attempt to disassemble the device.
- Do not expose the device to extreme heat or flames.
- The speaker may become warm while charging. This is normal.
- Ensure all cable connections are removed and port cap is closed and tightly sealed before getting the speaker near water.
- Do not expose the speaker to water while it is charging. This may result in permanent damage to the speaker or power source.

PACKING LIST

- Speaker
- User Manual
- Type-C Charging cable
- 2-ends 3.5mm Aux-in cable
- Lanyard
- White gift box

FCC Caution:
This device complies with part I 5 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class 8 digital device, pursuant to Part I 5 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

4

5