 


Smart Finder

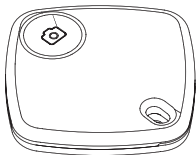

Model:70420B

FCC ID:2AGR470420B

User Manual 

How to change the battery

Step 1. Open the top cover from the snap gap



Snap gap



*Open the top cover from
the snap gap*

*Step 2. Press and fit the cell on belowing position,
negative pole towards the down side.*



Battery cell position



*The negative pole towards
the down side*

 
Step 3. Close the top housing.




3. Click "Device" icon to register.

4. Hold the camera button on the device.
It will automatically register after you hear two beeps.

5. Click the "+" icon on the top of right corner to register.



How to edit device

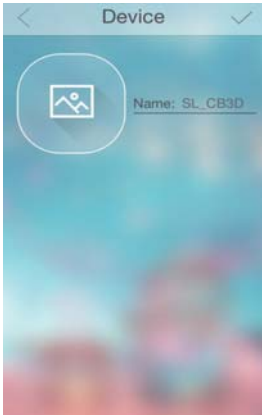 

While paired successfully, swift to this page and click ✓ on the top of right coner.

How to install APP

APP download and install

Method one: Search Small Lovely in APP Store or google market to download APP.

Method two: Scan the QR code on package to download Small Lovely APP.


How to register and pair

 
Bluetooth



- 1. Turn on your phone's bluetooth.*
- 2. Enter into "Small Lovely" APP.*




You can edit the device name- such as Wallet, Key etc. Press  to take pictures as marks.

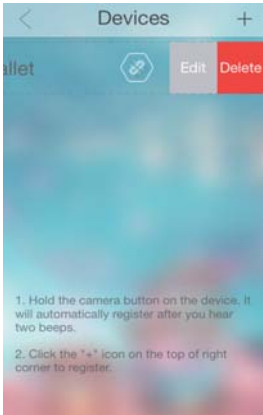

After registering successfully, slide on the left, you will see edit and delete button.



Click to connect, while the icon turn to  , it means connect successfully.

Product features

- *Smart search function*



 
illustration

“Last seen tracking” function is APP will record your thing’s last lost location on the map.

The user can use this feature to check your lost item’s last lost location. For example, you lose your key in your house. While you’re in office, you don’t need spend time to find it in your office, just check the APP.

(Remark: This is not GPS, it’s not so accurate.)

● ***Stuff lost alert***



Turn on “Antilost” software button, use anti-lost feature.

On connection status, when your phone lose connection with Smart Finder. Your phone will alert.

For example, you leave your wallet in your office and go out for a certain distance, your phone will alert and remind you to take it.

This function will remind you to take your forgotten things, it may avoid unnecessary trouble.

If you don't want to use this feature, please turn off "Anti-lost" software button.

● ***Phone finder***

On connection status, press the camera button repeatedly to ring your phone, help you find your phone in seconds.

For example, you want to make a urgent call and can't find your phone. It will help you find your phone easliy and save your precious time.

● ***Remote camera shutter***

Enter into APP "Selfie" function, use Smart Finder to take picture wirelessly.

The remote distance is far and speed is quick, you can hold your phone with tripod to take group and distance view photo.

And more, you can capture momentary picture.

On connection status

The user can push the speaker icon to ring smart finder which hangs by your valuables- such as key, bag, wallet ect.

You can also read from the percentage to know whether your thing is far or near. It will help you find your things quickly.

On disconnection status

The user can turn on your phone's bluetooth and go into APP to search the items that you want to find in proximity.

If can't be connected, please use "last seen tracking" function to check where is your thing lost.

Whatever, this function will help you find your misplaced or lost thing quickly in promixity. It will save your precious time.

Support phone

For IOS

Support bluetooth 4.0 , iOS 7.0 and above

Support iPhone4S&later, iPad4, iPad mini, iPod touch.

For Android

Support Bluetooth4.0, android 4.3 and above.

Support Samsung S4/S5, Xiaomi 2/3/4.

Cam button function

1. Power on

Long press Small Lovely cam button to power on.

2. Register

Hold the camera button to register after you hear two beeps.

3. Power off

Press camera button for five times to power off until you hear three beeps.

- *Last seen tracking*



illustration

Notes: While on connection status, it can't power off.

Search distance

*Outdoor use is within 50 meters.
Indoor use is within 35 meters.*

Attention

DON'T place the device in high temperature environment, or expose.

DON'T throw this product into fire or place on overheat environment.

DON'T maintain or modify by personally.

Please take out the battery cell if you don't use this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.