

MODEL NO.:BH-35

8.PC headphone function
Please keep headphone on power off, and connect the headphone to computer by AV cable, then you can use the headphone as a PC headphone. The indicator will be in red at this moment.


9.Card reader function
Please keep the headphone on turning on, and connect the headphone to computer by USB cable, then you can use the headphone as the card reader to load or copy data to memory card from computer. The indicator will be in red at this moment.

10.Recharge
When you use off the power of player, it'll take around 4 hours to recharge the power.
The LED indicator will be in red while charging and the LED indicator will be slaked as soon as the power is full.

11.Specification

Product Size	170*160*80mm
Weight	160g
PC Connection	USB2.0
Supporting Memory Card	Micro SD(TF) card
Supporting Music Format	MP3/WAV
Operating current	60mA,3.7-4.2V

1. Illustration

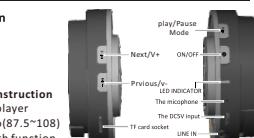

2.Function instruction

- 1.TF card player
- 2.FM radio(87.5~108)
- 3.Bluetooth function
- 4.Card reader function
- 5.PC headphone

3.Power on/off:

Power on: long press "P" button to open The headset. The player will enter into Bluetooth mode automatically while you turn on.

Power off: Long press "P" button to close The headset.

4.Mode shift

- 1.No insert TF card: press and hold "M" to shift between FM and Bluetooth.
- 2.Inserting TF card before turning on player: press "M" to shift, and the shift Sequence is BLUETOOTH-TF CARD MODE-FM.
- 3.Inserting TF card after turning on player: when you turn on player, it'll enter Bluetooth status automatically. And if you want to shift to other mode(TF card player or FM), then press "M" to shift, and the shift Sequence is BLUETOOTH-TF CARD MODE-FM .

5.TF CARD PLAYER

- 1.To play music: When you insert the TF card (micro SD card) with MP3 or WAV format music into the card slot, turn on the player, then you can enjoy the music. The LED indicator will be in green and will flash per 0.5 second while playing music.
- 2.To change the volume: press and hold "M" to increasing the volume; press and hold "M" to decreasing the volume.
- 3.To choose next or previous song: press "M" to the previous song; press "M" to choose next song.

6.FM radio

- 1.Auto search channel: when you shift the player into FM radio mode, press "M" again, then player will search FM frequency automatically. The indicator will be in green and flash fast at this moment. It'll save all the frequencies it searches while there is Micro SD memory card plug in TF card slot.
- 2.To change the volume: under FM mode, press and hold "M" to increasing the volume; press and hold "M" to decreasing the volume.
- 3.To choose next or previous channel: under FM mode, press "M" to the previous channel saved; press "M" to choose next channel saved.

7.Bluetooth function

- 1.Bluetooth mode: When you turn on the player, it'll enter Bluetooth mode automatically. And if it's under FM mode or TF card player mode, then you just press and hold "M" to enter Bluetooth mode again (the shift Sequence is BLUETOOTH-TF CARD MODE-FM).
- 2.Bluetooth pairing: turn on the headphone and enter Bluetooth mode (the indication light will be green and flash per 2 seconds), then use your mobile or other electronic equipment which have Bluetooth function to search the headphone, its display name is "BH-35", and your mobile will pop-up dialogue (only first time your mobile connect the player), then you just choose YES to connect, then the player have the voice reminder: the device connected. Then your mobile (or any other Bluetooth equipment) finish connection with the player.
- 3.Bluetooth re-pairing: any electronic equipment which you have paired the Bluetooth with this headphone will connect the headphone automatically as soon as they are in the same place and keep 10m in the range, and only the two with Bluetooth are under turn on status.
- 4.Listen music: under Bluetooth mode, you just play the music on mobile or any other equipment paired, and then you can enjoy the music by the headphone.
- 5.Pause/Play music: under Bluetooth status, you can press "M" or your mobile or any other Bluetooth media player's PAUSE/PLAY button to pause, and you can press "M" or your mobile (or any other Bluetooth media player's PAUSE/PLAY button to back to play music).

2

To change the volume: under playing music by Bluetooth mode, press and hold "M" to increasing the volume; press and hold "M" to decreasing the volume. Or you can adjust the volume on your mobile or any other Bluetooth media player.

To choose next or previous song: press "M" to choose the previous song; press "M" to choose next song. Or you can choose the song on your mobile or any other Bluetooth media player.

5.Talking phone:

a)Receiving calling: when you enjoy the music under Bluetooth mode, or the headphone Bluetooth standby, the headphone will receive calling automatically. And you just press "P" to get the calling.

b)Hang up the phone: Press "P" again to hang up the phone while you are speaking on phone. The headphone will transfer to play the music automatically as soon as the caller hangs up the phone if your headphone base on playing Bluetooth music case.

c)To change the volume: while talking on phone by Bluetooth, press and hold "M" to increasing the volume; press and hold "M" to decreasing the volume.

d)Redial/replay music: Whether you are listening music (under Bluetooth status) or the player is under Bluetooth standby, you press "M" one time to control pause or replay music, you press "M" 2 times continuously, then you can redial the phone number you have dialed last time.

4

coverage area, and the frequency signal is strong.

1. Please operate the following steps when you can't pair the Bluetooth:
 - Please assure your Bluetooth player is under power on status, and open the Bluetooth mode.
 - Please cancel all equipments you have connected before in your mobile Bluetooth mode before you connect you mobile phone with the Bluetooth player.
 - Please assure the distance between your mobile and the Bluetooth player you like to pair is 10m in the range, and please assure there is no obstacle and electronic jamming equipment.
 - Please restart your Bluetooth player, and re-pair with your mobile if you fail to pair them.

2). Under TF CARD PLAYER mode, please operate the following steps if you can't play music:

- Please assure your headphone player power on and shift to TF CARD PLAYER mode.
- Please assure your TF card has the music with MP3 or WAV format.

3). Please operate the following steps if you can't search any frequency in FM mode:

- Please assure your headphone player power on and under FM mode.
- Please assure your headphone is in frequency

7

8

9

Bit Rate	8K bps-320K bps
FM Frequency	87.5~108.0MHz
Operating Voltage	3.7-4.2V
Power Consumption	0.25W
Operating Temperature	0-50°C
SNR Rate	>80dB
Frequency Response	20Hz-20KHz
Earphone Output Power	(L)10mw+(R)10mw
Operating System	Windows98/SE/ME/XP
Lithium Battery Voltage	3.7V
Lithium Battery Capacity	300mAh
Lithium Battery Output Current	<100mA
Lithium Battery Working Time	4 hours for bluetooth music 7-8 hours for play card music
Bluetooth standby time	24 hours
Lithium Battery charging Time	4 hours
Earphone Socket	3.5MM

6

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.