

**CYCLIQ**

# Quick Start Guide

**FLY 12**

BC

Congratulations on choosing the  
No.1 brand in HD camera/light  
combos. This guide will help you  
get set up and begin capturing  
footage straight away.

A black and white photograph showing a close-up of a person's hand gripping a bicycle handlebar. A camera is mounted on the handlebar, pointing towards the front. The background is dark and out of focus.

For more detailed information  
please download the full manual  
from [www.cycliq.com/support](http://www.cycliq.com/support)

## WHAT'S IN THE BOX

Included in your Fly12 box is everything you need to go riding now!



**Fly12**

(1080P HD Camera & 400 Lumen Light)



**Quick Start Guide**



**16GB Class10 MicroSD Card**



**SD Card Adapter**



**31.8 Universal  
Handlebar Mounting Kit**



**Quick Bolt**



**Standard Tripod mount  
adapter (1/4 inch)**





**Safety Tether**



**Micro USB Cable**

## FLY12 OVERVIEW

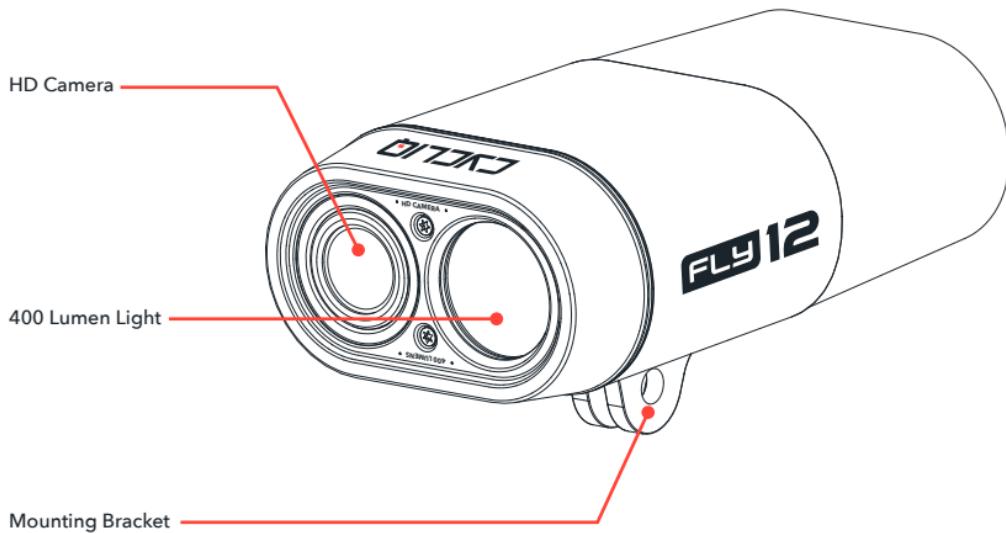

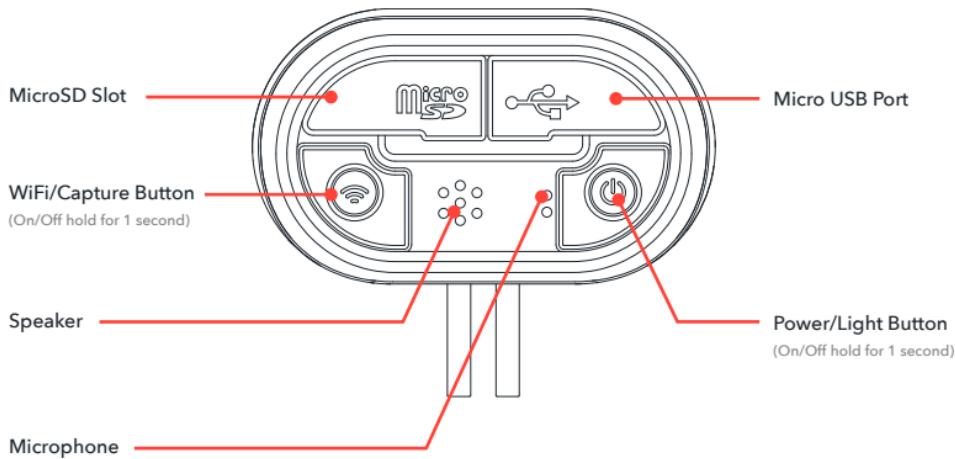

**TIP**

Capture Button - see page 13 for more details.


**TIP**

Light Button - When Fly12 is powered on a quick press of the power button will scroll through the different light modes.

## CONNECT & CHARGE

With the supplied USB cable, connect your Fly12 to a PC or Mac. Fly12 will be visible on your computer. Your Fly12 charge light will glow Red whilst charging and then Green indicating full charge.

Rating: DC5V, == 1200mA


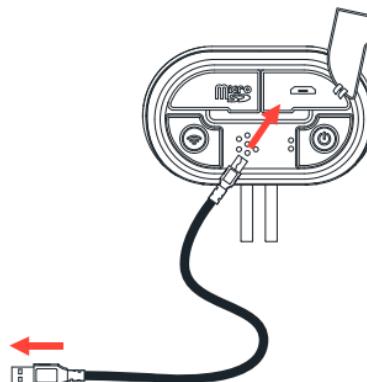


## MOUNTING FLY12

Fly12 can be mounted either above or below your handlebars. To use the universal mount (supplied with your Fly12) follow these simple steps.

**NOTE**

Other mounting options available at [www.cycliq.com](http://www.cycliq.com)

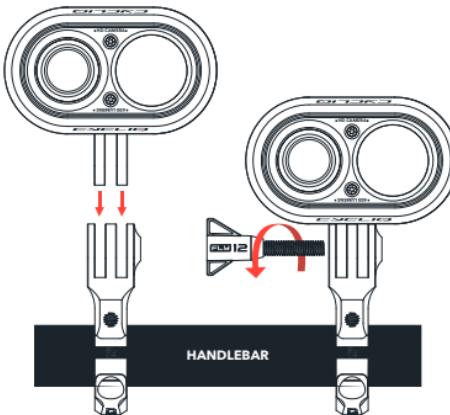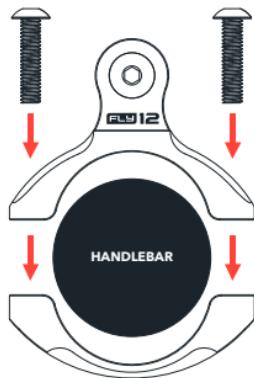

- 1 Attach the universal mount at the desired location and fasten the mount using the 2 fixing screws.

- 2 Slide your Fly12 mounting bracket into the adjoining mount and fasten the Fly12 Quick Bolt.

## FLY12 VISUAL AND AUDIBLE ALERTS

MODE	VISUAL ALERT	AUDIBLE ALERT
Recording (Full Charged)	Steady Flash: <b>Green</b>	Power On/Off 4 Beeps
Recording (3/4 Charged)	Steady Flash: <b>Green</b>	Power On/Off 3 Beeps
Recording (1/2 Charged)	Steady Flash: <b>Orange</b>	Power On/Off 2 Beeps
Recording (1/4 Charged)	Steady Flash: <b>Red</b>	Power On/Off 1 Beep
Power On (with SD card)	(Refer to charge level)	Power On Chime + Beep/s
Power Off (with SD card)	(Refer to charge level)	Beep/s + Power Off Chime
WiFi Loading	Rapid Flash: <b>Orange - Orange - Green</b>	2 Tone Beep
WiFi Ready	Steady Flash: <b>Orange - Green</b>	3 Rapid Beeps when ready
SD Card Error/No SD Card	Steady Flash: <b>Red - Orange</b>	Error Beep until Fly12 is turned off
Incident Trigger	Rapid Flash: <b>Red - Orange - Green</b>	3 Rapid Beeps when triggered

MODE	VISUAL ALERT	AUDIBLE ALERT
FW Upgrade	Rapid Flash in Red	N/A
USB Plug In	Solid Red - Charging Solid Green - Battery Full Charge Port LED (located inside Micro USB Port)	2 Tone Beep
Alarm	Rapid Flash: Red Steady Flash: Front White Light (HIGH)	Alarm Beep (continuous until turned off)
Optional Audible alerts for normal operation	N/A	Audible sound: 3, 5, or 10 minute Beeps

**TIP**

LED indicators and audible sounds are only an indicative guide to Fly12 charge levels.

## CYCLIQ COMMUNITY

Share your videos with the Cycliq community by uploading them to [www.cycliq.com/videos](http://www.cycliq.com/videos)

### TIP

Approved videos are automatically entered into regular prize draws.

Follow us on social media



@Cycliq



/Cycliq



/Cycliq



STRAVA

Free 3 month  
premium  
membership

## STRAVA PREMIUM MEMBERSHIP

Cycliq has collaborated with Strava to provide users the ability to overlay ride metrics direct to Fly12 footage. As a Fly12 owner you can access your FREE three month premium Strava membership by visiting [www.promo.strava.com/cycliq](http://www.promo.strava.com/cycliq)

## FLY12 CONNECTED

Download the CyliqPlus App for your smartphone.



### CyliqPlus Key Features:

- Review, edit and save footage
  - Quick access to settings
  - Strava metric overlay
  - Add safety tramlines
  - Alarm function
  - Share my videos



Download on the  
App Store



ANDROID APP ON  
Google Play

## FLY12 (MANUAL SETTING)

### Time and Date Setting


- Connect Fly12 to a PC/Mac.
- Follow the instructions within the help file to set your time & date stamp which is displayed on your footage.

#### TIP

This is an automated procedure when your Fly12 is paired via the smartphone app.

### Forgot your WiFi password?

- Connect Fly12 to a PC/Mac.
- Follow the instructions within the help file to reset your WiFi Password.

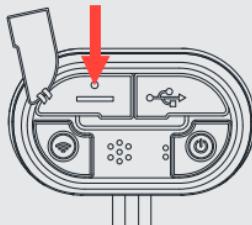

## MASTER RESET

In the event that a master reset is required, the reset button is located within the small cut out as illustrated. Carefully, using a fine object, depress the reset button gently to perform the reset.

## MICROSD CARD

Included with your device is a 16GB Class 10 SD card which has been pre installed. Fly12 supports up to 64 GB Class 10 SD cards.



#### TIP

To achieve optimal performance Cycliq recommends you regularly perform a full overwrite of your MicroSD card using SD Formatter - [www.sdcard.org/downloads](http://www.sdcard.org/downloads) (Free Software download).

## INCIDENT PROTECTION

In the event of an incident, Fly12 is equipped with two safeguards to ensure your important data is not lost.

- 1 If you are knocked from your bike and Fly12 tilts past 60 degrees for more than 5 seconds, it will record for a further 30 minutes before saving and powering off.
- 2 If you witness an event that you want to capture and retain when riding, simply press the WiFi button briefly. This will lock the current and previous file and prevent overwriting.

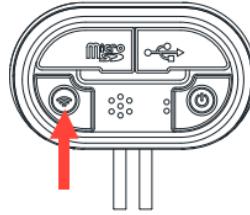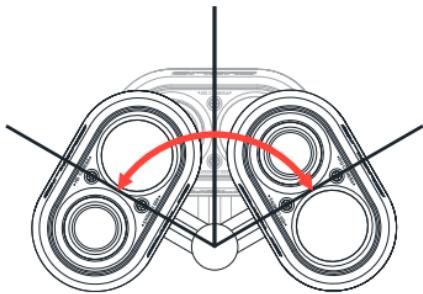

## FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## IC COMPLIANCE STATEMENT

This device complies with Industry Canada's Licence-exempt RSSs. Operation is subject to the following two conditions:

- 1 this device may not cause interference, and
- 2 this device must accept any interference, including interference that may cause undesired operation of the device.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

### CAUTION

To maintain compliance with the RF exposure guidelines, place the unit at least 20cm from nearby persons.

### WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.




## LIMITED WARRANTY

For comprehensive warranty information  
refer to

[www.cycliq.com/limited-warranty](http://www.cycliq.com/limited-warranty)

## CYCLIQ CUSTOMER SUPPORT

For questions, troubleshooting or video  
solutions visit [www.cycliq.com/support](http://www.cycliq.com/support)

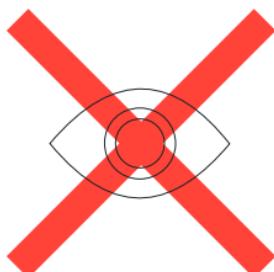

## CAUTION

Cycliq recommend the following:

- Do not look directly at the light.
- Do not leave the light on when not in use.
- Do not record or stream via WiFi with the USB or MicroSD ports open.

CYCLIQ

WWW.CYCLIQ.COM