



Product Operation Manual

3+
AGES

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

HOW TO INSTALL THE BATTERY


1. Turn the switch on the remote control car and remote control to the "OFF" position.
2. Use a Phillips screwdriver to open the battery cover.
3. Insert the battery, as shown in the figure below.
4. Close the battery cover.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. (Item No.: WMEG08-101-001) Product Name: REMOTE CONTROL CAR SERIES

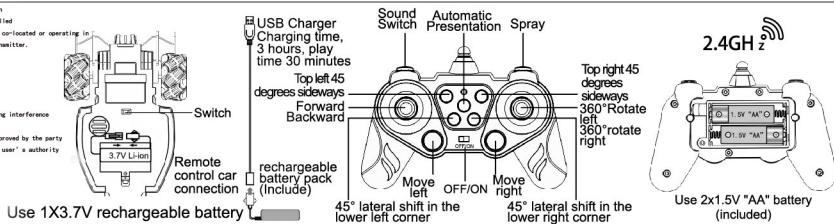


INSTRUCTIONS HOW TO USE THE BASIC OPERATION PICTURES OF THIS PRODUCT

FIGURE 1

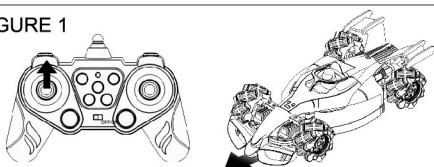


Push the rocker forward and the car moves forward.

FIGURE 2

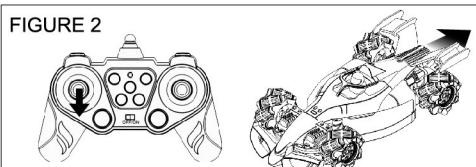


Push the joystick backwards, and the car moves backwards.

FIGURE 3

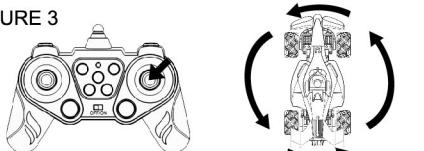


Push the joystick to the left and the car rotates to the left.

FIGURE 4

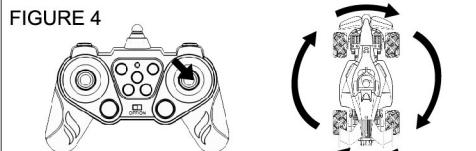


When the joystick is pushed to the right, the car rotates to the right.

FIGURE 5

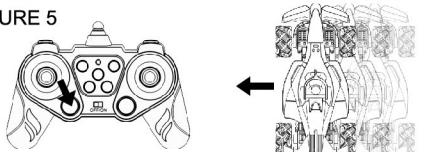


Press the left row to move the car to the left.

FIGURE 6

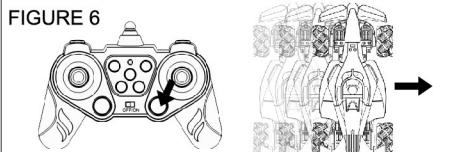


Press the right row, the car will go to the right.

FIGURE 7

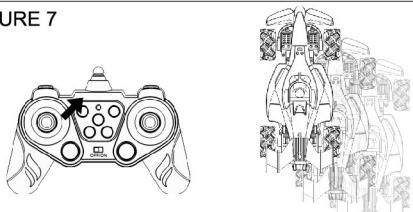


Press the top left corner 45° sideways to move the car to the top left corner sideways.

FIGURE 8

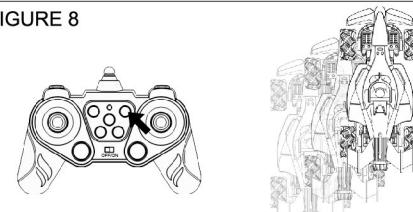


Press the top right side to move the car to the top right side.

FIGURE 9

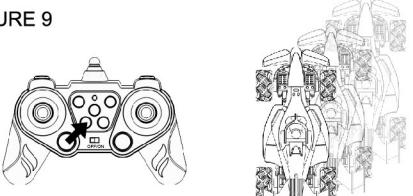


Press the lower left corner 45° side move, the car side move to the lower left corner.

FIGURE 10

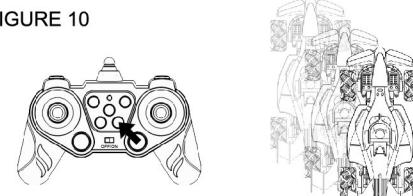


Press the lower right side move, the car to the lower right side move.

FIGURE 11

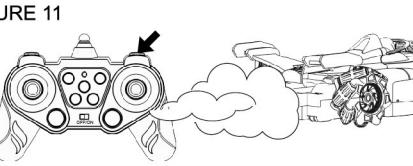

Press the spray button, the car emits smoke, press again to turn off the spray.

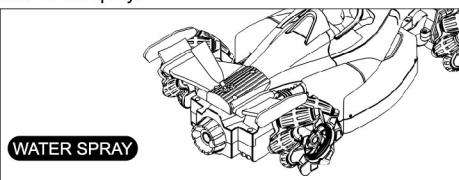

Press the sound button, the car makes a roaring sound, press it again to turn off the sound.

PRECAUTIONS FOR BATTERY USE

1. The remote control car uses one 3.7V chargeable batteries; remote control use two 1.5V AA non-rechargeable batteries;
2. Battery removal and loading should be toy battery room polarity and voltage correctly operate;
3. Non-rechargeable battery is not rechargeable;
4. Rechargeable batteries must be charged under adult supervision;
5. The rechargeable battery should be removed from the toy before charging;
6. Different types of batteries or old and new batteries can not be mixed;
7. Only with the same recommended battery or equivalent battery can be used;
8. Exhausted battery should be removed from; if not used for a long time, please Remove the toy battery.
9. Power terminals may not be short-circuited;
10. Use a screwdriver to unscrew the screws on the cover of the battery compartment, insert the batteries according to the correct polarity of the positive and negative poles, and unscrew the screws on the cover of the battery compartment with a screwdriver to remove the battery.
11. Maintenance and maintenance: this product is composed of plastic, hardware and electronic components, shall not be into the water or long-term placed in wet conditions or use, regularly check the wires, plugs, housings and otherparts for defects, should be discontinued when found defective, until the repair is complete.



WARNING:

CHOKING HAZARD - small parts, Not for children under 3 years.



MADE IN CHINA