



UMA

SETUP GUIDE & OWNERS MANUAL

PABLO DESIGNS
888 MARIN STREET
SAN FRANCISCO, CA
94124

PABLODESIGNS.COM
UMA SUPPORT: 888-355-0636
UMASUPPORT@PABLODESIGNS.COM



 
 
Pablo®

UMA

UMA INDICATOR OVERVIEW

INDICATOR LIGHT FUNCTIONS:



POWER INDICATOR LIGHT	ILLUMINATED WHITE	RUNNING ON BATTERY POWER
	BREATHING WHITE	PLUGGED IN AND CHARGING
	ILLUMINATED GREEN	PLUGGED IN, FULLY CHARGED
	BREATHING RED	LESS THAN 15% BATTERY REMAINING
BLUETOOTH INDICATOR LIGHT	ILLUMINATED BLUE	WAITING FOR CONNECTION
	BREATHING BLUE	PAIRING MODE ACTIVATED
	NOT ILLUMINATED	ACTIVE CONNECTION

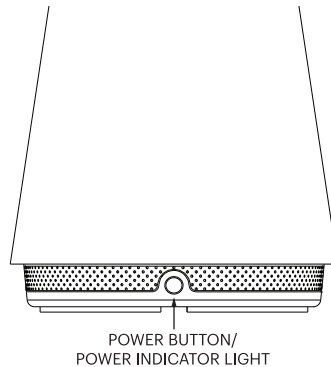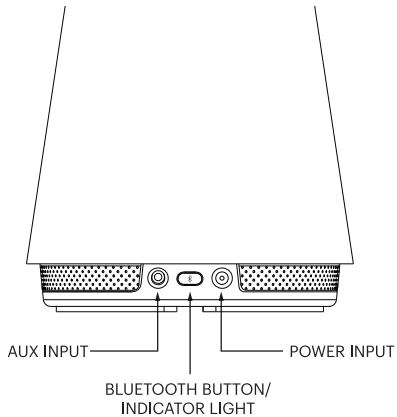

Pablo® UMA

CHARGING UMA

  UMA USES AN INTERNAL RECHARGEABLE LITHIUM POLYMER BATTERY THAT WILL LAST THE LIFETIME OF THE DEVICE. FULLY CHARGE UMA'S BATTERY PRIOR TO FIRST USE. TO CHARGE THE BATTERY, CONNECT UMA TO THE INCLUDED POWER SUPPLY AND KEEP IT CONNECTED TO THE POWER SOURCE UNTIL POWER INDICATOR LIGHT TURNS GREEN. IT MAY TAKE UP TO 2.5 HOURS TO FULLY CHARGE UMA.

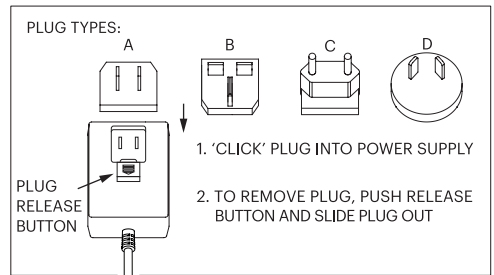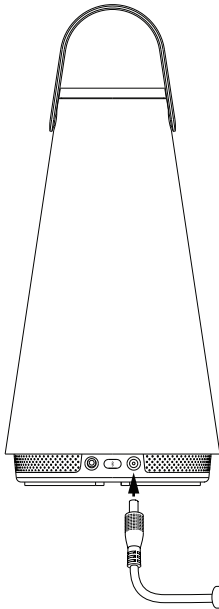

A. N AMERICA B. UK C. EU D. AU

NOTE: CONTACT MANUFACTURER FOR
ADDITIONAL PLUG TYPE REQUIREMENTS.

Pablo®

UMA

 
UMA LIGHT FUNCTION

PRESS POWER SWITCH BRIEFLY TO TURN UMA ON. POWER INDICATOR LIGHT WILL ILLUMINATE. TURN LIGHT CONTROL RING CLOCKWISE PAST “CLICK” TO TURN ON LIGHT. ROTATE LIGHT CONTROL RING TO ACTIVATE FULL RANGE DIM CONTROL.


CONTROLS

- ROTATE CLOCKWISE TO INCREASE LIGHT
- ROTATE COUNTER CLOCKWISE TO DECREASE LIGHT
- PHYSICAL ‘CLICK’ REGISTRATION INDICATES LIGHT IS OFF

OFF POSITION

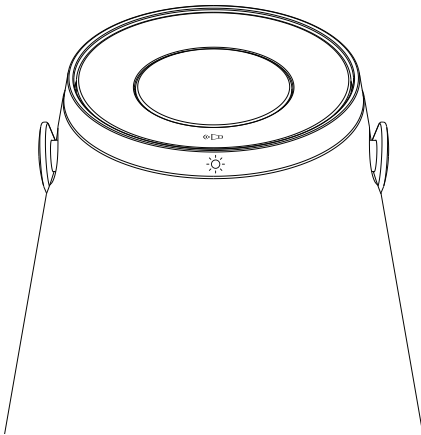

FULL BRIGHTNESS

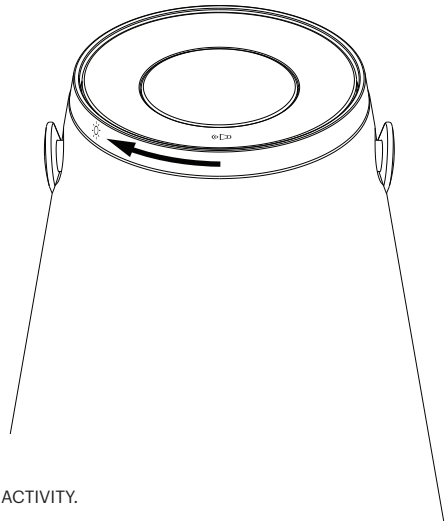 

NOTE:

UMA WILL TURN OFF AUTOMATICALLY AFTER 15 MINUTES OF INACTIVITY.
(INACTIVITY = LIGHT IS OFF & NO SOUND IS PLAYING)

Pablo®

 
UMA

UMA VOLUME FUNCTION

VOLUME IS CONTROLLED THROUGH A TOUCH CAPACITIVE PAD ON THE TOP OF UMA. USING YOUR FINGER, SLIDE CLOCKWISE TO TURN VOLUME UP, SLIDE ANTI CLOCKWISE TO TURN VOLUME DOWN.

CONTROLS

- TOUCH INTERFACE
- REQUIRES 360 DEGREES OF TOUCH ROTATION TO TRAVEL FROM 0%-100% VOLUME
- SLIDE FINGER CLOCKWISE TO INCREASE VOLUME
- SLIDE FINGER COUNTER CLOCKWISE TO DECREASE VOLUME
- VOLUME IS CONTROLLED BY DIRECTION AND DISTANCE OF SLIDE REGARDLESS OF POSITION

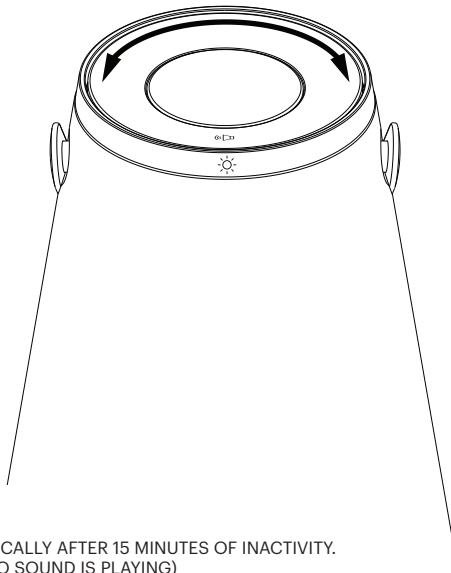

NOTE:

UMA WILL TURN OFF AUTOMATICALLY AFTER 15 MINUTES OF INACTIVITY.
(INACTIVITY = LIGHT IS OFF & NO SOUND IS PLAYING)

Pablo®

UMA

 
CONNECTING UMA TO A *BLUETOOTH*® WIRELESS TECHNOLOGY ENABLED DEVICE

PAIRING:

WHEN CONNECTING A *BLUETOOTH* DEVICE TO UMA FOR THE FIRST TIME, THE DEVICE MUST BE REGISTERED TO UMA. THIS IS CALLED PAIRING. ONCE PAIRING IS COMPLETED, UMA WILL REMEMBER YOUR DEVICE AND CONNECT AUTOMATICALLY. UMA CAN REMEMBER UP TO 8 DEVICES. TO PAIR YOUR DEVICE WITH UMA, FOLLOW THESE STEPS:

1. PRESS POWER SWITCH BRIEFLY TO TURN UMA ON. POWER INDICATOR LIGHT WILL ILLUMINATE.
2. PRESS AND HOLD THE *BLUETOOTH* PAIRING BUTTON ON UMA FOR ONE SECOND TO PUT UMA INTO PAIRING MODE, INDICATED BY A BREATHING BLUE LIGHT. UMA WILL REMAIN IN PAIRING MODE UNTIL A CONNECTION IS MADE, OR FOR UP TO ONE MINUTE.
3. TURN ON THE *BLUETOOTH* FUNCTION ON YOUR DEVICE.
4. IN THE *BLUETOOTH* SETTINGS OF THE DEVICE, SELECT “UMA SOUND LANTERN” FROM THE LIST OF AVAILABLE CONNECTIONS.
5. *BLUETOOTH* INDICATOR LIGHT ON UMA WILL CHANGE TO SOLID BLUE WHEN THE CONNECTION IS SUCCESSFUL. AFTER 10 SECONDS OF CONNECTION, INDICATOR LIGHT WILL TURN OFF.
6. PLAY MUSIC ON YOUR DEVICE. ENSURE VOLUME ON YOUR DEVICE IS NOT SET TO MUTE.
7. AFTER YOUR DEVICE HAS PAIRED WITH UMA, IT WILL CONNECT AUTOMATICALLY. IF IT DOES NOT CONNECT AUTOMATICALLY, REPEAT THE PAIRING PROCESS TO REGISTER YOUR DEVICE.

IF YOU HAVE DIFFICULTY CONNECTING TO UMA, PLEASE REFER TO THE TROUBLESHOOTING GUIDE IN THIS INSTRUCTION MANUAL.

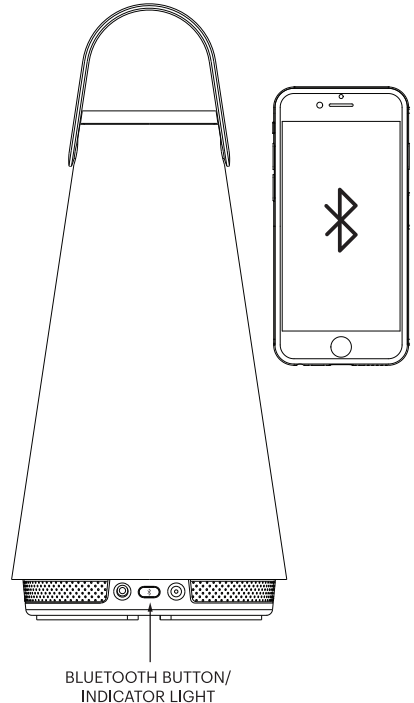

Pablo®

 
UMA

CONNECTING UMA TO A DEVICE VIA PROVIDED AUXILIARY CABLE

UMA CAN PLAY MUSIC FROM AN AUDIO DEVICE BY CONNECTING AN AUX-IN CABLE. TO CONNECT YOUR DEVICE TO UMA WITH AUXILIARY CABLE, FOLLOW THESE STEPS:

1. PRESS POWER SWITCH BRIEFLY TO TURN UMA ON. POWER INDICATOR LIGHT WILL ILLUMINATE.
2. PLUG AUXILIARY CABLE INTO UMA AUDIO-IN PORT. *BLUETOOTH* WIRELESS TECHNOLOGY WILL BE DISABLED AND ALL WIRELESS CONNECTIONS WILL BE DISCONNECTED.
3. PLUG THE OTHER END OF THE AUXILIARY CABLE INTO THE AUDIO-OUT (HEADPHONE) PORT ON YOUR DEVICE.
4. PLAY MUSIC ON YOUR DEVICE. ENSURE VOLUME ON YOUR DEVICE IS NOT MUTED.

NOTE: AUXILIARY CABLE IS NON-DIRECTIONAL.

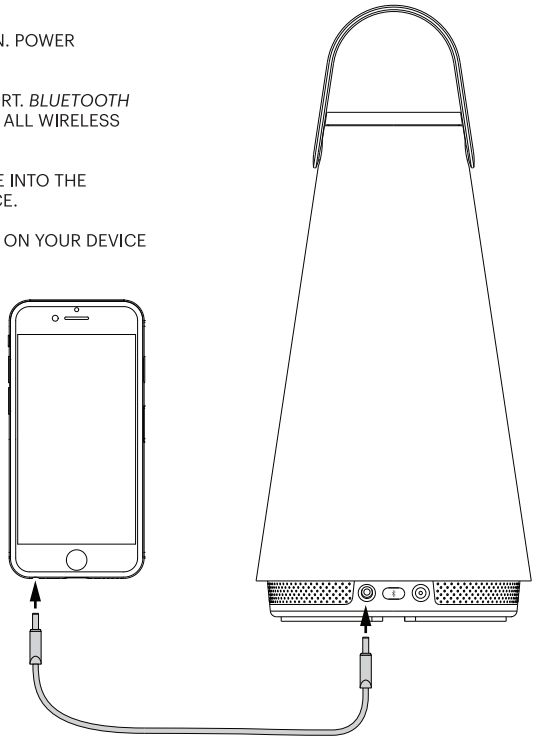


Pablo®

UMA

SURFACE MOUNT OPTION


UMA CAN BE BOLTED TO A SURFACE USING A STANDARD M6 X 1MM MACHINE SCREW (NOT PROVIDED).

 SCREW LENGTH IS DETERMINED BY ADDING THE TABLE THICKNESS TO THE 10MM INSERT LENGTH.

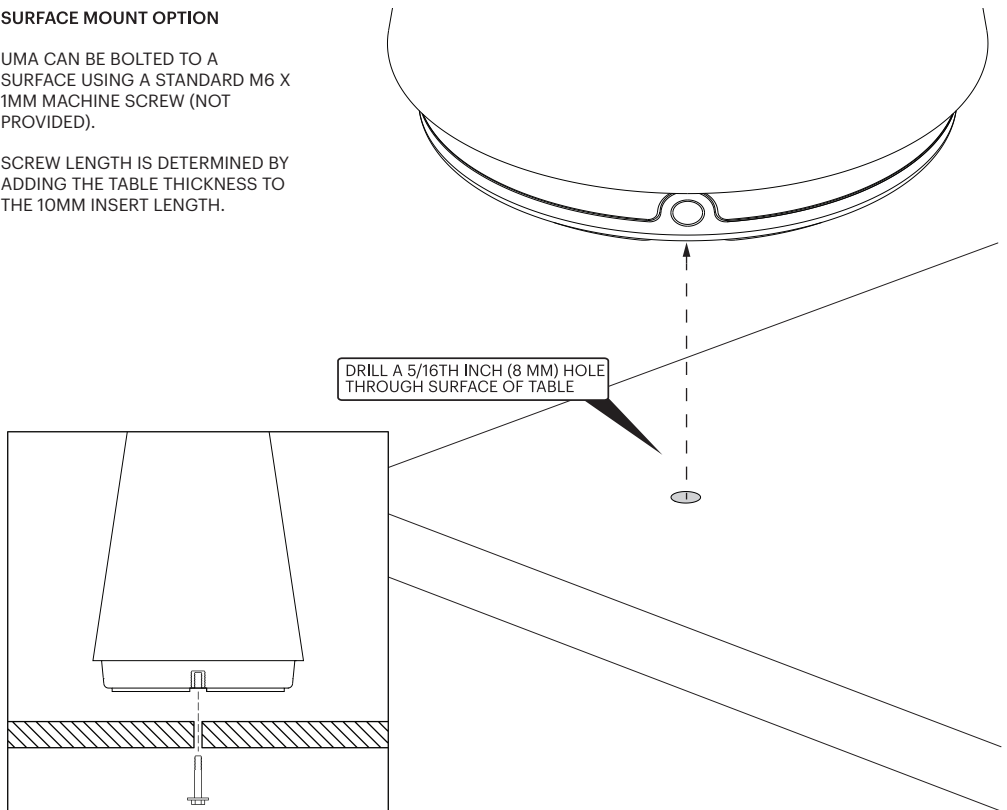

Pablo®

 UMA

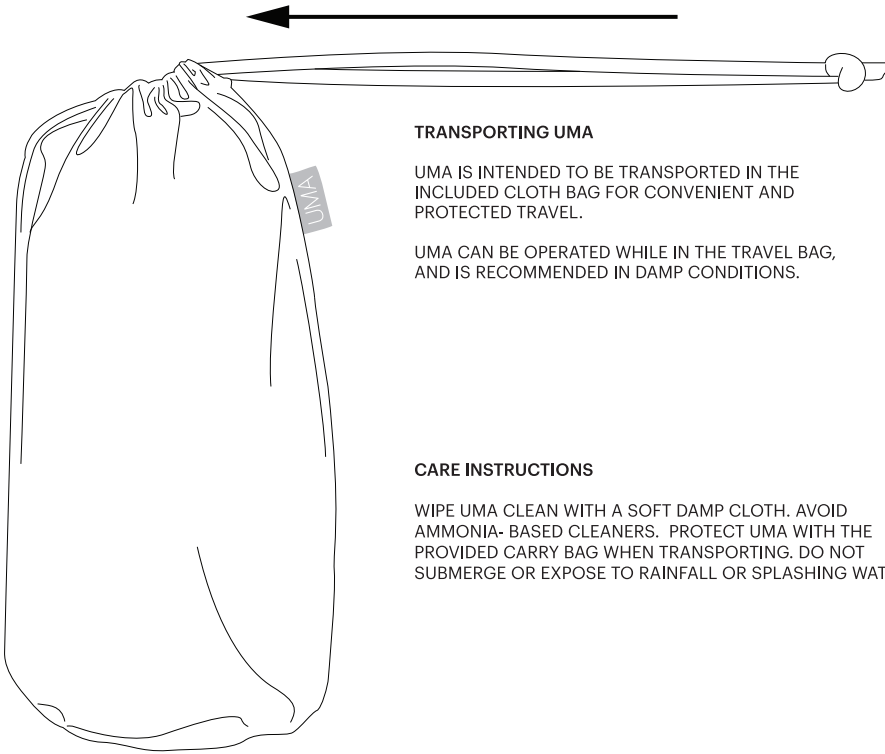

TRANSPORTING UMA

UMA IS INTENDED TO BE TRANSPORTED IN THE INCLUDED CLOTH BAG FOR CONVENIENT AND PROTECTED TRAVEL.

UMA CAN BE OPERATED WHILE IN THE TRAVEL BAG, AND IS RECOMMENDED IN DAMP CONDITIONS.

CARE INSTRUCTIONS

WIPE UMA CLEAN WITH A SOFT DAMP CLOTH. AVOID AMMONIA- BASED CLEANERS. PROTECT UMA WITH THE PROVIDED CARRY BAG WHEN TRANSPORTING. DO NOT SUBMERGE OR EXPOSE TO RAINFALL OR SPLASHING WATER.



BLUETOOTH® WIRELESS TECHNOLOGY CONNECTION TROUBLESHOOTING GUIDE

IF YOU HAVE DIFFICULTY CONNECTING YOUR DEVICE TO UMA, FOLLOW THIS GUIDE

PROBLEM	CAUSE	SOLUTION
UMA CANNOT MAKE A <i>BLUETOOTH</i> CONNECTION	UMA IS TURNED OFF	PRESS POWER SWITCH BRIEFLY TO TURN UMA ON. POWER INDICATOR LIGHT WILL ILLUMINATE
	<i>BLUETOOTH</i> FUNCTION IS TURNED OFF	PRESS THE <i>BLUETOOTH</i> BUTTON TO ENABLE <i>BLUETOOTH</i> FUNCTION
	UMA HAS NOT YET BEEN PAIRED WITH THE <i>BLUETOOTH</i> DEVICE	PERFORM PAIRING PROCESS
	UMA IS TOO FAR FROM THE <i>BLUETOOTH</i> DEVICE	MOVE THE AUDIO SOURCE CLOSER. MAXIMUM DISTANCE FROM DEVICE IS 30M UNOBSTRUCTED
	AN AUX-IN CABLE IS CONNECTED	DISCONNECT AUX-IN CABLE
	ANOTHER <i>BLUETOOTH</i> DEVICE IS CONNECTED	DISCONNECT OR POWER OFF THE OTHER <i>BLUETOOTH</i> DEVICE
	THE PAIRING INFORMATION HAS BEEN DELETED. UMA CAN REMEMBER UP TO 8 DEVICE PAIRINGS. IF A 9TH DEVICE IS PAIRED, UMA WILL FORGET THE FIRST DEVICE	PERFORM PAIRING PROCESS AGAIN
	UMA IS NOT REGISTERED ON THE DEVICE'S <i>BLUETOOTH</i> CONNECTION LIST	PERFORM PAIRING PROCESS AGAIN
	THERE IS A DEVICE (MICROWAVE, WIRELESS LAN, ETC.) THAT OUTPUTS SIGNALS IN THE 2.4 GHz FREQUENCY BAND NEARBY	MOVE UMA AWAY FROM ANY DEVICE THAT EMITS RF SIGNALS OR INTERFERENCE



LIGHT AND AUDIO FUNCTION TROUBLESHOOTING GUIDE

IF YOU HAVE DIFFICULTY PROPERLY OPERATING UMA, FOLLOW THIS GUIDE

PROBLEM	CAUSE	SOLUTION
BLUETOOTH AUDIO CONNECTION IS DISTORTED OR DROPPING OUT	THE SOURCE DEVICE IS TOO FAR AWAY FROM UMA	MOVE THE AUDIO SOURCE CLOSER. MAXIMUM DISTANCE FROM DEVICE IS 10M
	THERE IS A DEVICE (MICROWAVE, WIRELESS LAN, ETC.) THAT OUTPUTS SIGNALS IN THE 2.4 GHZ FREQUENCY BAND NEARBY	MOVE UMA AWAY FROM ANY DEVICE THAT EMITS RF SIGNALS OR INTERFERENCE
	THE VOLUME ON EITHER THE AUDIO SOURCE OR UMA IS TOO LOW	ADJUST THE VOLUME ON BOTH UMA AND THE AUDIO SOURCE
	POOR CONNECTION BETWEEN UMA AND THE SOURCE DEVICE	RESTART BOTH THE AUDIO SOURCE AND UMA
	BLUETOOTH PAIRING FAILED	RE-PAIR YOUR DEVICE WITH UMA
3.5MM AUXILLIARY AUDIO CONNECTION IS DISTORTED OR DROPPING OUT	SOURCE DEVICE IS PAIRED TO A DIFFERENT BLUETOOTH DEVICE	DISCONNECT OR POWER OFF THE OTHER BLUETOOTH DEVICE
	3.5MM AUXILLIARY CABLE IS NOT FULLY CONNECTED TO EITHER UMA OR THE SOURCE DEVICE	CHECK THAT THE 3.5MM AUXILLIARY CABLE IS SECURELY CONNECTED TO BOTH UMA AND THE SOURCE DEVICE
	SOURCE DEVICE ISN'T WORKING PROPERLY	TRY A DIFFERENT SOUCE DEVICE TO ENSURE THE ISSUE ISN'T THE SOURCE DEVICE
STREAMED AUDIO CONTENT IS DISTORTED OR DROPPING OUT	3.5MM AUXILLIARY CABLE IS FAULTY OR DAMAGED	TRY A DIFFERENT 3.5MM AUXILLIARY CABLE
	INTERNET CONNECTIVITY ISSUES	FOLLOW YOUR ROUTER/ISP INSTRUCTIONS TO ENSURE YOUR INTERNET CONNECTION IS FUNTIONING PROPERLY
UMA POWER IS ON, LANTERN DOES NOT ILLUMINATE	DIMMER CONTROL RING IS TURNED OFF	ENSURE DIMMER CONTROL RING IS TURNED CLOCKWISE PAST THE 'CLICK' TO ILLUMINATE
AUTO SHUT-OFF IS NOT WORKING	LIGHT IS STILL ON OR SOUND IS STILL PLAYING	MUST TURN OFF LIGHT AND SOUND SOURCE FOR AUTO SHUT-OFF TO FUNCTION

IF PROBLEMS PERSIST, PLEASE CONTACT UMA SUPPORT: 888-355-0636 / UMASUPPORT@PABLODESIGNS.COM

Pablo®

UMA

MORE INFO

FOR MORE INFORMATION AND PRODUCT DETAILS VISIT WWW.PABLODESIGNS.COM

SPECIFICATIONS

LIGHT OUTPUT:	180 LUMENS MAX
BATTERY RUNTIME:	5 TO 8 HOURS DEPENDING ON USE
CHARGE TIME:	UP TO 2.5 HOURS
POWER ADAPTER INPUT:	100-240V ~ 50/60Hz 1.3A MAX
POWER CONSUMPTION:	6.5W (LIGHT) 12W MAX (SPEAKERS)
SPEAKER WATTAGE:	12W MAX 1.5W TYPICAL
BLUETOOTH VERSION:	4.1
BLUETOOTH RANGE:	10M
DIMENSIONS:	11" x 6" x 6" (28cm x 15.4cm x 15.4cm)
WEIGHT:	2.85lbs (1.3kgs)
PATENT PENDING	
MADE IN CHINA	

WARRANTY

FOR WARRANTY AND ADDITIONAL TROUBLESHOOTING INFORMATION VISIT
WWW.PABLODESIGNS.COM/PRODUCT/UMA

FOLLOW US

FOLLOW US ON FACEBOOK AND INSTAGRAM

WWW.FACEBOOK.COM/PABLODESIGNSSF
[@PABLODESIGNSSF](https://www.instagram.com/pablodesignssf)

東莞光順電子有限公司

零件規格內容表

料號: 008B-6351Y1-00R

品名: 安全說明書

規格: 63.5*51mm,單色印刷，80g雙膠紙，折紙

圖號: LT-01-22-00807139 版別: 01

頁數: 1 OF 3

環保要求:產品須符合:RoHs和REACH要求



01	新版發行		2021/12/22	鄭星
版別	變更前	變更后	日期	變更者

核准 喻堅剛 審核 吳宏輝 制表 鄭星

版本/Edition	V0	更改标记/Sign		更改单号/Number		规格比列	1:1					序号	说明注解
版本/Edition	V1	更改标记/Sign		更改单号/Number		规格比例	1:1						
版本/Edition	V2	更改标记/Sign	⚠	更改单号/Number		规格比例	1:1					1	

圖號：LT-01-22-00807139
頁數：2 of 3

  正面

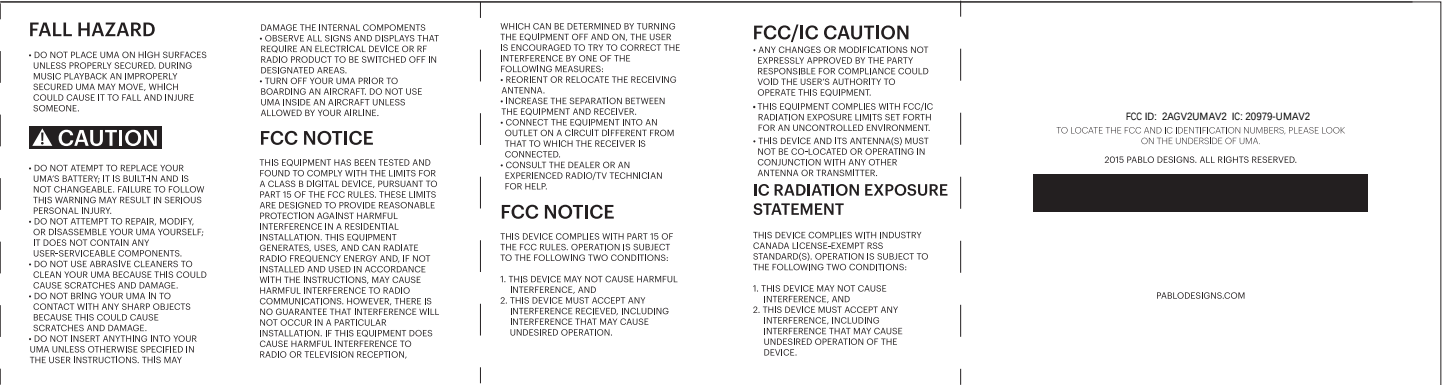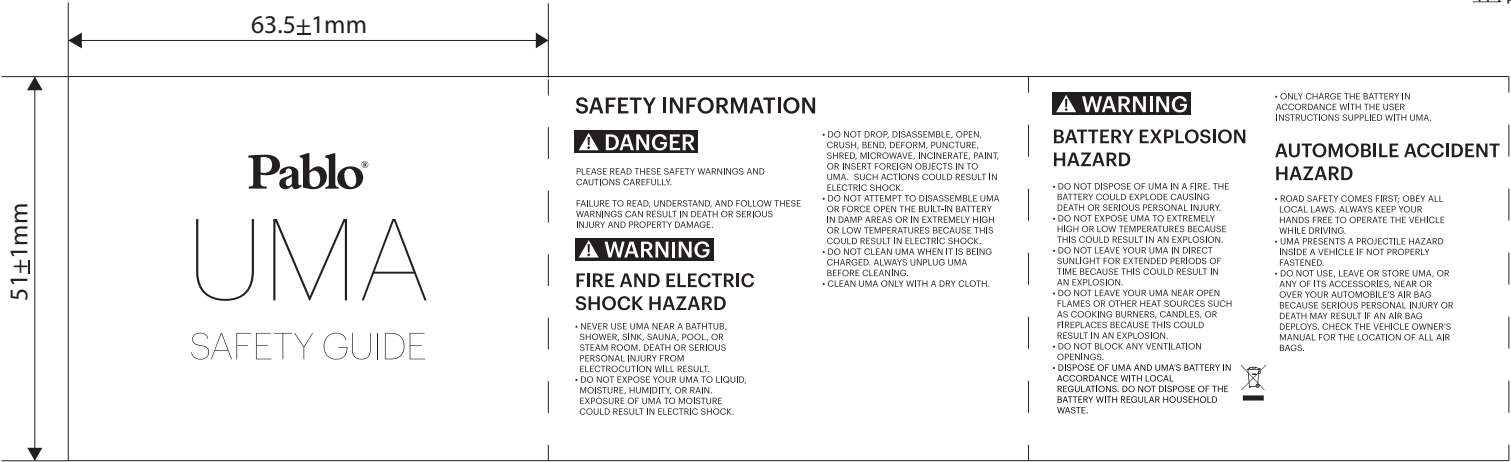

注意:虚线为折叠线,英文面为正面,法文面为反面.注意方向.

颜色规范



客户代码	
品名	安全指南折纸
料号	356170000002
材料	70克双胶纸
单位	MM
印刷工艺	单黑印刷
设计	
审核	
批准	
发文日期	2016年06月17日
图号	356170000002-01
⊗	共 2 张 第 1 张

1		2		3		4		5		6	
版本 / Edition	V0	更改标记 / Sign		更改单号 / Number		规格比列	1:1	圖號：LT-01-22-00807139 頁數：3 of 3	序号	说明注解	
版本 / Edition	V1	更改标记 / Sign		更改单号 / Number		规格比例	1:1				
版本 / Edition	V2	更改标记 / Sign	⚠	更改单号 / Number		规格比例	1:1		1		
63.5±1mm 51±1mm Pablo UMA GUIDE DE SÉCURITÉ INFORMATION SÉCURITAIRE ⚠ DANGER S'IL VOUS PLAÎT LIRE CES CONSIGNES DE SECURITE ET MISES EN GARDE. DÉFAUT DE LIRE, COMPRENDRE ET SUIVRE CES AVERTISSEMENTS PEUT ENTRAÎNER LA MORT OU DES BLESSURES GRAVES DE DOMMAGES MATÉRIELS ⚠ ATTENTION INCENDIE ET RISQUE DE CHOC ÉLECTRIQUE • JE JAMAIS UTILISER UMA PRES D'UNE BAIGNOIRE, DOUCHE, LAVABO, SAUNA, PISCINE, OU AU HAMMAM. MORT OU DE BLESSURES GRAVES PAR ELECTROCUTION EN RESULTERA. • NE PAS EXPOSER L'UMA AU LIQUIDE, MOISSISSURES, L'HUMIDITE OU LA PLUIE. EXPOSITION DE UMA A HUMIDITE POURRAIT PROVOQUER UN CHOC ELECTRIQUE. ⚠ ATTENTION BATTERIE D'EXPLOSION • NE PAS JETER DE L'UMA DANS UN INCENDIE. LA BATTERIE PEUVENT EXPLOSER CAUSANT LA MORT OU DES BLESSURES GRAVES. • NE PAS EXPOSER A DES TEMPERATURES OU A DES TEMPERATURES EXTREMEMENT ELEVÉES OU BAISSÉES, CAR CELA POURRAIT PROVOQUER UNE EXPLOSION. • NE LAISSEZ PAS VOTRE UMA AU SOLEIL DIRECTE POUR LONGUES PERIODES DE TEMPS, CAR CELA POURRAIT PROVOQUER UNE EXPLOSION. • NE LAISSEZ PAS VOTRE FLAMMES UMA PRES OUVERTE OU D'AUTRES SOURCES DE CHALEUR TELLES QUE DES BRULEURS DE CHUISON, BOUGIES, OU DES FOYERS, CAR CELA POURRAIT PROVOQUER UNE EXPLOSION. • NE PAS BLOQUER LES OUVERTURES DE VENTILATION. • JETEZ UMA ET DE BATTERIE UMA EN CONFORMEMENT AUX REGLEMENTATION LOCALES. NE PAS JETER DE LA BATTERIE AVEC ORDINAIRE LES ORDURES MENAGERES. SEULEMENT CHARGER LA BATTERIE EN CONFORMITE AVEC LES INSTRUCTIONS DE L'UTILISATEUR FOURNI AVEC L'UMA. ACCIDENT AUTOMOBILE DANGER • SECURITE ROUTIERE AVANT TOUT; RESPECTEZ LA REGLEMENTATION LOCALE. GARDEZ TOUJOURS LES MAINS LIBRES POUR CONDUIRE LE VOLANTE D'UNE VOTURE. • UMA PRESENTE UNE MENACE PROJECTILE INTERIEUR D'UN VEHICULE SI PAS CORRECTEMENT ATTACHE. • NE PAS UTILISER, LAISSER NI RANGER UMA, NI AUCUNE DE SES ACCESSOIRES, A PROXIMITE OU SUR VOTRE AUTOMOBILE'S AIR BAG PARCE QUE DES BLESSURES GRAVES OU LA MORT PEUT PROVOQUER SI UN SAC GONFLABLE SE DEPLOIE. CONSULTEZ LE MANUEL DU PROPRIETAIRE DU VEHICULE POUR L'EMPLACEMENT DES SACS GONFLABLES.								2			
反面								3			
								4			
								5			
								6			
								技术要求: 1. 内容正确, 尺寸在公差范围内 2. 印刷干净无脏污			
RISQUE DE CHUTE • NE PAS PLACER UMA SUR LA HAUTE SURFACES MOINS D'ETRE CORRECTEMENT SECURISES. PENDANT UNE LECTURE MUSIQUE MAL FIXES UMA PEUT SE DEPLACER, QUI POURRAIT CAUSER SA CHUTE ET BLESSER QUELQU'UN. ⚠ PRÉCAUTION • NE TENTEZ PAS DE REMPLACER VOTRE'S BATTERIE UMA. IL EST CONSTRUIT-IN ET EST PAS MODIFIABLE. LE NON-RESPECT CET AVERTISSEMENT PEUT ENTRAÎNER DES BLESSURES GRAVES. • NE PAS ESSAYER DE REPARER, DE MODIFIER OU DE DEMONTER VOTRE UMA VOUS; IL NE CONTIENT PAS DE COMPOSANTS UTILISATEUR. • NE PAS UTILISER DE NETTOYANTS ABRASIFS POUR NETTOYER VOTRE UMA, CAR CELA POURRAIT PROVOQUER DES RAYURES ET DES DOMMAGES. • NE PAS APPORTER VOTRE UMA POUR CONTACTER AVEC DES OBJETS POINTUS, CAR CELA POURRAIT PROVOQUER DES RAYURES ET DES DOMMAGES. • NE RIEN INSERER DANS VOTRE UMA SAUF INDICATION CONTRAIRE DANS LES INSTRUCTIONS D'UTILISATION. CELA POURRAIT ENDOMMAGER LES COMPOSANTS INTERNES. • RESPECTER TOUS LES PANNEAUX ET LES AFFICHAGES QUI NECESSITENT UN APPAREIL ELECTRIQUE OU RF RADIO PRODUIT ETRE ETIANT DANS LES ZONES DESIGNÉES. • ÉTEIGNEZ VOTRE UMA AVANT L'EMBARQUEMENT D'UN AVION, NE PAS UTILISER UMA INTERIEUR D'UN AERONEF, SAUF AUTORISATION DE VOTRE COMPAGNIE AERENNE. AVIS FCC CET EQUIPEMENT A ETE TESTE ET TROUVE CONFORME AUX LIMITES POUR UN DISPOSITIF NUMERIQUE DE CLASSE B, CONFORMEMENT AU CHAPITRE 15 DE LA REGLEMENTATION FCC. CES LIMITES SONT CONÇUES POUR OFFRIR UNE PROTECTION CONTRE LES INTERFERENCES NUISIBLES DANS UNE INSTALLATION RESIDENTIELLE. CET EQUIPEMENT GENERE, UTILISE ET PEUT FREQUENCES RADIO ET, SI NON INSTALLE ET UTILISE CONFORMEMENT AUX INSTRUCTIONS, PEUT PROVOQUER DES INTERFERENCES A LA RADIO COMMUNICATIONS. CEPENDANT, IL YA AUCUNE GARANTIE QU'AUCUNE INTERFERENCE NE SE PRODUIRA DANS UNE INSTALLATION PARTICULIERE. SI CET EQUIPEMENT PROVOQUE DES INTERFERENCES RADIO OU TELEVISION, CE QUI PEUT ETRE DETERMINE EN METTANT L'APPAREIL HORS TENSION, L'UTILISATEUR EST ENCOURAGE A ESSAYER DE CORRIGER LES INTERFERENCES PAR UNE DES MESURES SUIVANTES: • REORIENTER OU DEPLACER L'ANTENNE DE RECEPTION. • AUGMENTER LA SEPARATION ENTRE L'EQUIPEMENT ET LE RECEPTEUR. • BRANCHEZ L'APPAREIL, DANS UNE PRISE SUR UN CIRCUIT DIFFERENT DE CELUI SUR LEQUEL LE RECEPTEUR EST BRANCHE. AVIS FCC CET APPAREIL EST CONFORME AU 15 DES REGLES DE LA FCC. OPERATION EST SOUMISE AUX DEUX CONDITIONS SUIVANTES: 1. CET APPAREIL NE PAS PROVOQUER D'INTERFERENCES, ET 2. CET APPAREIL DOIT ACCEPTER TOUTE RECIEVED D'INTERFERENCES, INCLUANT LES INTERFERENCES POUVANT ENTRAÎNER UN FONCTIONNEMENT INDESIRABLE. FCC/IC ATTENTION • TOUTE MODIFICATION OU MODIFICATIONS NON EXPRESSEMENT APPROUVÉES PAR LA PARTIE RESPONSABLE DE LA CONFORMITE ANNULER LE DROIT DE L'UTILISATEUR FAIRE FONCTIONNER CET EQUIPEMENT. • CET EQUIPEMENT EST CONFORME AUX LIMITES D'EXPOSITION AUX RAYONNEMENTS FCC/IC ÉTABLIES POUR UN ENVIRONNEMENT NON CONTRÔLÉ. • CET APPAREIL ET SON ANTENNE(S) NE DOIT PAS ETRE CO-LOCALISE OU FONCTIONNER EN CONJONCTION AVEC UNE AUTRE ANTENNE OU ÉMETTEUR. IC EXPOSITION AUX RADIATIONS CET APPAREIL EST CONFORME AVEC INDUSTRIE CANADA, EXEMPTÉS DE LICENSE STANDARD RSS (S). OPERATION EST SOUMISE AUX DEUX CONDITIONS SUIVANTES: 1. CET APPAREIL NE PAS PROVOQUER D'INTERFERENCES, ET 2. CET APPAREIL DOIT TOUTE INTERFERENCES, Y COMPRIS CELLES POUVANT CAUSER UN DYSFONCTIONNEMENT DE L'APPAREIL. FCC ID: 2AGV2UMAV2 IC: 20979-UMAV2 POUR LOCALISER LE NUMEROS D'IDENTIFICATION FCC ET IC S'IL VOUS PLAÎT REGARDEZ SUR LE DESSOUS DE L'UMA 2015 PABLO DESIGNS. TOUS LES DROITS SONT RESERVES.											
客户代码											
品名						安全指南折纸					
料号						356170000002					
材料						70克双胶纸					
单位						MM					
印刷工艺						单黑印刷					
设计											
审核											
批准											
发文日期						2016年06月17日					
图号						356170000002-02					
						共 2 张 第 2 张					

颜色规范

注意:虚线为折叠线,英文面为正面,法文面为反面.注意方向.

颜色规范

