


# MICRO JET DRONE


## HIGH PERFORMANCE RC

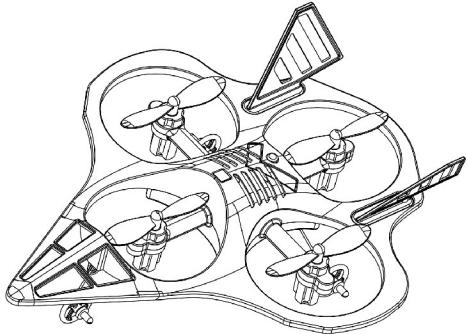

### 5.FLIGHT CONTROL:

PLEASE PRACTICE FLYING ON THE GROUND BEFORE TAKING FIGHTER JET AIRBORNE FOR THE FIRST TIME


Place the Micro jet Drone on a flat surface, making sure the flashing BLUE LED light is pointing away from you. The BLUE LED will always indicate the FORWARD flying direction.

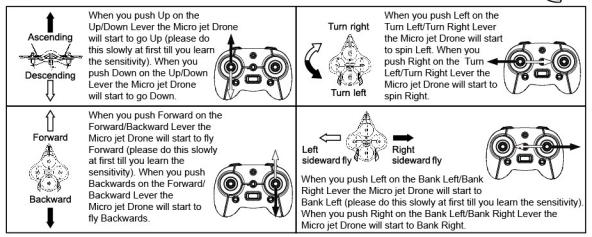

**TIP:** It is much easier when you start to learn to fly the Micro jet Drone, ignore Turn Right / Turn Left. By using Up/Down, Forward/Backward, Bank Left/Bank Right, the Micro jet Drone will still be able to fly anywhere. Also by keeping the BLUE LED facing forwards at all times, it is much easier to know which direction you will go in.


### 6.HOW TO DO A 360 FLIP:

 1. Make sure the Micro Jet Drone is flying at least 3 meters above the floor, or 3 meters below a ceiling.  
2. Press the Flip button on the controller. The controller will make a "Beep" sound, then flick the right hand lever in any direction, and the Drone will flip in that direction.  
3. You may need to push Up on the Up/Down Lever after the flip, if your battery is low on power in order to keep the Micro Jet Drone high in the air after the flip.



### 7.AUTO DEMO/TORNADO SPIN:


Press down the Right Lever, the drone will begin to demo rotating rightwards. To exit AUTO DEMO, press down again or push the Right Lever in any direction or push the Left Lever to its Left or Right.

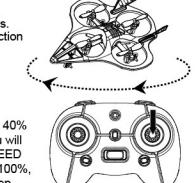

### 8.FEATURES:

**SPEED CONTROL:** When you first turn on your Micro Jet Drone, it is set to 40% speed, you will hear ONE beep. When you press the SPEED BUTTON, you will hear TWO beeps and the speed will be increased to 60%. Pressing the SPEED BUTTON again you will hear THREE beeps and the speed will increase to 100%. Pressing again will bring you back to 40% speed and you will hear ONE beep. Always learn to fly at 40% speed, and then you can increase it as you get better at flying.

### 1.CONTROLLER COMPONENTS:

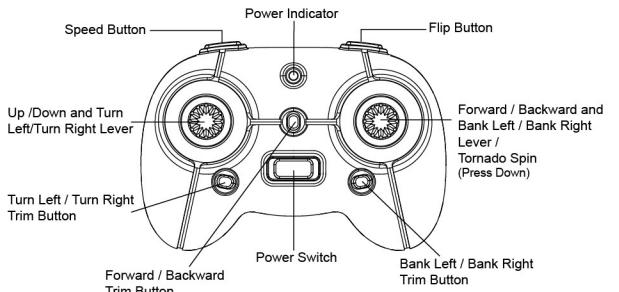

### 2.SETTING UP THE CONTROLLER / DRONE:

#### INSTALLING THE CONTROLLER BATTERIES

**NOTICE:**  
1. Always have an adult install the batteries  
2. Always use Alkaline Batteries  
3. Never mix old and new batteries

3 x "AA" Batteries (Batteries not included)



1. Unscrew the battery cover, and insert 3 x "AA" Batteries (Batteries not included), making sure you insert them following the correct polarity as shown.  
2. Re-attach the battery cover.

### CHARGING YOUR DRONE BATTERY


#### IMPORTANT – READ BEFORE CHARGING:

##### BATTERY WARNING:

Lithium Polymer batteries can expand, burst or catch fire if used incorrectly, causing both property damage and or personal injury. It is essential that you follow all the included instructions and safety warnings in full. The manufacturer, distributors and retailers will assume no liability for the failure to comply with these safety instructions and warnings.

##### INSTRUCTIONS WHEN CHARGING:

- 1) If the battery has just been used, please let it cool back down to room temperature before charging.
- 2) Charging must only be undertaken by an Adult, and only using the charger included with this product.
- 3) Always charge the battery on a non flammable heat resistant surface with non flammable surroundings.

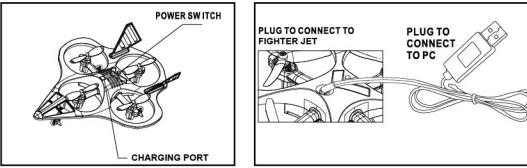

4) Connect the USB charging cable to the Micro Jet Drone charging port, and then connect the other side of the USB cable to your USB charging device (laptop, computer, USB plug charger etc.). The LED on the USB charger will light up RED when fully charged. Remove the battery from your charger cable as soon as the LED goes RED, or after 30 minutes whichever is first. NEVER charge the battery for more than 30 minutes. Never continue to charge the battery after the LED has turned RED. Always disconnect the USB cable after charging.



5) Lithium Polymer batteries do not last forever. If your battery becomes damaged in a crash or no longer charges properly, immediately replace it with a new battery. To prolong the life of your battery, it is always best to retain a bit of charge in your battery prior to charging it.

##### IMPORTANT BATTERY CARE INSTRUCTIONS:

If your battery ever starts to smell, change colour or look swollen, you must stop using it immediately and must not attempt to recharge it. If the battery ever starts to smell, change colour or expand whilst charging, you must stop charging immediately, remove the battery from the charger and place the battery on a non flammable heat resistant surface. Do not attempt to recharge the battery. Be advised that the battery may be hot so be careful when handling it. Disposal of any battery should be done at your local recycling centre.

### 10.RESETTING THE DRONE:

Push both control levers to the positions shown in the picture, and hold them for few seconds, the controller will make a BEEP sound, and the drone is recovered to its original factory setting and ready to fly again.

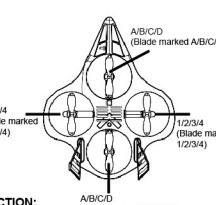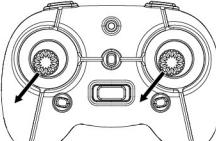

### 11.REPLACING BLADES AND FIXING ISSUES:

**1. BLADE REPLACEMENT:** Your Drone blades are very strong, but sometimes they can get damaged with a bad crash. You have spare blades in the box, but certain blades MUST be replaced on certain motors, or your Drone will not fly properly. If your Micro Jet Drone is facing away from you, the A/B/C/D marked blades must be positioned onto the Top and Bottom motors. The 1/2/3/4 marked blades must be positioned onto the Left and Right motors as per the right Pic. indicated. YOU MUST make sure you always replace the A/B/C/D or 1/2/3/4 blade in the positions as indicated in the right diagram.

### 2. DRONE NOT LIFTING OR NOT FLYING IN YOUR CHOSEN DIRECTION:

- 1) The most common reason for a Drone not lifting or flying in your chosen direction properly is that you have hair and debris wrapped around one or more of the blades. This is simple to remove, just take off the blade. Remove the debris, and place the blade back on.
- 2) The batteries in either the Drone or Controller may need charging (or replacing if it's the batteries in the controller).
- 3) You may have knocked your Trim Button settings out of sync. Follow the instructions earlier in this booklet to reset them back to the factory settings, and then re-trim as desired.


### 12.WARNINGS:

- The Micro Jet Drone is designed for 8+.
- Adult Supervision is always recommended.
- Always ensure your flight area is free of all obstacles, and always flown in excess of 1.5 meters from yourself and others.
- Charging always to be undertaken or overseen by an Adult, and only ever with the charger cable supplied.
- Do not plug in or charge this product till you have read and fully understood the battery charging section of the instructions included.
- Always charge on a non-flammable surface, with non-flammable surroundings.
- Never leave unattended whilst charging, and never over charge.
- Never expose the drone or its battery to excess heat.
- Never touch the blades whilst they are in motion.
- If your drone becomes damaged, stop using it immediately.
- At the end of the useful life of this product or its batteries, please do not dispose of it in normal household waste, always dispose of it at your local recycling centre – [www.recycle-more.co.uk](http://www.recycle-more.co.uk)
- FLY SAFELY – Always follow the Drone Code – [www.dronesafe.uk](http://www.dronesafe.uk)**

### 3.SAFE FLIGHT ENVIRONMENT:

1. Make sure the surrounding area is free of all people, pets or other obstacles before you start to fly.
2. The Micro Jet Drone is an indoor flyer, but care should be taken outside if flying in wind.
3. Do not fly when wet.
4. Leave 1.5 meters between you and the Drone at all times.

### 4.SETTING UP THE SIGNAL CONNECTION:

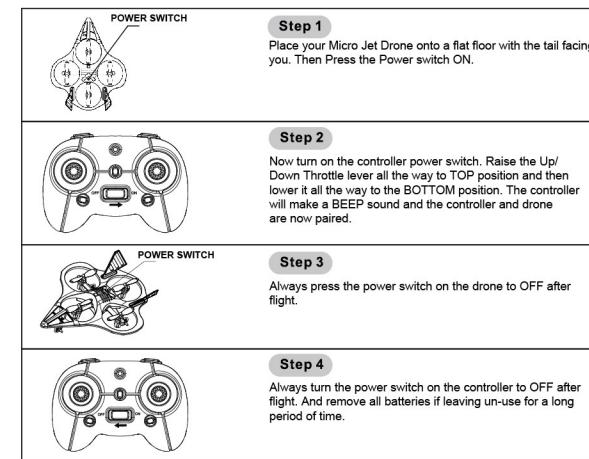

*This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter*

### ONE YEAR WARRANTY

Buzz Retail Ltd. provide a limited one year replacement warranty, covering any breakage, failure to work, or other malfunction due to design or manufacturing defect, for one year from the date purchased. This warranty does not apply to problems, which are the result of misuse, or normal wear and tear. To invoke the warranty, send the product, with all its parts to the address below. Include your name, address, telephone number, email address, and a brief explanation of the problem. You must also include a copy of your sales receipt, and payment in the amount of US\$14.95, or UK£14.95, to cover the cost of shipping and handling of your new product. No refunds will be issued. Canadian customers: money orders are accepted only from a U.S. bank. If you have any questions regarding this warranty, please contact:

© 2019 Buzz USA, LLC.  
Actual contents may vary. Some assembly required.  
Manufactured on behalf of Buzz USA, LLC.

Imported by Buzz USA, LLC.

26570 Agoura Rd. Suite #180 Calabasas, CA, 91302.

Buzz Retail Limited, SweetSpace 802.

53/79 Highgate Studios, London, NW5 1TL.

Retain address for future reference.

Made in China.  
[cs@buzzretail.co.uk](mailto:cs@buzzretail.co.uk)

Warranties will be honored in the country of purchase in the currency of purchase. If you have a need to exercise your warranty and you do not live within the country you purchased the product, please contact customer service for further information.

FCC ID: 2AGYK-Q5TF3511442

The statements should be displayed in the user manual:  
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.