

Figure 1. Unit Label is located behind the connector panel cover that is easily accessible without tools by loosening 2 large knobs and rotating swing bolt.

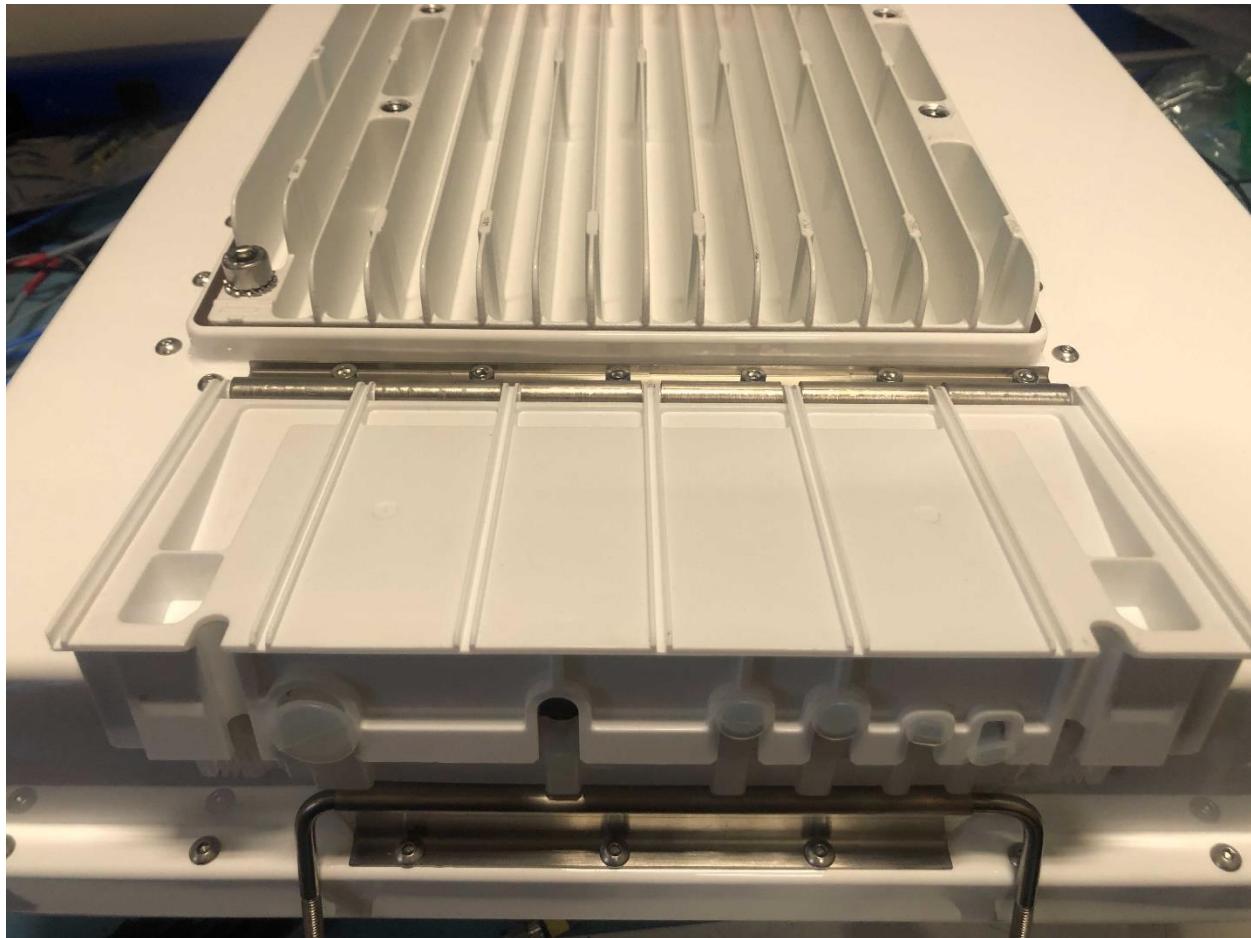


Figure 2. Panel rotated to open position. Label show as installed.

