← Pull sides →

Done



- 1. Soundbrenner Pulse
- 2. Charging Station
- 3. Long Band
- 4. Short Band
- 5. Charging Cable

up and that we would leave no stone unturned to bring the Soundbrenner Pulse to life.

What we didn't know was if we would ever find an audience that believes in us and that would share our passion for what we were building.

The fact that you are holding this product in your hand today is proof that we eventually did. We found you! You are awesome, because without you this company and this product would not be possible.

We made every effort to build the Soundbrenner Pulse to the highest standards. We take your satisfaction very seriously. If anything went wrong, please let us know so we can make things right. If everything went well, please let your friends know so they can enjoy our product too.

Today is just the beginning. In the next decade, we want to touch the life of every musician. Our goal is to help the world to master rhythm. Thanks for being part of the journey from day one. Thanks for being awesome.

Florian Simmendinger


CEO & Co-Founder of Soundbrenner Limited



included bands!





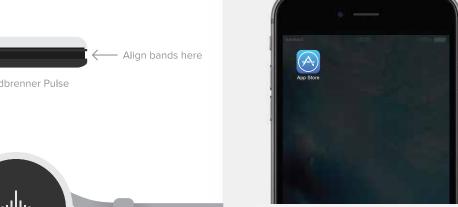

Go to App Store and search for "Soundbrenner".




Download app & follow setup instructions.



Go to Google Play and search for "Soundbrenner".



Download app & follow setup instructions.

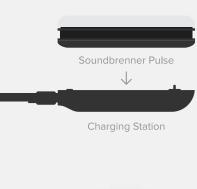



The Logo will slowly pulse in orange color.



Fully Charged The Logo will keep glowing in green color.



Step 1

Device currently

powered off. To turn on.

touch for 2 seconds.





Step 3

Device powered on. Logo will remain glowing in white color.



Step 1

Device currently powered on. To turn off. touch for 2 seconds.





Both Wheel and Logo will briefly light up in white color.



Step 3

Device powered off. Wheel and Logo are not glowing.



Device currently powered on. To enter Bluetooth® Discovery Mode, touch for 4 seconds.



Step 2

Both Wheel and Logo will briefly light up in white color. Keep touching.



Step 3

blue color.





Play / Pause

Perform two quick consecutive taps to Play or Pause the metronome.



Turn the wheel counterclockwise to decrease the BPM or turn the wheel clockwise to increase the BPM.



Perform at least three consecutive taps and the metronome of the Soundbrenner Pulse will match the average tempo of your taps.



Low Battery

When the battery of the Soundbrenner Pulse is below 20% it will vibrate three times. The Wheel and Logo will simultanousely blink three times in red color.




Connection Lost

When the Soundbrenner Pulse loses its Bluetooth® connection it will automatically enter Bluetooth® Discovery Mode. This will allow pairing with another Bluetooth® device. The Wheel and Logo will pulse in blue color.


If your Soundbrenner Pulse is not responding, performing a restart will usually fix the issuev. Simply place the device in reverse direction onto the charging station. Once the charging pins touch, it will restart.



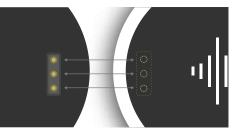


Charging Station

 Soundbrenner Pulse



Learn more about the Soundbrenner Pulse or contact us for support at www.soundbrenner.com/support

 Copyright © 2015 Soundbrenner Limited. All rights reserved. Made with ♥ in Hong Kong, Berlin & Los Angeles.



Quick Start Guide

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.