

Test positions for body:

According to the antenna position, the Body SAR is tested at the following 5 test positions all with the distance =0mm between the EUT and the phantom bottom :

| Phantom in body position | Ground in body position |
|---|---|
|  |  |
| EUT Setup Configuration 1 | EUT Setup Configuration 2 |
| left Side in body position | right Side in body position |
|  |  |
| EUT Setup Configuration 3 | EUT Setup Configuration 4 |
| Bottom Side in body position | N/A |
|  | N/A |
| EUT Setup Configuration 5 | N/A |