


Test Configuration Photos


Test positions for Body:

According to the antenna position, the Body SAR is tested at the following 2 test positions all with the distance =5mm between the EUT and the phantom bottom:

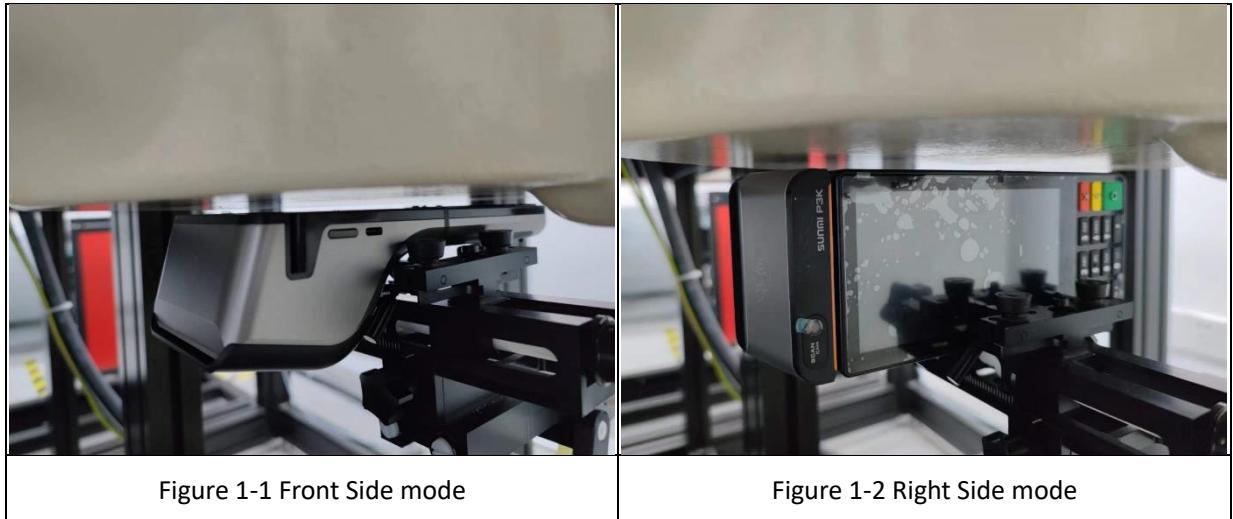

Test positions for Limb:

According to the antenna position, the Limb SAR is tested at the following 2 test positions all with the distance =0mm between the EUT and the phantom bottom:

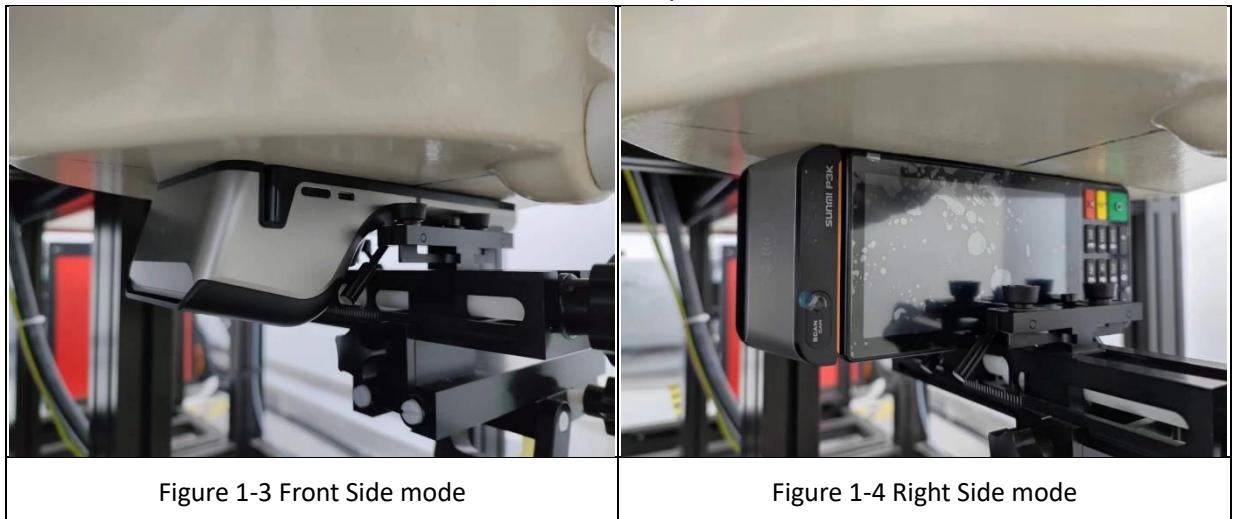

Test positions for sensor triggering minus 1 mm:

The sensor triggering minus 1 mm SAR is tested at the following 1 test positions with the distance =16mm between the EUT and the phantom bottom:



Figure 1-5 Right Side mode 16mm