

Test Configuration Photos

Test positions for Body:

According to the antenna position, the Body SAR is tested at the following **5** test positions all with the distance =5mm between the EUT and the phantom bottom:



Test positions for Limb:

According to the antenna position, the Limb SAR is tested at the following **7** test positions all with the distance =0mm between the EUT and the phantom bottom:

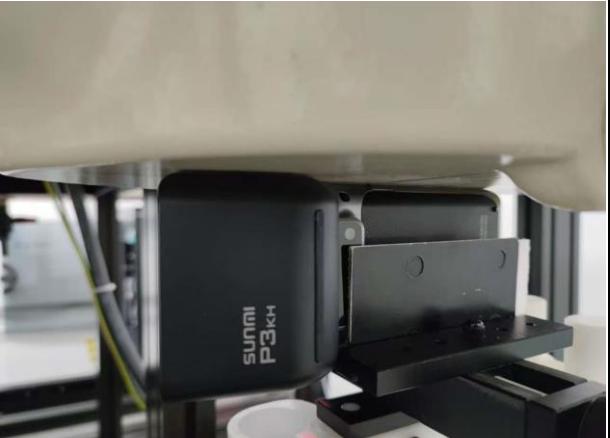
	
Figure 6 Front Side mode	Figure 7 Back Side-1 mode
	
Figure 8 Back Side-2 mode	Figure 9 Back Side-3 mode
	
Figure 10 Left Side mode	Figure 11 Right Side mode



Figure 12 Top Side mode

Test positions for sensor triggering minus 1 mm:

The sensor triggering minus 1 mm SAR is tested at the following 1 test positions with the distance =16mm between the EUT and the phantom bottom:



Figure 13 Right Side mode 16mm