

Test Configuration Photos

Test positions for Body:

According to the antenna position, the Body SAR is tested at the following 5 test positions all with the distance =5mm between the EUT and the phantom bottom:



Figure 1-1 Front Side mode



Figure 1-2 Back Side mode



Figure 1-3 Left Side mode



Figure 1-4 Right Side mode



Figure 1-5 Top Side mode

Test positions for Limb:

According to the antenna position, the Limb SAR is tested at the following 5 test positions all with the distance =0mm between the EUT and the phantom bottom:



Figure 1-6 Front Side mode



Figure 1-7 Back Side mode



Figure 1-8 Left Side mode

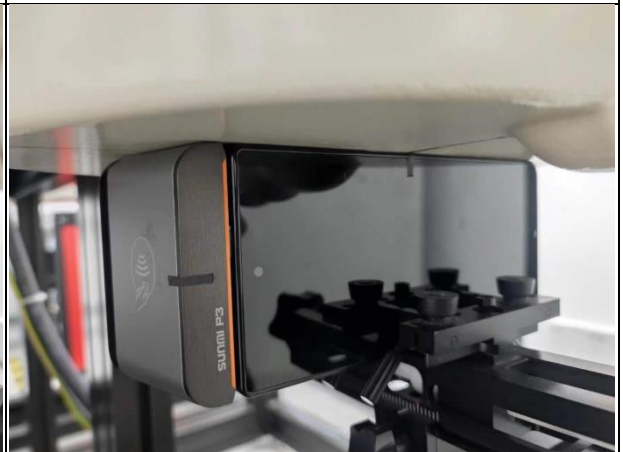


Figure 1-9 Right Side mode



Figure 1-10 Top Side mode

Test positions for sensor triggering minus 1 mm:

The sensor triggering minus 1 mm SAR is tested at the following 1 test positions with the distance =16mm between the EUT and the phantom bottom:

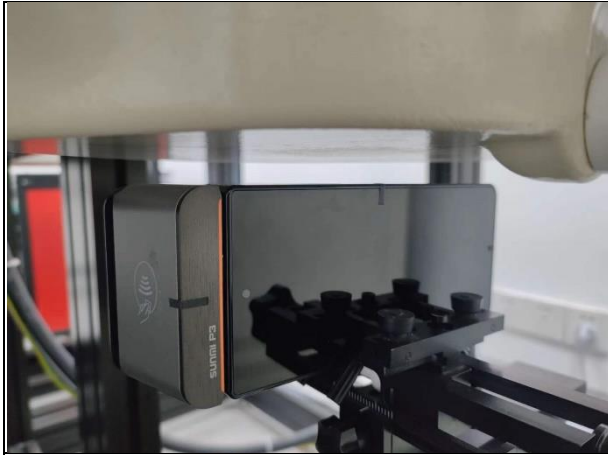


Figure 1-11 Right Side mode 16mm