



2.1 CH MULTIMEDIA SPEAKER MSBT3901

Bluetooth®



DEAR CUSTOMER
Congratulations on your purchase!
Please read this manual carefully and keep it for future reference.

Usage:

Specification:
*Frequency Response:40Hz~20KHz
*S/N Ratio:>75dB
*Separation:>50dB
*Speaker:4"(101.6mm)+2.75"(69.85mm) x 2

Caution:
1. Do not expose to liquids or moisture (or dripping or splashing).
2. Do not place any objects filled with liquids on or over the apparatus.
3. Do not block the ventilation ducts.
4. For indoor use only.
5. When using a high output signal, do not turn up the volume to the maximum level, to avoid distortion.

Inside Package:


Subwoofer Speaker 1pc
Satellite Speaker 2pcs
Audio Cable 1pc
User Manual 1pc
Remote Control 1pc
FM ANT 1pc
Warranty Card 1pc

How to use the Bluetooth:

- 1.Select Bluetooth as the audio input.
- 2.Search for the Bluetooth device with the name "MSBT3901"
- 3.Connect to the Bluetooth.
- 4.If your Bluetooth device is older than version 2.0 please input the passwore " 0000" when connecting.

NO.1

Front panel

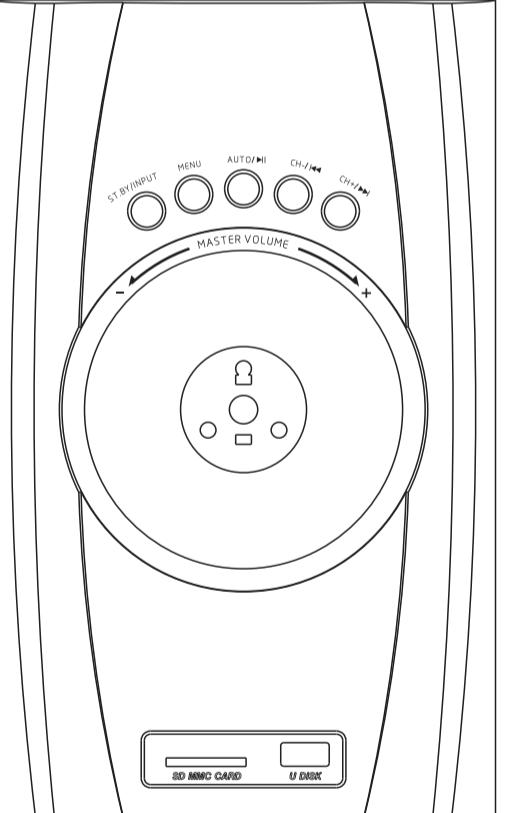

NO.2


Front panel

MASTER VOLUME---when rotating the button, the function is Volume+ / Volume- function
STANDBY ----- Input function key, switch among AUX/USB/SD/ INPUT FM mode: Stand by function by pressing it 3 secs in AUX/USB/SD/FM mode.
MENU -----Menu function key.
AUTO **▶** -----USB/SD pause/Play function key. When the FM state when the automatic search and save the radio station
CH- / **◀** -----"Previous" function Key. Previous song when USB/SD input; Previous channel when FM input.
CH+ / **▶** -----"next" function Key. Next song when USB/SD input; Next channel when FM input.
SD/MMC CARD---SD card socket
U DISK----- USB socket

1 it will take a little long time when the capacity of your Usb and sd card more than 8 GB, suggest using the card below 8GB.
2 When using SD card function ,it is required to choose SD Card whose memory is more than 512M and also is legal edition.

NO.3

System connection diagram

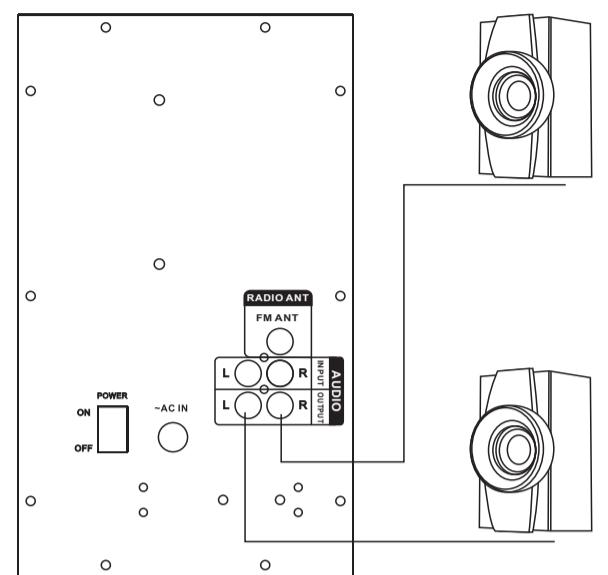


SPEAKER TERMINALS
Connect front speakers, a center speaker, surround speakers to 2.1 speaker output terminals.

NOTE:
* Do not leave objects generating magnetism near the speakers.

NO.4

Positioning the speakers

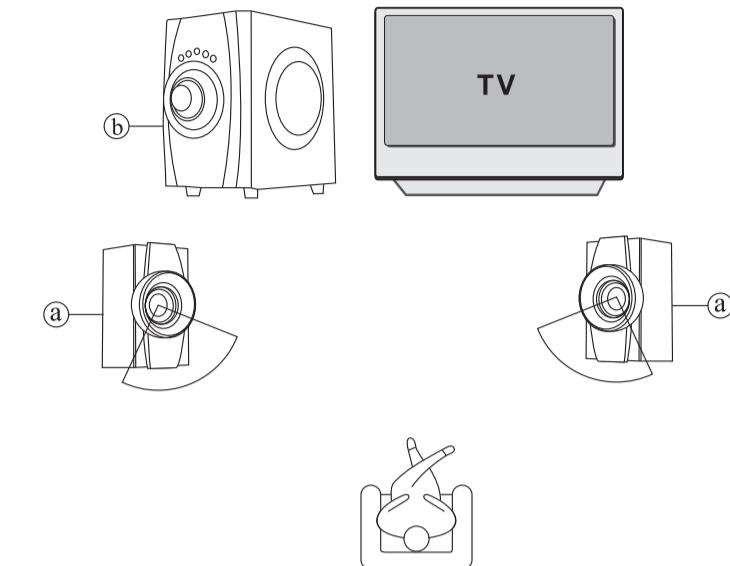

(a) Speakers

(b) Subwoofer
Place the subwoofer any place on the floor.
(There is no directional requirement for the bass effect.)

NO.7

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NO.8

Important

WARNING!

Mobile Phone (via USB), Portable Hard Drive, MP4, and some other USB-powered electronics may not be compatible with this product.




AXESS Products Corporation

6639 Valjean Ave Van Nuys CA 91406
Tel: 818-785-4000 • Fax: 818-785-5081 • info@axessusa.com
Questions? Comments? Contact us at support@axessusa.com
© 2015 Axess Products Corporation. All rights reserved.

NO.9

System connection diagram

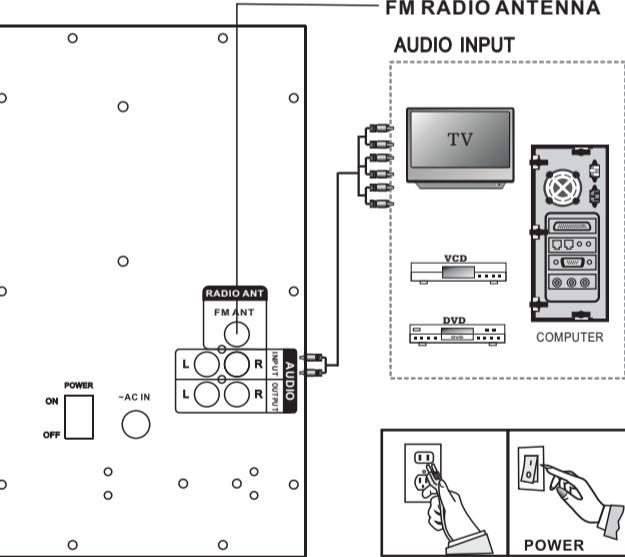

Connecting equipment
Jacks and plugs of the connecting cord are color-coded as follows:
Red jacks and plugs:For the left channel of audio signals

NOTE:
Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.

Important:
Connect the speakers and all other external equipment, and finally connect the AC power cord.

NO.5

HOW TO USE THE REMOTE CONTROL

Stand by -----Stand by
INPUT -----When pressing the button, the function is "INPUT" function
SAVE -----Save FM channel
SLEEP -----Set up the sleep time
MUTE -----MUTE
EQ -----EQ (When USB/SD input)
TUNE/-+ -----Previous/Next Channel Keep Pressing to search
▶ -----Play/Pause
◀ -----Previous song in USB/SD mode/
▶ -----Next song in USB/SD mode
▶ -----Fast forward
◀ -----Rewind
CH-/- -----Previous saved channel in FM mode.
CH+/- -----Next saved channel in FM mode.
DISP -----Lightness Adjust
TUNE/-+ -----Decrease/Increase FM frequency in FM mode
TRE-/+ -----Turn up or turn down the treble volume
BASS-/+ -----Turn up or turn down the bass volume
VOL-/+ -----Turn up or turn down the master volume
TRACK -----Track selection
REPEAT -----It will repeat playing selected song if pressing once.
It will repeat playing songs if pressing twice.
RESET -----Reset to the default setting

*If the Remote Control is not functioning, it is likely because the battery is used up.

Caution:
Batteries (Battery pack or installed batteries) shall not be exposed to excessive heat such as sunshine, fire, or the like. In case of battery leakage, remove the batteries and thoroughly clean the battery compartment. Avoid contact with skin and eyes. Do not dismantle or shred batteries; Do not throw into fire. Dispose of properly, in accordance with the user manual.

NO.6