


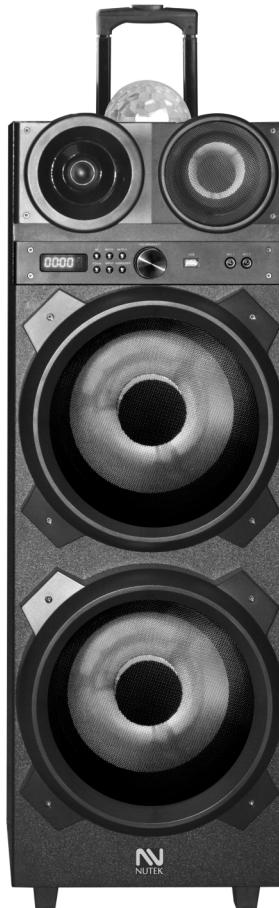

DJ-90210R USER MANUAL


Massive Giga Sound Home Party System

Read this manual before use




Brief instruction of control

REMOTE CONTROL

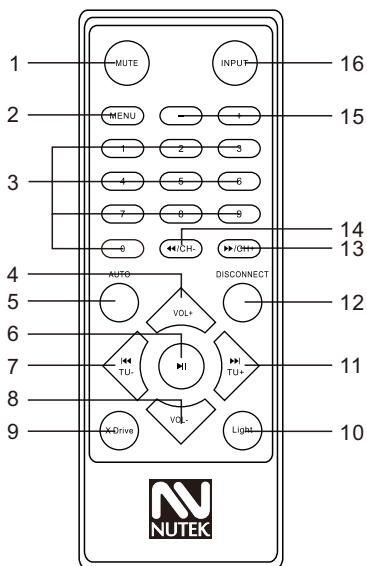

1. MUTE
2. MENU
3. NUMBER BUTTON
4. VOLUME+
5. AUTO
6. PLAY/PAUSE
7. TUNING- \blacktriangleleft
8. VOLUME-
9. X Drive Bass Effect
10. Light mode
11. TUNING+ \triangleright
12. DISCONNECT
13. CHANNEL+ \triangleright
14. CHANNEL- \blacktriangleleft
15. MENU ADJUST
16. INPUT

Using the remote control

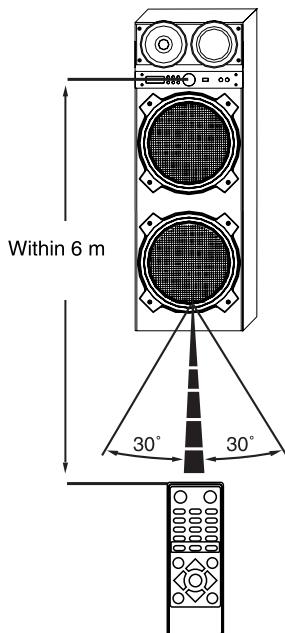


Use the remote control within 6m of this unit and point it toward the remote control sensor.

Notes

- Do not spill liquid on the remote control.
- Do not drop the remote control.
- Do not leave the remote control in the following places:
 - hot or humid places such as a bathroom or near a heater
 - extremely cold places
 - dusty places

FRONT PANEL

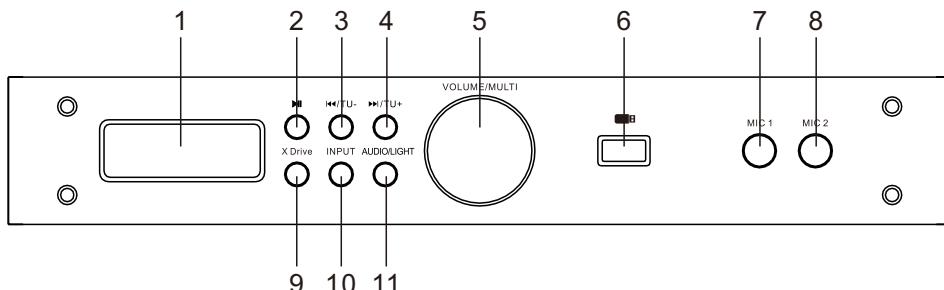

1.LED DISPLAY

2.PLAY/PAUSE

Press this key to play or pause.

3.TUNING-/PREV

Press this key to choose previous/tuning-.

4.TUNING+/NEXT

Press this key to choose next/tuning +.

5.VOLUME/MULTI

This is used to adjust the volume or change the settings on AUDIO/LIGHT menus.

6.USB

USB terminal.

Important:

The USB port is intended only for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

7.MICROPHONE 1

Microphone 1 terminal.

8.MICROPHONE 2

Microphone 2 terminal.

9.X Drive-Bass Effect


10.INPUT

Press this key to choose different input mode.

11.AUDIO/LIGHT

This switch selects AUDIO/LIGHT menu.

REAR PANEL

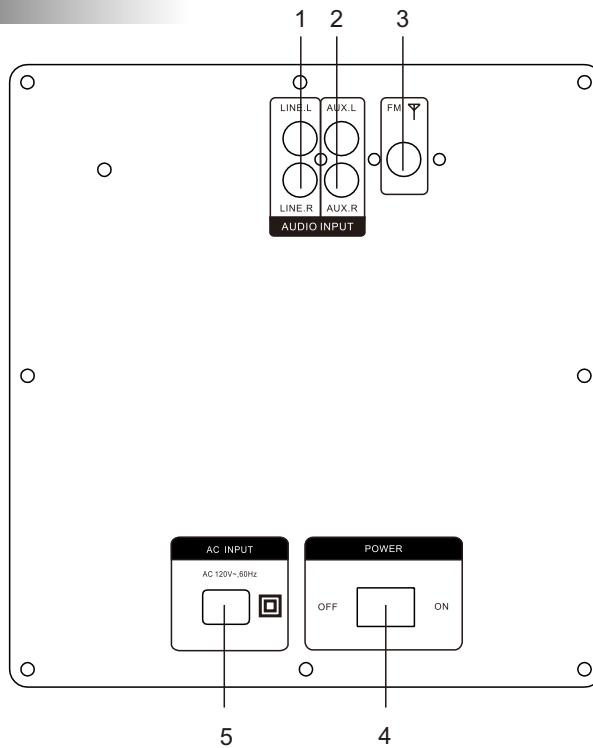

1. LINE IN

Line in audio input jacks.

2. AUX IN

Aux in audio input jacks.

3. FM ANTENNA

FM antenna input jacks.

4. POWER


Switch power on or off.

5. AC INPUT

Connections

Equipment connections instruction(example)

1. Please switch off power when doing connection.
2. All inputs should be inserted firmly to avoid noise distortion.

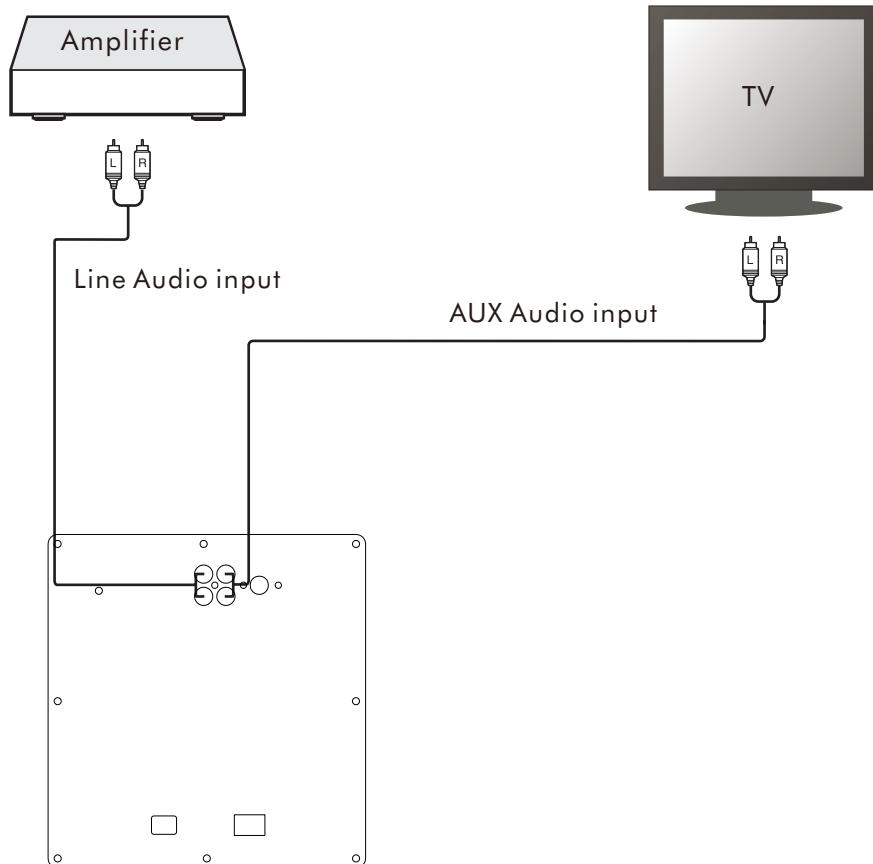

Operation

NORMAL FUNCTION

1. Rotate the VOLUME/MULTI knob on the front panel or press the key VOL+/- on the remote control to adjust the volume control to your listening level.
2. Press the INPUT key on the front panel or press the INPUT key on the remote control to select AM/FM,AUX,LINE IN,USB,BT mode.
3. Press the **◀◀/▶▶** key on the front panel or on the remote control to select previous or next.
4. Press the AUDIO/LIGHT key on the front panel or the MENU key on the remote,then adjust the VOLUME/MULTI or MENU ADJUST+/- key on the remote control to adjust music treble/bass and MIC effect.
5. Press the LIGHT button on remote control to change the OFF, Red, Green, Blue, Red & Green, Red & Blue, Green & Blue, Red Green & Blue, AUTO, DEMO light mode.
6. Press the MUTE key on the remote control to mute, press it again to reset.
Press X Drive on the remote to turn on/off X-Bass effect.

TUNER APPLICATION

1. Before using tuner function, you must attach the supplied antenna. Adjust the antenna to obtain optimum reception.
2. Press INPUT key on the front panel or on the remote control, to select TUNER function, frequency is showed on the LED display.
3. Press or hold the TU- /TU+ keys on the remote control, or on the front panel you can adjust the radio frequency automatically. To Manual tune for weaker stations (that might be skipped during automatic tuning) Press the TU-/TU+ keys repeatedly to change frequency in small increments.
4. To select pre-stored stations press NEXT/PREV buttons.

KARAOKE FUNCTION

1. The machine can auto detect microphone is inserted and the unit will show "mic in" on display. Please turn off the microphone volume and adjust the volume gradually after inserting the microphone.
2. Press AUDIO/LIGHT key on the front panel or the MENU on the remote control to display MV(MIC volume), then press +/- or rotate VOLUME knob to change the microphone VOLUME.
3. Press AUDIO/LIGHT key on the front panel or on the remote control to display EC (MIC echo), then press +/- or rotate VOLUME knob to change the microphone ECHO.

USB APPLICATION

1. Press the input key on the front panel or press the input key on the remote control to select USB mode.
2. Press **◀◀/TU- or ▶▶ /TU+** key on front panel or press **◀◀ or ▶▶** on remote to select forward/ previous songs, Press **▶▶** to play or pause.

Note: Supported music files: MP3, WMA.

Max USB size: 32G

BLUETOOTH PAIR & CONNECTION

- Turn off any Bluetooth devices previously paired (linked) with this unit.
- Turn on the Bluetooth features on your phone or music player.
- Turn on and set this unit in the Bluetooth mode using the input button.
- Set your phone or music players to search for Bluetooth devices.
- Select DJ-90210R from search results on your phone or music player.
- Select OK or Yes to pair this unit with your phone or music player.
- If protected, enter 0000 for passkey. Steady BT light indicates successful connection.
- Press the DISCONNECT key on the remote to disconnect the bluetooth.

Accessories

Remote control-----	1 pc
AM/FM antenna-----	1 set
Instruction Manual-----	1 pc
RCA - RCA cable-----	1 pc

Specification

Frequency Response-----	50KHz
Tweeter-----	1i
Woofer-----	4i
Subwoofer-----	10ix2
Impedance-----	8-16
Power Supply-----	120V~,60Hz
Power Consumption-----	100W
Audio Input-----	TUNE,AUX,USB,BT

■ The specification presents only as a reference. The value of weight and size are approximtion.

■ Our product is improved constantly and the specification and function may be changed without prior notice.

CAUTION

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distances 10 cm around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains completely.
- The main plug of apparatus should not be obstructed or should be easily accessed during intended use.
- The use of apparatus in tropical climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



This unit contains no user serviceable parts inside. Do not attempt to repair the unit yourself. Please refer servicing to a qualified service personnel.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.