


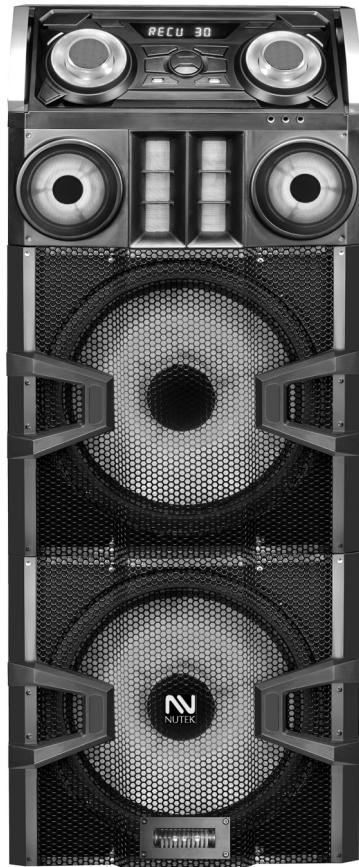

DJ-90215Rplus USER MANUAL

Massive Giga DJ Effect System

Read this manual before use



Caution: Read this before operating your unit.

- 1 To assure the finest performance, please read this manual carefully Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry clean place - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances around the unit.
Top: 10 cm (4 in)
Rear: 10 cm (4 in)
Sides: 10 cm (4 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or Discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not plug in this unit to a wall outlet until all connections are complete.
- 7 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 8 Do not use force on switches, knobs and/or cords.
- 9 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 10 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 11 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. We will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 12 To prevent damage by lightning, keep the power cable and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 13 Do not attempt to modify or fix this unit. Contact Qualified service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 14 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 15 Be sure to read the TROUBLESHOOTING section on common operating errors before concluding that this unit is faulty.
- 16 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 17 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 18 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 19 Install this unit near the AC outlet and where the AC power plug can be reached easily.

TO CUSTOMER

Thank you for purchasing our products, which displays your superior knowledge of audio equipment. You have made an excellent product choice.

Please read all safety and operating instructions in this manual carefully before trying to operate the unit.

INSTALLATION & SAFETY PRECAUTIONS

- * Always connect the power plug to the voltage range specified to the unit 120V~,60Hz in order to avoid fire or electric shock.
- * Never plug or unplug the unit with wet hands. Never unplug the unit by pulling the power cord .Always hold the plug firmly when unplugging.
- * Never block or cover any slots or openings in the unit as this will give poor ventilation that may cause overheating.
- * Always turn off or unplug the unit before making or changing any connections.
- * Never remove any fixed cover,as this may expose dangerous voltage that may cause electrical shock.
- * Never allow electrical/electronic parts to be exposed to dripping or splashing of liquids and never place an object filled with liquids such as a vase on top or beside the unit.
- * Do not put any small metal objects into the unit opening that might cause short-circuit or electrical shock.
- * Always unplug the unit if you will not be using it for a long period of time.
- * Never use the unit during a thunderstorm. Immediately unplug the unit.
- * Never try to repair or modify this unit. Always send the unit to a qualified service centre for repair.

WARNING



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CONNECTIONS


CONNECTION DIAGRAM:

Note:

- Always unplug the unit when making connections.
- Check all connections are firmly fitted.
- Check all speakers are connected to their correct designated position.

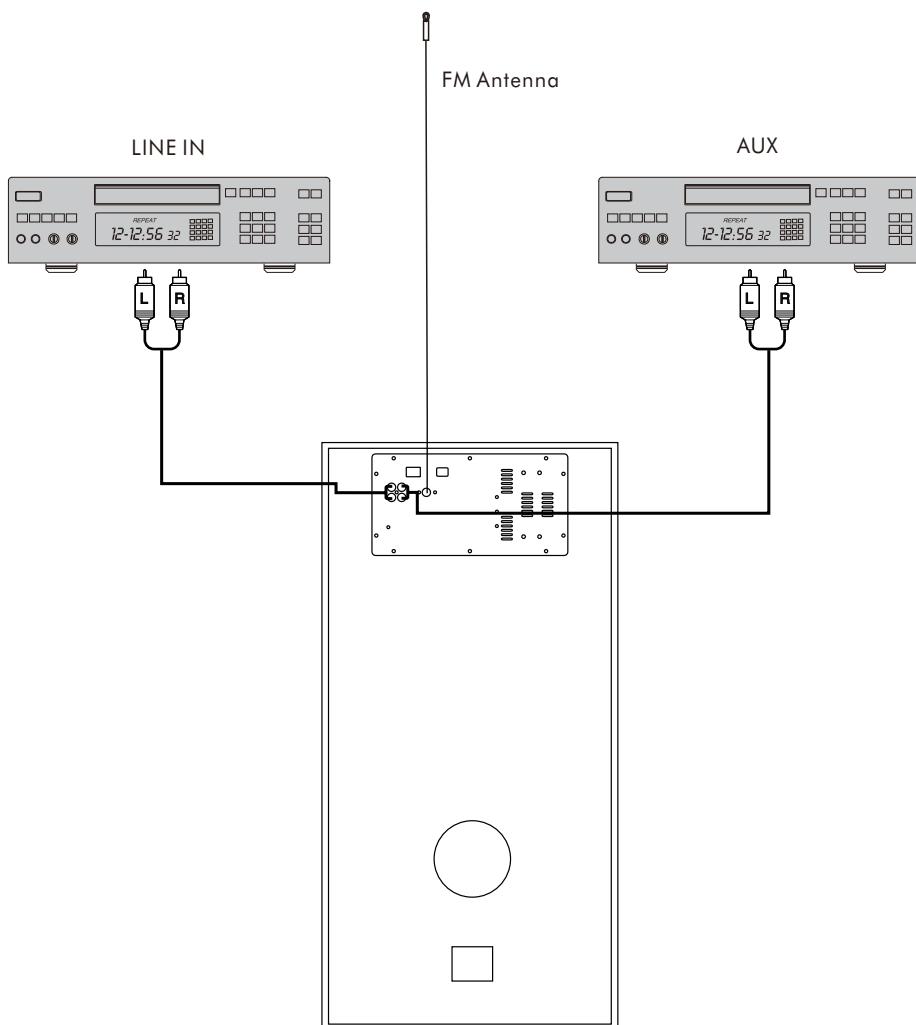

CONTROLS ON PANEL

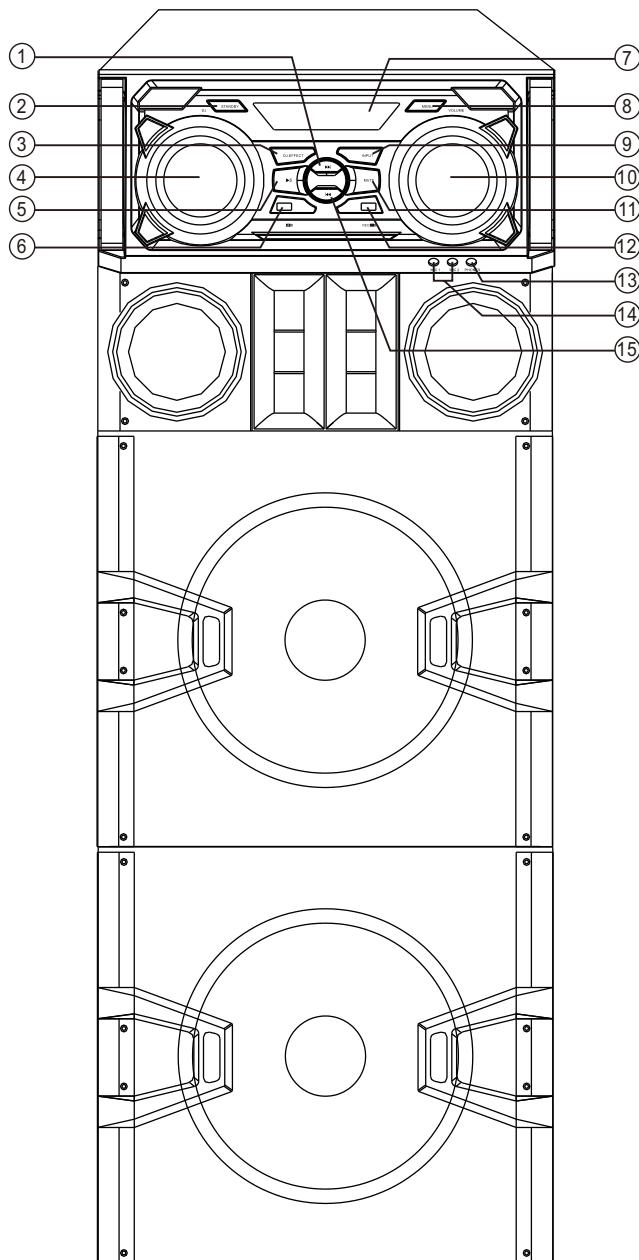

CONTROLS ON PANEL

1.▶▶ (NEXT)

Press this key to choose next song.

2. STANDBY

3. DJ.EFFECT

Press this key to choose DJ effect.

4. DJ

Adjust the knob to design and change the music effect.

5.▶▷ (PLAY/PAUSE)

Press this key to play or pause.

6. USB A

USB A terminal.

7. LED DISPLAY

8. MENU

This switch selects the menu.

9. INPUT

Press this key to choose the input mode.

10. VOLUME

Adjust the unit volume level.

11. MUTE

Press this switch to mute, press again recover.

12. REC-USB

REC-USB terminal.

13. PHONES

phones terminal.


14. MICROPHONE 1&2

Microphone 1&2 terminal.

15.◀◀ (PREV)

Press this key to choose previous song.

TERMINALS ON REAR

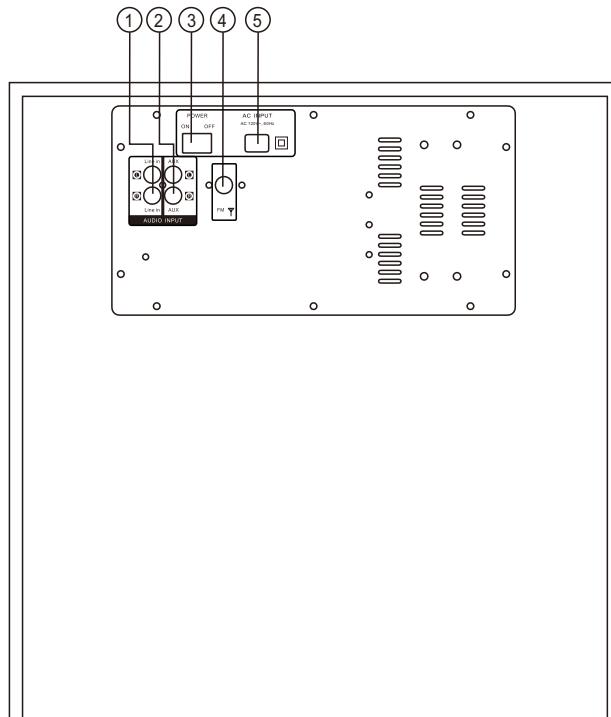

1. LINE IN AUDIO INPUT JACK

Connect to LINE IN signal output jack.

2. AUX AUDIO INPUT JACK

Connect to AUX signal output jack.

3. Power Switch


Press this switch to turn the unit on or off.

4. FM ANTENNA


5. AC INPUT

AC 120V~, 50/60Hz.

REMOTE CONTROL

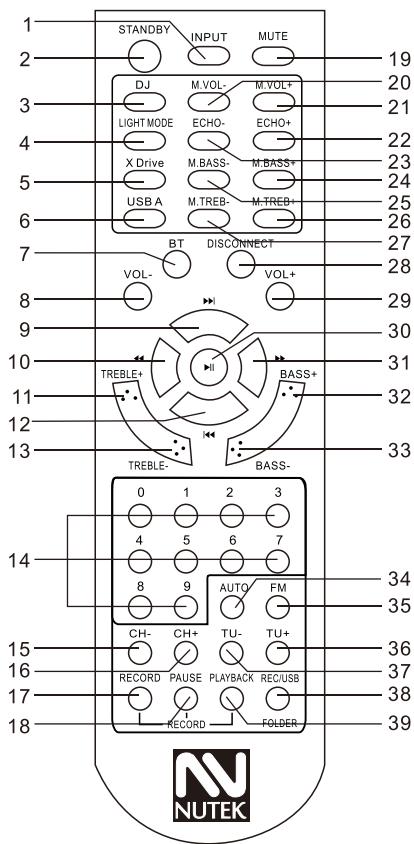

1. INPUT SELECT
2. STANDBY
3. DJ.EFFECT
4. LIGHT MODE
5. X DRIVE
6. USB A MODE
7. BLUETOOTH MODE
8. VOLUME-
9. NEXT ►►
10. B.WARD ◀◀
11. TREBLE+
12. PREVIOUS ◀◀
13. TREBLE-
14. NUMBER BUTTON
15. CHANNEL-
16. CHANNEL+
17. START RECORD
18. RECORD PAUSE
19. MUTE
20. MICROPHONE VOLUME-
21. MICROPHONE VOLUME+
22. MIC ECHO +
23. MIC ECHO -
24. MICROPHONE BASS +
25. MICROPHONE BASS -
26. MICROPHONE TREBLE +
27. MICROPHONE TREBLE -
28. DISCONNECT(BLUETOOTH)
- 29 VOLUME+
30. PLAY/PAUSE ►►
31. F.WARD ►►
32. BASS +
33. BASS -
34. AUTO
35. FM
36. TUNING +
37. TUNING -
38. REC/USB FOLDER
39. RECORDING PLAYBACK

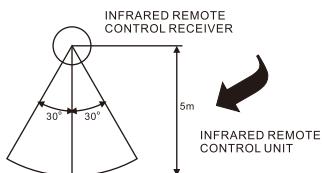

REMOTE CONTROL OPERATION:

- If the remote control conflicts with other devices, the operation will be affected.
- Do not simultaneously press buttons on the unit and the remote control.
- Avoid using two remote controls at the same time as this will cause a malfunction.
- Use only UM-4 ``AAA`` size batteries. Do not mix old batteries with new ones.
- If the batteries leak, clean thoroughly before replacing with new ones.
- Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

OPERATING

NORMAL FUNCTION

1. Be sure to switch off the power and to connect to corresponding input jacks.
2. Turn on the power and wait 3-4 seconds until the speaker functions are connected.
3. Select an audio source by pressing the INPUT key on the front panel or on the remote control to display AUX,LINE IN,USB A,BT,TUNER,RECU.
4. Adjust the VOLUME knob on the front panel or the VOL+/- key on the remote control to adjust the setting of the main volume.
5. Press the MENU key on the front panel to display TREBLE, BASS, XDRIVE,LIGHT MODE, VOLUME then adjust the VOLUME knob to change music treble,bass,light mode and sound effect.
6. Press the DJ EFFECT key on the panel or the DJ button on the remote control to display SCRATCH,REVERB,BEAT BOX,YEAH,OFF mode,then adjust the DJ knob to design and change the music effect as you like.
7. Press the LIGHT button on remote control to change the OFF,R,G,B,RG,RB,GB,RGB,AUTO, DEMO light mode.
8. Press the MUTE key to mute, press it again to reset.
Press X Drive on the remote to turn on/off X-Bass effect.
9. Press the REC/USB FOLDER key, it enable user to switch REC document and NON-REC document directly.

LIGHT COLOR CONTROL FUNCTION

To control the light modes coming from the speaker panels by "Speaker" menu or "light model" button on remote control

- R = red lights flash
- G = green lights flash
- B = blue lights flash
- RG = red and green lights flash
- RB = red and blue lights flash
- GB = green and blue lights flash
- RGB = red, green, and blue lights flash
- Auto = the various color combinations cycle through and flash.
- Demo = lights flash and change color as if they were responding to the beat of the music.

Tuner applications

- 1.Before using the radio functions, you must attach the supplied antenna. Adjust the antenna to obtain optimum reception.
Press the INPUT key on the front panel(amplifier)or on the remote control,to select "FM"function.
2. Press the CH+/CH- key on the remote control to find radio bands that you have previously saved .
3. Press or hold the TU+/TU- key on the remote control to adjust the radio frequency manually.
4. Press the AUTO key on the remote control,the machine will scan radio channels from low-frequency to high-frequency by itself and memorize the channels one by one.

KARAOKE FUNCTION

1. The machine can auto detect whether MIC 1, MIC2 is inserted.
Please turn off the microphone volume and adjust the volume gradually after inserting the microphone.
2. Press M.VOL+/- on the remote to change the microphone VOLUME.
3. Adjust ECHO on the remote to change the microphone ECHO.

Note: Do not touch the top of the microphone when singing in order to avoid howling effect.
Adjust the microphone volume gradually to avoid howling effect.

BLUETOOTH PAIR AND CONNECT

- Turn off any Bluetooth devices previously paired (linked) with this unit.
- Turn on the Bluetooth features on your phone or music player.
- Turn on and set this unit to Bluetooth mode. The flashing blue light BT on LED display indicates it is in pairing mode.
- Set your phone or music player to search for Bluetooth devices.
- Select DJ-90215Rplus from search results on your phone or music player.
- Select OK or YES to pair this unit with your phone or music player.
- If prompted, enter 0000 for passkey steady blue light indicates successful connection.
- Press the DISCONNECT key on the remote to disconnect the bluetooth.

FUNCTION OF USB READER

USB A interface

This unit has two USB jacks. Press the INPUT key to select USB A, then you can insert a USB to play music.

Important: The USB port is intended only for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

REC-USB function

The button of RECORD,PAUSE,PLAYBACK are all for recording use only. REC_USB is recording jack. Recording function only works in the mode of AUX,LINE IN,BT,FM.

- 1.Recording button: Please insert your USB device and press record button, it will show WAITING for few seconds and then RECORDING for a moment before starting button.
- 2.RECORD button: Press this button when in record mode, it will show WAITING on display for a seconds. Then start to play the files recorded.
- 3.PAUSE button: Press PAUSE button to pause recording, press this button again to recording.

HEADPHONE JACK

For private listening, insert a 6.3mm headphone into the PHONE JACK. The SPEAKER output is automatically cut off.

CAUTION: LISTENING AT HIGH POWER FOR A LONG MOMENT COULD DAMAGE USER'S EARS.

SPECIFICATION

FM Frequency-----	87.5-108MHz
Amplifier Output Power-----	120W
Power Consumption-----	250W
Frequency Response-----	38Hz~20KHz
Max. Input Capability-----	500mV
Distortion-----	<1%
S/N-----	75dB

GENERAL REQUIREMENT

Power source-----AC 120V~,60Hz.

ACCESSORY

Remote control-----	1PC
FM Antenna-----	1SET
User manual-----	1PC
RCA - RCA cable-----	1PC

- The specification presents only as a reference. Weight and size values are approximate.
- Our product specifications are subject to change without prior notice.
- The content of this manual has been collated carefully. If there are any mistakes caused by printing or other reasons, please contact us, and we will endeavour to assist you where possible.

CAUTION

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus..
- Minimum distances 10 cm around the apparatus for sufficient ventilation..
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- No naked flame sources, such as lit candles, should be placed on the apparatus..
- When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains completely..
- The main plug of apparatus should not be obstructed or should be easily accessed during intended use..
- The use of apparatus in tropical climates..
- Attention should be drawn to the environmental aspects of battery disposal..
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like..



This unit contains no user serviceable parts inside. Do not attempt to repair the unit yourself. Please refer servicing to a qualified service personnel.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.