


**DJ MIXER ROCKY PARTY SYSTEM
(DJ SPEAKER WITH BT&PRO-MIXER)**

**DJ-MX5330
Instruction Manual**

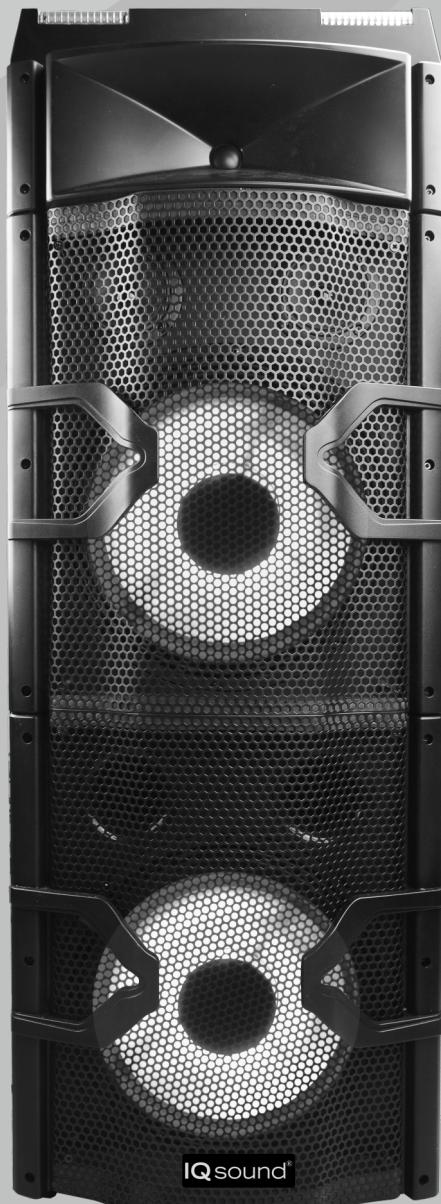


Thank you for purchasing this product

Caution: Read this before operating your unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place - away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. For proper ventilation, allow the following minimum clearances around this unit.
Top: 10 cm (4 inch)
Rear: 10 cm (4 inch)
Sides: 10 cm (4 inch)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
Other components, as they may cause damage and/or discoloration on the surface of this unit.
Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. We will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cable and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact Qualified service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the TROUBLESHOOTING section on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 20 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. When you dispose of batteries, follow your regional regulations.
- 22 Excessive sound pressure from earphones and headphones can cause hearing loss.

REAR PANEL

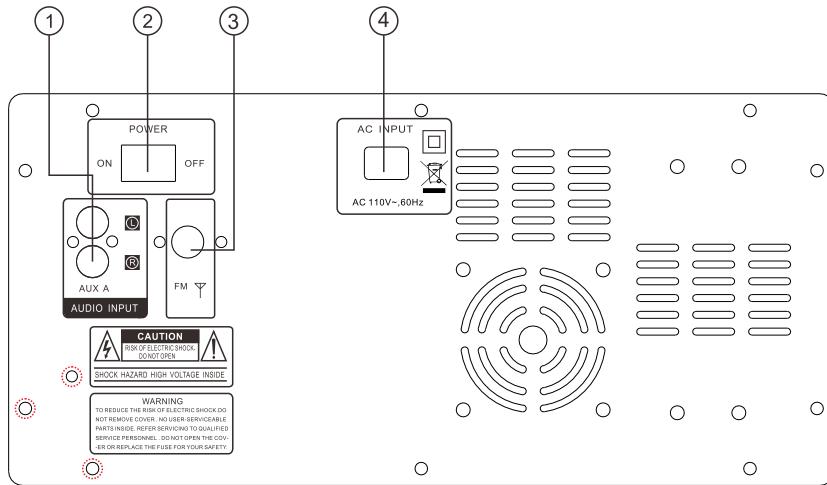

1. AUX A AUDIO INPUT JACK

Connect to AUX A signal output jack.

2. POWER SWITCH


Press this switch to turn the unit on or off.

3. FM ANTENNA

4. AC INPUT


AC 110V~, 60Hz.

FRONT PANEL

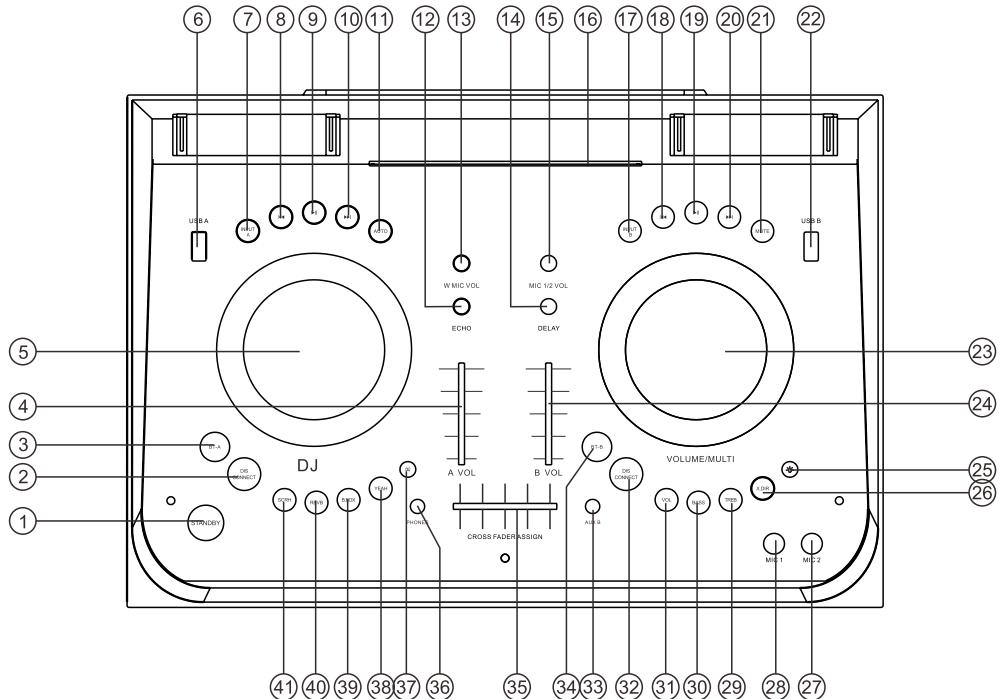


1. STANDBY	20. INPUT B NEXT▶▶ Press this key to choose next music with INPUT B
2. DISCONNECT Disconnect the BT A.	21. MUTE
3. BT A	22. USB B input jack
4. INPUT A VOLUME This is used to adjust the volume with INPUT A	23. VOLUME/MULTI Rotate the knob to adjust the volume and choose different music effect.
5. DJ EFFECT Adjust this key to choose different DJ music effect.	24. INPUT B VOLUME This is used to adjust the volume with INPUT B
6. USB A input jack	25. LIGHT MODE
7. INPUT A Press this key to choose INPUT A mode	26. X DRIVE
8. INPUT A PREV◀◀ Press this key to choose previous music with INPUT A	27. MICROPHONE 2 JACK
9. INPUT A PAUSE▶ Press this key to choose play/pause music with INPUT A	28. MICROPHONE 1 JACK
10. INPUT A NEXT▶▶ Press this key to choose next music with INPUT A	29. TREBLE
11. AUTO	30. BASS
12. ECHO	31. VOLUME
13. WIRELESS MICROPHONE VOLUME	32. DISCONNECT Disconnect the BT B.
14. DELAY	33. AUX B INPUT JACK
15. THE MICROPHONE 1/2 VOLUME	34. BT B
16. LED DISPLAY	35. CROSS FADER ASSIGN
17. INPUT B Press this key to choose INPUT B mode.	36. PHONES JACK
18. INPUT B PREV◀◀ Press this key to choose previous music with INPUT B	37. DJ EFFECT OFF
19. INPUT B PAUSE▶ Press this key to choose play/pause music with INPUT B	38. YEAH mode
	39. BEAT BOX mode
	40. REVERB mode
	41. SCRAHTCH mode

REMOTE CONTROL

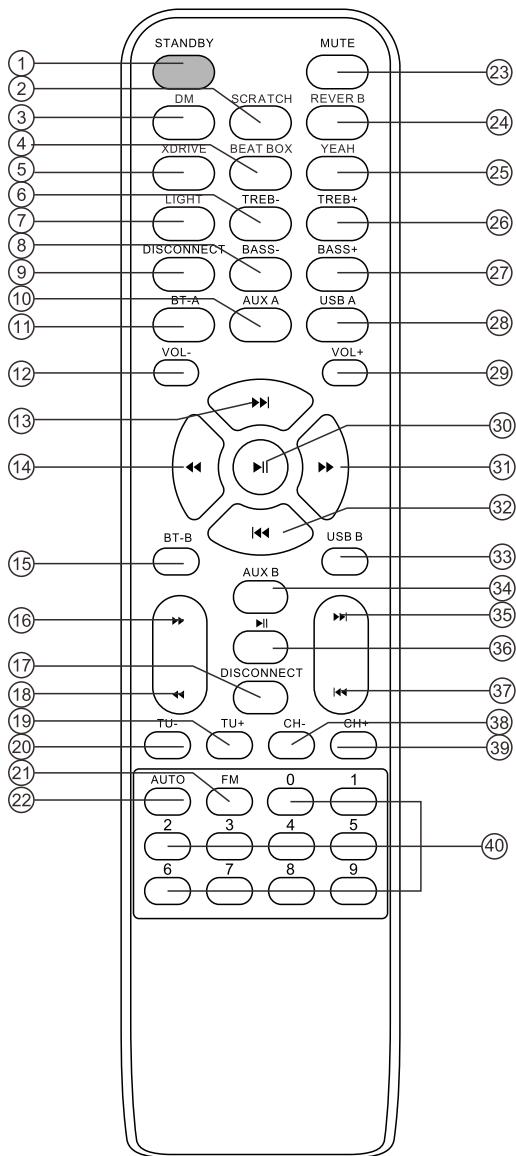

1. STANDBY
2. SCRATCH
3. DRUM
4. BEAT BOX
5. X DRIVE
6. TREBLE+
7. LIGHT
8. BASS-
9. DISCONNECT A
10. AUX A
11. BT A
12. VOLUME-
13. INPUT A NEXT
14. INPUT A B.WARD
15. BT B
16. INPUT B F.WARD
17. DISCONNECT B
18. INPUT B B.WARD
19. TUNING+
20. TUNING-
21. FM
22. AUTO
23. MUTE
24. REVERB
25. YEAH
26. TREBLE+
27. BASS+
28. USB-A
29. VOLUME+
30. INPUT A PLAY/PAUSE
31. INPUT A F.WARD
32. INPUT A PREVIOUS
33. USB-B
34. AUX B
35. INPUT B NEXT
36. INPUT B PLAY/PAUSE
37. INPUT B PREVIOUS
38. CHANNEL-
39. CHANNEL+
40. NUMBER BUTTON

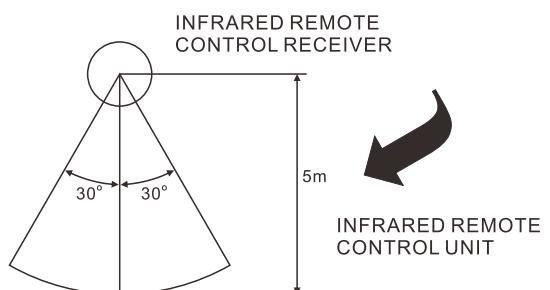

REMOTE CONTROL OPERATION:

If the remote control conflicts with other devices, the operation will be affected.
 Do not simultaneously press buttons on the unit and the remote control.
 Avoid using two remote controls at the same time as this will cause a malfunction.
 Use only UM-4 ``AAA`` size batteries. Do not mix old batteries with new ones.
 If the batteries leak, clean thoroughly before replacing with new ones.
 Do not short two terminals of the batteries. Dispose of old batteries in a suitable place.

Normal function

1. Be sure to switch off the power and to connect to corresponding input jacks.
2. Turn on the power and wait 3-4 seconds till the speaker functions are connected.
3. Select an audio source by pressing the INPUT A key on the front panel to display FM, AUX A, USB A, BT-A. Press the INPUT B key on the front panel to display AUX B, USB B, BT-B.
4. Adjust the VOLUME/MULTI knob on the front panel or the VOL+/- key on the remote control to adjust the setting of the main volume. Then turn the left push shot to adjust the volume of INPUT A, turn the right push shot to change the volume of the INPUT B.
5. Press the DJ button on the front panel to switch DJ effect, and press the SCRATCH, REVERB, BEAT BOX, YEAH button to change the DJ music effect as you like. Press the ~~D~~ off key to turn off DJ effect.
7. Press the LIGHT button on the remote control or press the ~~OFF~~ button on the front panel to display light mode, then press the VOLUME/MULTI knob to change the OFF, R,G,B,RG,RB,GB,RGB, AUTO,DEMO light mode.
8. Press the MUTE key on the panel or remote to mute, press it again to reset. Press the X Drive on the panel or remote to turn on/off X-Bass effect.

Light color control function

To control the light modes coming from the speaker panels by "Speaker" menu or "light model" button on remote control

- R = red lights flash
- G = green lights flash
- B = blue lights flash
- RG = red and green lights flash
- RB = red and blue lights flash
- GB = green and blue lights flash
- RGB = red, green, and blue lights flash
- Auto = the various color combinations cycle through and flash.
- Demo = lights flash and change color as if they were responding to the beat of the music.

Tuner applications

1. Before using the radio functions, you must attach the supplied antenna. Adjust the antenna to obtain optimum reception.
Press the INPUT A key on the top control panel or the FM key on the remote control, to select "FM"function.
2. Press the CH+/CH- key on the remote control to find radio bands that you have previously saved.
3. Press or hold the TU+/TU- key on the remote control to adjust the radio frequency manually.
4. Press the AUTO key on the remote control, the machine will scan radio channels from low-frequency to high-frequency by itself and memorize the channels one by one.

KARAOKE Function

1. The machine can auto detect whether MIC 1, MIC2 or wireless microphone is inserted. Please turn off the microphone volume and adjust the volume gradually after inserting the microphone.
2. Press VOL+/- on the remote or adjust the MIC.VOL knob on the front panel to change the microphone VOLUME.
3. Adjust the ECHO knob on the front panel to change the microphone ECHO.
4. Adjust the W.MIC.VOL knob on the top control panel to change the wireless microphone VOLUME or Adjust the MIC1/MIC2 VOL knob on the top control panel to change the microphone VOLUME

Note: Do not touch the top of the microphone when singing in order to avoid howling effect.

Adjust the microphone volume gradually to avoid howling effect.

BT pair and connect

- Turn off any BT devices previously paired (linked) with this unit.
- Turn on the BT features on your phone or music player.
- Turn on and set this unit to BT mode. The flashing blue light BT on LED display indicates it is in pairing mode.
- Set your phone or music player to search for BT devices.
- Select IQ-4212DJBT A / IQ-4212DJBT B from search results on your phone or music player.
- Select OK or YES to pair this unit with your phone or music player.
- If prompted, enter 0000 for passkey steady blue light indicates successful connection.
- Press the DISCONNECT key on the remote or top control panel to disconnect the BT.

Function of USB reader

This unit has two USB jacks. Press the INPUT A key to select USB A, press the INPUT B key to select USB B, then you can insert a USB to play music. Press the INPUT B key to select USB B, then you can insert another USB to play music.

When two USB inserted at the same time, you can play music at the same time.

Important: The USB port is intended only for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

HEADPHONE JACK

For private listening, insert a 3.5mm earphone into the PHONE JACK. The SPEAKER output is automatically cut off.

CAUTION: LISTENING AT HIGH POWER FOR A LONG MOMENT COULD DAMAGE USER'S EARS.

Accessories

Remote control-----	1 pc
Fm antenna-----	1 pc
Instruction Manual-----	1 pc
Wireless microphones-----	1 pc

Specification

Frequency Response -----	20Hz-20KHz
Power Source -----	110V~,60Hz
Power Consumption -----	190W

- The specification presents only as a reference. The value of weight and size are approximation.
- Our product is Improved ceaselessly and the specification and function may be changed without prior notice.

DJ MIXER ROCKY PARTY SYSTEM(DJ SPEAKER WITH BT&PRO-MIXER)

DOLSONMUSE ELECTRONIC CO.,LTD.

FCC ID: 2AH4GDJ-MX5330

FCC WARNING

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

NOTE: ANY CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.