
It is recommended that you read these instructions carefully before using the Bluetooth® Speakerphone. Always keep your attention on driving safely while using this speakerphone. Never attach speakerphone over the airbag deployment area, as it may cause serious injury when the bag is set off in an accident.

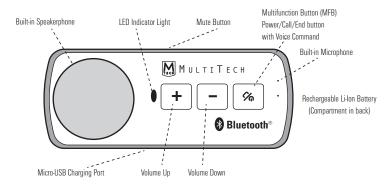

USING YOUR BLUETOOTH® SPEAKERPHONE

Power On: Press and hold down Multifunction Button (MFB) for 2 seconds. You will hear a short beep, see the LED flashing light, and hear a voice prompt: "Power On." Bluetooth Speakerphone will automatically connect to the most recently paired mobile phone.

Power Off: Press and hold down Multifunction Button (MFB) for 3 seconds. You will hear a short beep, see the LED flashing light and hear a voice prompt: "Power Off."

Pairing: The Bluetooth® Speakerphone must be paired manually with a Bluetooth®-enabled mobile phone. Follow the steps below for successful pairing:

- The Bluetooth® Speakerphone and your device must be within 3 feet of each other.
- 2. Make sure the Bluetooth® Speakerphone is in Power Off mode.
- 3. Press and hold the MFB button for 6 seconds until you see the flashing blue light.

- 4. Activate your mobile phone's Bluetooth® function, enabling it to search for the Bluetooth® Speakerphone. Select "BT Speakerphone" on your phone's list to enable pairing. If prompted for a password, type in "0000."
- 5. When pairing is complete, you may hear a long beep, the blue LED indicator light will flash slowly 3 times.
- 6. Your Bluetooth® Speakerphone will automatically go into Standby mode, as indicated by the blue LED lights flashing guickly 2x every 3 seconds.

Note: if the Bluetooth® Speakerphone does not pair with your device within 2 minutes, it will go into Standby mode. Repeat the above steps if pairing was unsuccessful.

Pairing with a different device

Use your mobile phone to disconnect from the Bluetooth® Speakerphone and follow the steps above to reconnect to a different device.

Using your hands-free Bluetooth® Speakerphone to make and receive calls:

Make sure your mobile device is fully charged and the Bluetooth® Speakerphone is within 10 meters (approx. 32 feet) of your device when in use. The connection will be lost at any farther distance.

Answering the phone (incoming calls):

Whenever there is an incoming call, the Bluetooth® Speakerphone will ring as your mobile does, or prompt you with any ringtones you have assigned to your incoming calls. Answer this call by pressing the MFB button or answer the call directly from your phone. Some phones have an auto-answer function, in which case you can start talking through your Bluetooth® Speakerphone without pressing the MFB button.

To end a call: Press the MFB button once or end it directly from your mobile phone.

To reject an incoming call: Press the MFB button for 3 seconds, which will reject the incoming call.

Transferring your current call from the speakerphone to your mobile phone:

If you want the call to transfer to your mobile phone during the conversation, press the Mute button once. To return the call to the Bluetooth® Speakerphone, press the Mute button once.

Making a call (outgoing calls):

You can initiate a call either from your mobile phone or from the Bluetooth® Speakerphone using the voice-dialing command. Make sure your mobile phone supports this feature:

Press the MFB button once to activate the outgoing call function. If your phone supports voice-dialing, then simply speak out your command to initiate dialing. If the voice-dialing feature is unavailable on your phone, you will need to use your phone to place the call, and then you can use the Bluetooth® Speakerphone to continue the call (press Mute button once to switch to the speakerphone).

Adjust the Speaker volume:

Simply press and hold the + or – buttons for volume adjustments.

Charging your Bluetooth® Speakerphone

The Bluetooth® Speakerphone kit comes with a rechargeable battery, 1 USB to micro-USB cable, and a car lighter charger. It is recommended to fully charge the battery before the first use. A full charge takes approximately 3 hours. While charging, the red LED indicator light will stay on. When the battery is fully charged, the red light will go off and you will hear the voice prompt: "Power off."

NOTE: To extend the life of the battery and for best performance of your Bluetooth® Speakerphone, always charge the battery when the red low-battery indicator light flashes every 3 seconds. Your Bluetooth® Speakerphone will shut off automatically if the battery is too low (red light will flash every 3 seconds, after which it will shut off). In this case the LED charging indicator lights may be delayed for a few minutes as the battery recharges.





•





- Do not expose the Bluetooth® Speakerphone to liquid, moisture or high humidity, as it is not waterproof.
- Do not use abrasive cleaning products on the Bluetooth® Speakerphone.
- Do not place on high temperature surfaces. This may result in an explosion.
- Placing on sharp objects or rough surfaces may cause scratching or damage.
- Do not disassemble and try to repair. The Bluetooth® Speakerphone contains no serviceable parts.
- If not using for long periods of time, store the Bluetooth® Speakerphone in a cool, dry place and remove the rechargeable battery and store separately.

LED Light Indicator Modes

Speakerphone Status	Red LED	Blue LED	Sound	Voice Prompt
Off Mode	Off	Off		
Power On		On for 2 sec.	On	Yes
Power Off		On for 3 sec.		Yes
Stand-by before pairing		Flash every 3 sec.		
Pairing in Progress		Flashes after 6 sec.	Yes	
Pairing Complete		Flash on every 3 sec.	Short Beep	
Stand-by after pairing		Flash every 3 sec.		Yes
Stand-by Low Voltage	Flash every 3 sec.	Flash every 3 sec.		Yes
Call in progress		Flash on every 3 sec.		Yes
Charge in Progress	Steady On			
Charge Completed	Off			

Product Specifications

Working voltage	3.3-4.2V
Consumption rate of	0.6W
Working temperature	68~122° F
Frequency response	20Hz-15Khz
A2DP (Audio Distribution Profile Advance) wi	th Bluetooth® voice
Bluetooth® transmission distance	10-15m
Charge voltage	5V/500mAh
Bluetooth® version	v3.0 + EDR
Normal charging time	about 3 hours.
Time - continuous talk hands-free calls	about 16 hours
Stand-by timeup to 50 hour	s of continuous use

Troubleshooting


If you are unable to connect the speakerphone to your mobile phone, try the following:

- Make sure your mobile phone and speakerphone are paired.
- Be sure your phone's Bluetooth® function is turned on. Refer to your device's User Guide.
- Speakerphone and your mobile phone should be not further than 33 feet apart for a good connection. Walls or other electronic devices found in between your phone and the speakerphone may interfere with operation.
- You may also remove the rechargeable battery for a time and then retry.
- Make sure your phone is compatible with Bluetooth® v3.0.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Any use of such marks by Books Are Fun™ is under license.



& Bluetooth® HANDS-FREE WIRELESS CAR SPEAKERPHONE

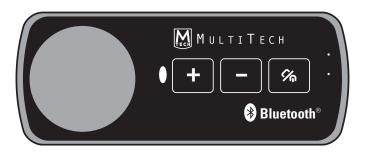

USER'S GUIDE









Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhenshi Junengtong Electronics Co, Ltd may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.