

photive

USER GUIDE

PH-HF1
LIGHTWEIGHT WIRELESS HEADPHONE

WELCOME


Thank you for purchasing the Photive PH-HF1 and welcome to the Photive family!

This product is designed to provide you with portable wireless high quality sound for your iPad, iPhone, iPod, computer or other Bluetooth audio devices. This instruction booklet explains the basic operations, specifications and care of the unit. Please read them carefully and keep for future reference.


TABLE OF CONTENTS

PACKAGE FUNCTION	4	TROUBLESHOOTING	13
CHARGING	6	SPECIFICATION	15
PAIRING	7	SAFETY INFORMATION	16
LINE-IN	8	FCC INFORMATION	18
HANDS-FREE SPEAKERPHONE OPERATION	11	WARRANTY INFORMATION	20
INSTRUCTION			

 PACKAGE

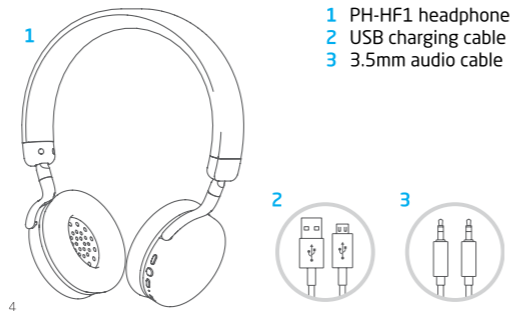


FUNCTIONS

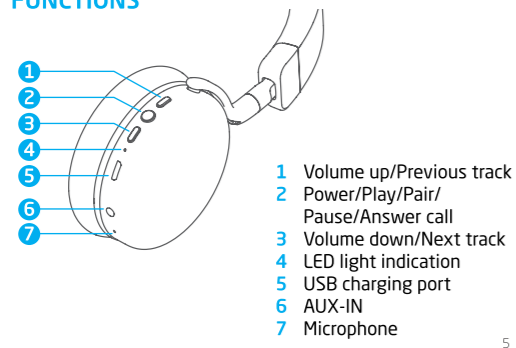 


PAIRING

 - Press and hold the Power button to turn your headphone on as shown.
- The Bluetooth LED indicator will flash red and blue.
- Enable your Bluetooth device such as cell phones, tablets or other Bluetooth media and make sure it is in searching mode.
- Select "Photive HF1 headphones" in the list shown in the Bluetooth device.

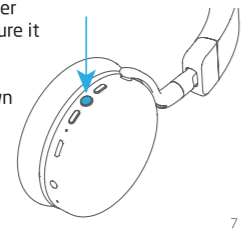

Please note: the changing track buttons only work when connected wirelessly via Bluetooth. Volume function will work in Aux-in mode.

 
IMPORTANT This Aux-in port is for audio input only. Please DO NOT connect other headphones.

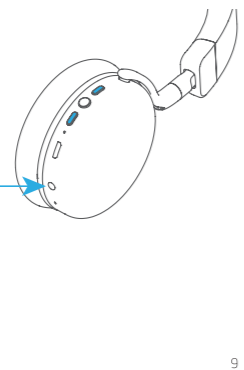

OPERATION INSTRUCTION

VOLUME ADJUSTMENT

 At any time while playing music, the volume can be changed with the Volume up (Previous track) or Volume down (Next track) button. To raise the volume, press the Volume up button. To lower volume, press the Volume down button as shown. There will be a tone from the headphone to indicate that the level has reached maximum or minimum volume.

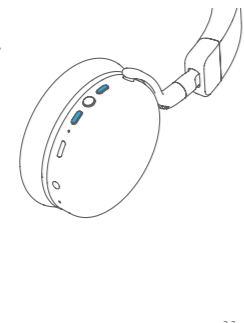

CHARGING

Before using your PH-HF1, please charge it using the micro USB charging cable included in the package. Please note: Most USB chargers are compatible with PH-HF1. For optimal AC charging, please use a 1.0A USB charger.

Plug the small micro USB pin into the charging port on the right side of the headphone, and the other end of the cable (the standard USB 2.0 plug) into any standard USB port (such as a computer or USB charger).

The LED light on the right side ear cup will turn red when it is being charged. When it is fully charged, the LED indicator light will turn blue. The headphone can be charged while playing music.

Note

 
- If it prompts, please enter password "0000" for a connection.
- The headphone will automatically reconnect to the last connected Bluetooth enabled audio device.
- IMPORTANT** When you need to connect your headphone with another Bluetooth enabled audio device, hold the PAIRING button (power button) until the Bluetooth LED indicator flashes quickly. This will put the headphone into pairing mode.

LINE-IN

If your device is not Bluetooth enabled you can still enjoy your music simply by using the Line-In Audio Jack. Connect the headphone with the audio cable that is included in the package to any device with a 3.5mm standard audio jack. Once connected the headphone can be used as a wired headphone.

HANDS-FREE SPEAKERPHONE

- You can use PH-HF1 as a portable headphone for incoming calls when connected wirelessly and outgoing calls via Bluetooth.
- Take your call by pressing the Power button. Press once again when ending the call. Music will resume automatically.
- To make a call, simply dial your cell phone and talk to the speakerphone. Once your call is connected, choose PH-HF1 in the headset options.

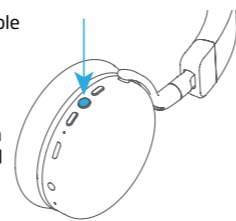


CHANGING TRACKS

Press and hold the Previous track (Volume up) or Next track (Volume down) button on the right ear cup to change tracks.

Please note: If listening to music via the Aux line in the track controls on the headphone will not function. Control the track from the device playing audio (ie: Smartphone, Tablet)

PLAY AND PAUSE

 Press the Power button on the headphone to play/pause the music.

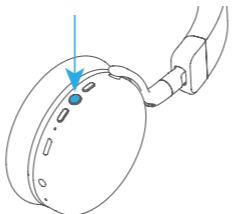

TROUBLESHOOTING

No power

Ensure the headphone is charged and with enough power for operation. The headphone can be used when it is in charging mode.

No sound

Ensure the headphone is on. Ensure your Bluetooth device is on. If the volume of the headphone is too low, adjust the volume to an appropriate level.

Unable to connect

Press the pairing button until the LED indicator flashes quickly. The Bluetooth headphone will go into pairing mode. Select PH-HF1 on your Bluetooth enable device.

SPECIFICATION

Headphone parameters

Bluetooth: Bluetooth V4.1
Power Input: DC 5V 300mA
Support: HFP1.6, A2DPV1.2, AVRCP1.4, HSP1.2
Audio SNR: >90dB
Play time: about 12 hours
Charging time: about 2 hours
Effective distance 33ft (10m)

NOTES

Do not expose the built-in battery to excessive heat, including direct sunlight and fire. In addition, do not expose it to rain, moisture and any kinds of liquid. This headphone is in compliance with the specified Bluetooth version. It does not guarantee compatibility of all functions on every Bluetooth enabled device. Please check with your mobile phone's user manual for compatibility and functionality.

Automobile Accident Hazard

- Do not leave or store the PH-HF1 or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys.
- Do not place the PH-HF1 on high surfaces such as shelves. During music playback the PH-HF1 may move which could cause the PH-HF1 to shift and fall off of the edge.
- Do not attempt to repair, modify or disassemble your PH-HF1 yourself. It does not contain any user-serviceable components.
- Do not attempt to replace your PH-HF1 battery. It is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your PH-HF1. Other chargers may look similar, but using them could result in electric shock and could damage the PH-HF1.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your PH-HF1 prior to boarding an aircraft. Do not use the PH-HF1 inside an aircraft unless allowed by your airline.
- Dispose of the PH-HF1 and the PH-HF1's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

CAUTION

- Do not use abrasive cleaners to clean your PH-HF1 because this could cause scratches and damage.
- Do not bring your PH-HF1 in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your PH-HF1 unless otherwise specified in the user instructions. This may damage the internal components.

4 Consult the dealer or an experienced radio/TV technician for additional suggestions.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

or replacement.

Please have your model number available along with your date of purchase. To receive Warranty service, the original consumer purchaser must contact Photive for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to Photive, or an authorized customer service provider, in order to obtain the requested service.

For warranty & support, please visit us at
www.photive.com

EXCLUSIONS AND LIMITATIONS

This Warranty covers manufacturing defects in materials and workmanship encountered in the normal, noncommercial use of the Product, and does not cover (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, or excess voltage or current; (b) improper or incorrectly performed repairs by non-authorized service facilities; (c) on-site consumer instruction or adjustments; (d) transportation, shipping, delivery, insurance, installation or set-up costs; (e) costs of product removal, transportation or reinstallation costs; (f) ordinary wear and tear, cosmetic damage

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on warranties, so the above limitations or exclusions may not apply to you. This Warranty gives you specific rights, and you may have other rights, which vary from state to state.

Poor sound quality from the Bluetooth device
Ensure placing the headphone and Bluetooth device within 33-ft. (10m) sensing distance and with no barriers.

Notes Clean the headphone with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners for cleaning.

14

SAFETY INFORMATION

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not expose your PH-HF1 to liquid, moisture, humidity, or rain. Do not use the PH-HF1 near a bathtub, sink, sauna, pool, or steam room. Exposure of the PH-HF1 to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the PH-HF1. Such actions could result in electric shock.
- Clean the PH-HF1 only with a dry cloth.
- Do not expose your PH-HF1 to extremely high or low temperatures.
- Do not leave your PH-HF1 in direct sunlight for extended periods of time.

- Do not leave your PH-HF1 near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

Battery/Charger Hazard

- Do not dispose of your PH-HF1 in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the PH-HF1.
- Do not attempt to disassemble the PH-HF1 charger or force open the built-in battery because this may result in electric shock.
- Do not charge the PH-HF1 in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the PH-HF1 when it is being charged. Always unplug the charger first before cleaning the PH-HF1.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected

WARRANTY INFORMATION

This Product (including any accessories included in the original packaging) as supplied and distributed in new condition, is warranted by Photive to the original consumer purchaser against defects in material and workmanship ("Warranty") as follows:

- LABOR** - For a period of one (1) year from date of original consumer purchase, if this Product or any part is determined by Photive, or a Photive authorized service provider, to be defective, Photive will repair or replace the Product with new or refurbished product of similar or better quality, at Photive's option, at no charge to the original consumer, or pay the labor charges to any Photive authorized service provider. After the one (1) year Warranty period, you must pay for all labor charges.
- PARTS** - For a period of one (1) year from the date of original consumer purchase, Photive will supply, at no charge to the original consumer, new, rebuilt or refurbished replacement parts in exchange for defective parts, or will replace the Product with new or refurbished product of similar or better quality, at Photive's option, at no charge to the original consumer. After the one (1) year Warranty period, you must pay for the costs of all parts.
- SHIPPING COSTS** - Notwithstanding the foregoing, the original consumer is responsible for any shipping charges incurred to ship the Product or part(s) to Photive or to a Photive authorized customer service provider, for diagnosis, repair

or damage due to acts of nature, accident; (g) commercial use of the Product; (h) modification of or to any part of the Product. This Warranty applies to the original consumer only and does not cover products sold AS IS or WITH ALL FAULTS, or consumable (e.g., fuses, batteries, bulbs etc.). This Warranty is valid only in the United States, and only applies to products purchased and serviced in the United States. All replaced parts and products, and products on which a refund is made, become the property of the Warrantor.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY TO THE PRODUCT. THE WARRANTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON THE WARRANTOR.

REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT THE WARRANTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. THE WARRANTOR SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT NOTWITHSTANDING THE FOREGOING. CONSUMER'S RECOVERY SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY Photive. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

photive

© 2016 Photive Edison, NJ 08837

iPhone is a trademark of Apple Inc. in the U.S. and/or other countries. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners. The illustrated product and specifications may differ slightly from those supplied. Made in China

11

12

23