

Printed black & white, one sided & folded accordion style with Photo Image page as front.
Each page 65mm by 90mm or paper is 260 mm across by 90mm high when cut for folding.
NOTE: Red lines are die-line guide (on its own layer) to be deselected before printing.

SKU 20522 rev date 062021

SIGNED BY
EDDIE DANA



True Wireless Earbuds User Manual



Please read all instructions carefully
and retain for future use.

CONTENTS

- 2 x Earbuds
- 1 x Charging case
- 1 x USB Type C[®] charging cable



- 1. Magnetic Bottom
- 2. LED indicator on the earbuds
- 3. Multi-Function Button (MFB)
- 4. Dust-proof mesh
- 5. LED indicator on the charging case
- 6. USB Type C[®] input

SPECIFICATIONS

Bluetooth[®] version: V5.0
Frequency Response: 2.402 GHz - 2.480 GHz
Distance: Up to 32ft
Play Time: Up to 3-4 hours
Earphone Battery Capacity: 30 mAh
Charging Case Battery Capacity: 200 mAh
Charging Case Charge Time: Up to 2 hours

GENERAL FUNCTIONS

1. **POWER ON:** Taking out the earbuds from the charging case will turn on earbuds automatically. (Pressing down on the MFB for 3 seconds can also turn on the earbuds)

2. **POWER OFF:** Placing the earbuds into the charging case will turn off earbuds automatically. (Pressing down on the MFB for 3 seconds can also turn off the earbuds)

3. **PAIRING:** The earbuds will automatically connect to each other upon retrieval from the charging case (Red & Blue LED indicator colors flashing alternately), and you will hear the prompt tone "Connected." Only one earbud LED indicator color flashing Red will be seen after connected.

Open the Bluetooth[®] function on your device to search for nearby Bluetooth[®] devices. Select the "Just Wireless" from the list of available Bluetooth[®] devices. Once paired successfully, you will hear prompt tone "Connected." You can then play music or take calls with your earbuds. (All LED indicators will be off when successfully connected to device)

4. **PLAY / PAUSE MUSIC:** Pause the music by pressing the MFB. Press it again to restart the music.

5. **PREVIOUS / NEXT SONG:** Press 3 times on the left earbud for previous song and press 3 times on the right earbud for next song

6. **VOLUME CONTROL:** While playing music, press down on the left earbud for 1.5 seconds to turn up the volume, and press on the right earbud for 1.5 seconds to turn down the volume.

7. **ANSWER / HANG UP / REJECT A CALL:** For incoming phone calls, 2 taps on the MFB will answer the call, and 2 taps on the MFB again (or pressing down for 1.5 seconds) will end the call. Additionally, pressing down for 1.5 seconds on the earbud rejects a call.

CHARGING

1. CHARGING THE EARBUDS:

Put both earbuds into the charging case. The earbuds will automatically start to charge. The LED indicator on earbuds will be Red while charging and will turn off once the earbuds are fully charged. While charging the earbuds, the charging case LED indicator will be Blue, and will turn off once the earbuds are fully charged.

2. CHARGING THE CHARGING CASE:

Connect USB Type C[®] end of the cable into the USB Type C[®] port on the charging case and connect the USB end into your charging device. The maximum power input of the earbuds is 5V/1A. **Please check the charger output before charging.** The indicator on the charging case will flash Red while charging and will stay solid Red once the charging case is fully charged.

Bluetooth and associated product marks are the trademarks of an independently owned and operated company. This product has not been licensed by this company. USB-C[®] is a registered trademark of USB Implementers Forum.

For Warranty information, please visit our website.

www.justwireless.com

info@justwireless.com

140 58th St, Brooklyn, NY 11220

© 2021 Just Wireless. Made In China.

SKU 20522

REV062021

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Printed black & white, one sided & folded accordion style with Photo Image page as front.
Each page 65mm by 90mm or paper is 260 mm across by 90mm high when cut for folding.
NOTE: Red lines are die-line guide (on its own layer) to be deselected before printing.

SKU 20521 rev date 062021

SIGNED BY
EDDIE DANA



True Wireless Earbuds User Manual



Please read all instructions carefully
and retain for future use.

CONTENTS

- 2 x Earbuds
- 1 x Charging case
- 1 x USB Type C® charging cable



- 1. Magnetic Bottom
- 2. LED indicator on the earbuds
- 3. Multi-Function Button (MFB)
- 4. Dust-proof mesh
- 5. LED indicator on the charging case
- 6. USB Type C® input

SPECIFICATIONS

Bluetooth® version: V5.0
Frequency Response: 2.402 GHz - 2.480 GHz
Distance: Up to 32ft
Play Time: Up to 3-4 hours
Earphone Battery Capacity: 30 mAh
Charging Case Battery Capacity: 200 mAh
Charging Case Charge Time: Up to 2 hours

GENERAL FUNCTIONS

1. **POWER ON:** Taking out the earbuds from the charging case will turn on earbuds automatically. (Pressing down on the MFB for 3 seconds can also turn on the earbuds)

2. **POWER OFF:** Placing the earbuds into the charging case will turn off earbuds automatically. (Pressing down on the MFB for 3 seconds can also turn off the earbuds)

3. **PAIRING:** The earbuds will automatically connect to each other upon retrieval from the charging case (Red & Blue LED indicator colors flashing alternately), and you will hear the prompt tone "Connected." Only one earbud LED indicator color flashing Red will be seen after connected.

Open the Bluetooth® function on your device to search for nearby Bluetooth® devices. Select the "Just Wireless" from the list of available Bluetooth® devices. Once paired successfully, you will hear prompt tone "Connected." You can then play music or take calls with your earbuds. (All LED indicators will be off when successfully connected to device)

4. **PLAY / PAUSE MUSIC:** Pause the music by pressing the MFB. Press it again to restart the music.

5. **PREVIOUS / NEXT SONG:** Press 3 times on the left earbud for previous song and press 3 times on the right earbud for next song

6. **VOLUME CONTROL:** While playing music, press down on the left earbud for 1.5 seconds to turn up the volume, and press on the right earbud for 1.5 seconds to turn down the volume.

7. **ANSWER / HANG UP / REJECT A CALL:** For incoming phone calls, 2 taps on the MFB will answer the call, and 2 taps on the MFB again (or pressing down for 1.5 seconds) will end the call. Additionally, pressing down for 1.5 seconds on the earbud rejects a call.

CHARGING

1. CHARGING THE EARBUDS:

Put both earbuds into the charging case. The earbuds will automatically start to charge. The LED indicator on earbuds will be Red while charging and will turn off once the earbuds are fully charged. While charging the earbuds, the charging case LED indicator will be Blue, and will turn off once the earbuds are fully charged.

2. CHARGING THE CHARGING CASE:

Connect USB Type C® end of the cable into the USB Type C® port on the charging case and connect the USB end into your charging device. The maximum power input of the earbuds is 5V/1A. **Please check the charger output before charging.** The indicator on the charging case will flash Red while charging and will stay solid Red once the charging case is fully charged.

Bluetooth and associated product marks are the trademarks of an independently owned and operated company. This product has not been licensed by this company. USB-C® is a registered trademark of USB Implementers Forum.

For Warranty information, please visit our website.

www.justwireless.com

info@justwireless.com

140 58th St, Brooklyn, NY 11220

© 2021 Just Wireless. Made In China.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SKU 20521

REV062021