

Classic Wooden Turntable with Dust Cover

古典木质带防尘盖唱盘机



Instruction Manual

说明书手册

BOX CONTENTS

Make sure that the items listed below are included in the box:

- ◆ Main Unit
- ◆ Power Adapter
- ◆ Instruction Manual

箱内内容


请确认盒子内有以下物件：

- ◆ 产品
- ◆ 电源适配器
- ◆ 说明书手册

READ SAFETY INSTRUCTION BOOKLET BEFORE USING THE PRODUCT

在使用产品前，请仔细阅读安全指引手册。

BACK PANEL

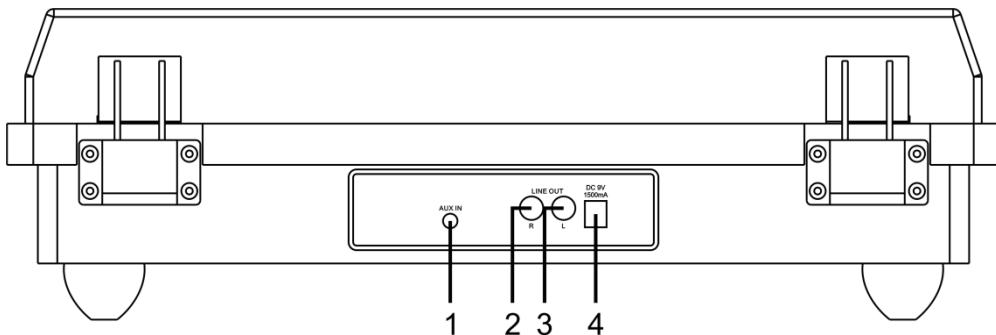


1 AUX IN

3 LINE OUT L

2 LINE OUT R

4 DC 9V/1500 mA

FRONT LEFT PANEL

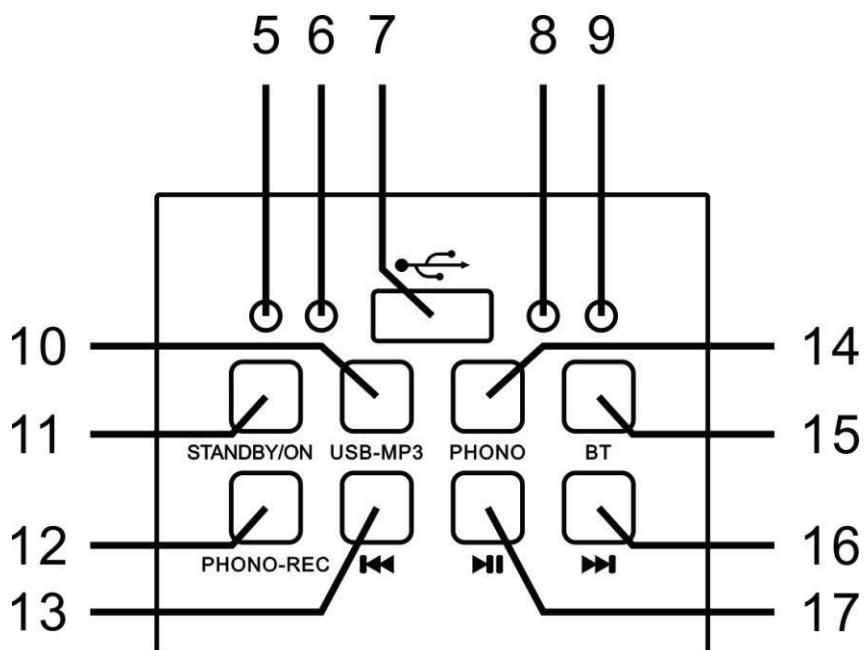

5 STANDBY/ON indicator

7 USB socket

9 BT indicator

11 STANDBY/ON button

13 button

15 BT button

17 button

6 USB PLAYER indicator

8 PHONO PLAYER/REC indicator


10 USB-MP3 PLAYER button

12 button

14 PHONO PLAYER button

16 button

TURNTABLE PANEL

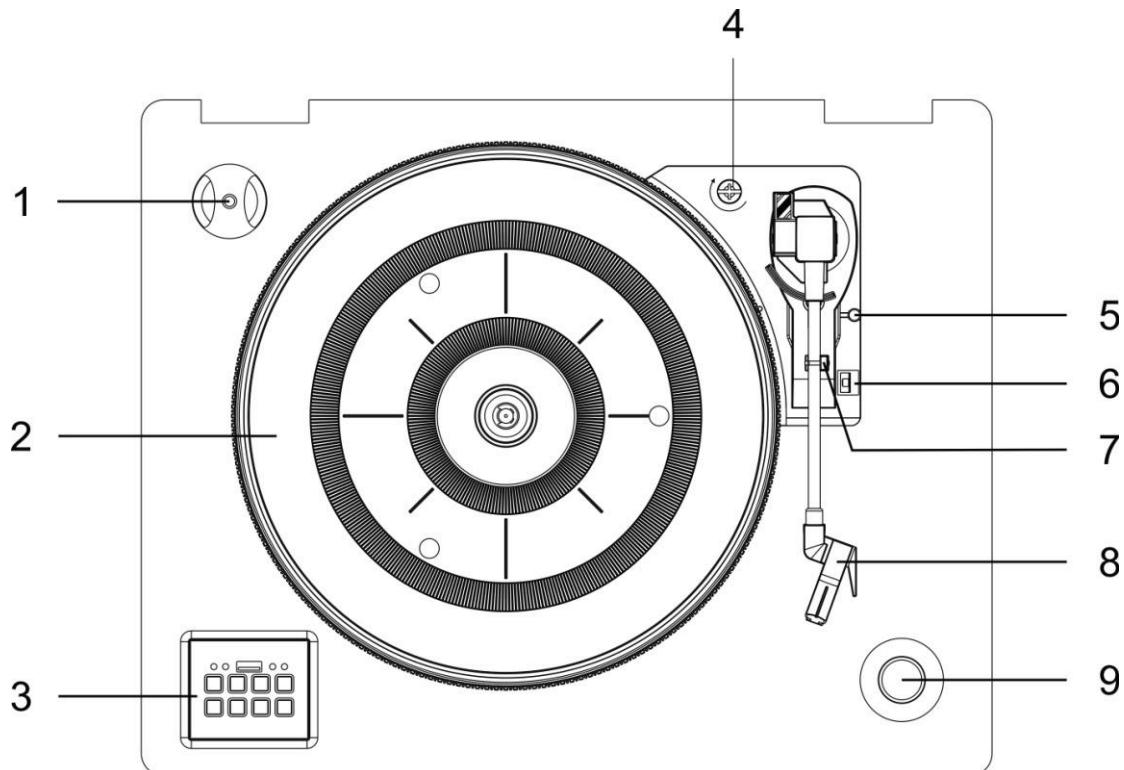

1 45 RPM ADAPTER
3 FUNCTION BUTTON PANEL
5 LIFT LEVER
7 TONE ARM LOCK
9 VOLUME KNOB

2 TURNTABLE
4 TRANSIT SCREW CROSSING
6 SPEED SELECTOR(33/45/78 RPM)
8 TONE ARM WITH STYLUS

使用前的准备

Unpacking and set up

开箱和组装

- ◆ Carefully remove the unit from the display carton and remove all packing material from the unit.

请小心从卡通箱内取出主机，移开所有的包装材料。

- ◆ Unwind the AC adapter jack and extend it to its full length.

解开并伸展电源适配器。

- ◆ Place the unit on a stable, level surface, convenient to an AC outlet out of a strong magnetic field.

将主机放置在平稳的水平面，便于连接电源插座，并远离强磁性区域。

- ◆ Connect the plug to your AC outlet.

将插头连接在电源插座上。

- ◆ Remove the opaque white plastic stylus cover from the phonograph stylus by sliding it in the direction of the arrow.

移开唱针上的白色不透明塑胶盖

- ◆ During this operation pay attention to the stylus, because the stylus damage is not covered by guarantee.

请注意保护唱针，因为唱针的损坏不在保修范围内。

- ◆ Remove the twist-tie that was used to secure the tone arm during the shipment.

解开固定在唱臂的扎线。

- ◆ Release the tone arm lock level.

移开唱臂的扣锁。

POWERING ON THE UNIT

开机

- ◆ Connect the AC Adapter to the AC POWER Socket on the back of the unit.
将电源适配器连接在主机后背的插孔上。
- ◆ Press STANDBY/ON button, the red LED indication is lighting, turn the system on.
按 STANDBY/ON 按钮，红色指引灯会亮，主机已开启。
- ◆ When you have finished using the system, press STANDBY/ON button again, turn off the unit with voice message: POWER OFF.
当无需使用主机时，再次按 STANDBY/ON 按键来关机，伴随着语音提示：POWER OFF。

Note

- ◆ This unit has ErP2 function: When select a certain function, but without further instruction or signal to the unit during 8 minutes, the unit will automatically turn off.

注意：

本机有 ErP2 功能：当选择某个功能，但没有进一步的操作或者信号，本机会在 8 分钟之后自动进入关机状态。

AUX IN OPERATION

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players and older, non-dock-able i pods, so you can listen to your external source through the speakers of this system.
本产品提供辅助的音频信号输入，通过连接外接设备，如 MP3 播放器，CD，或者旧款的 I pods，播放音乐。

- ◆ Use an audio cable(not included) with one 3.5 mm stereo connection on each end of the cable.
使用 3.5mm 音频线（不包）来连接。
- ◆ Plug one end into the AUX-IN jack on the main unit and the other end to the line-out jack of audio device.
将音频线的一头接入 AUX IN 插孔，另外一头接入外部设备。
- ◆ Power On both devices.

开启双方。

◆ The volume level can be controlled through the main unit. Operate all the functions on the auxiliary device as usual.

可通过主机上的声量旋转钮来控制声量。如平常操作辅助设备的其他功能。

◆ Please note that AUX IN function is the first priority function. Even the indication light of USB-MP3/ PHONO/ BT is on, these functions don't work while AUX-IN function is using. Please unplug the AUX-IN cable before using USB-MP3/ PHONO/ BT function.

請注意 AUX-IN 功能為優先功能。當 AUX-IN 功能使用時，雖然 USB-MP3/ PHONO/ BT 的提示燈是亮著，但這些功能是不啓動的。如要使用 USB-MP3/ PHONO/ BT 功能，請先把 AUX-IN 線拔掉。

NOTE

◆ If the Line Out jack of your external device is connected, then you only need to adjust the volume control of this system.

若在 Line Out 插头上连接外部设备，就只需调节音量即可。

◆ Make sure tone arm is securely locked to the tone arm rest to avoid any damage.

请确保唱臂是锁好的，避免有意外损坏。

◆ Press STANDBY/ON button to turn off the unit when you are done. Don't forget to turn off the power on your external device as well.

如不需使用，按 STANDBY/ON 按钮关机。请同时也将外接设备关机。

PLAYING RECORDS

唱盘播放

This system includes a full-size, 3-speed, belt-drive turntable that plays 33,45 and 78 RPM records.

本产品包括标准唱盘，3-转速唱盘，皮带转盘，能播放 33,45,78 转速的黑胶片。

◆ To turn the system on, press STANDBY/ON button and set the volume to a low level.

按一下 STANDBY/ON 按键开机，将声量设置在低音量。

◆ Press PHONO button to turn phono mode. Please be sure that you have removed the stylus cover from the stylus and have released the Tone arm lock. 按下 PHONO 按键打开唱片模式。请取出唱针盖，打开唱臂锁扣。

◆ Set the turntable speed switch to the appropriate speed:33,45 or 78 RPM. Set the record onto the turntable. If you are playing 45 RPM singles, place the 45 RPM adapter on the center spindle.

将唱盘转速调到合适速度：33,45 或者 78 的转速，将唱片放在唱盘上。

若需要播放 45 转速的唱片，请将 45 转速的按钮套在唱盘的中心轴。

◆ When you choose play a certain song, move the tone arm to the record. Pull the LIFT LEVER gently forward to yourself, the tone arm gently lower onto the record. The song will start playing.

当需要播放某首歌曲时，将唱臂移动到唱片这首歌的上方，向前拉动升降操纵杆，唱臂会缓慢落到唱片的指定位置，歌曲播放。

◆ When finish playing the song, put the LIFT LEVER gently backward to yourself, the tone arm gently lifter onto the record. The song will stop playing.

当完成音乐播放，向后拨动生姜操纵杆，唱臂会缓慢升起，歌曲停止播放。

◆ Adjust the VOLUME control to set the volume as desired.

调节声量钮来设置所需的音量。

◆ Press STANDBY/ON button to turn off the system when you are done.

按 STANDBY/ON 按键关机。

◆ During record playing, please open the dust cover.

在播放唱片时，请打开防尘盖。

PHONOGRAPH RECORDING OPERATION

录音功能

- ◆ Place a phono record on the turntable.
将唱片放在唱盘上。
- ◆ Plug U DISK into USB socket. Then press PHONO-REC button, the red LED indication light is flash, it starts recording the music from the phono record.
插入 U 盘。按下 PHONO-REC 按键，红色指引灯会闪现。U 盘开始记录唱片上的音乐。
- ◆ Press PHONO-REC button again when you finish recording.
当完成录音，再按一下 PHONO-REC 按键。
- ◆ Press USB-MP3 button with red light is on, you can hear the recording track on the U DISK.
按 USB-MP3 按键，红色指引灯亮，可在 U 盘上听到录下来的音乐。

NOTE

注意

- ◆ PHONO-REC is only for phonograph recording.
USB-REC 功能只用于录唱片的内容。
- ◆ PHONO-REC is for recording the music from the phono record through U disk device.
PHONO-REC 是通过 U 盘作为记录唱片内容的载体。

USB Operation

USB 播放

- ◆ Press USB-MP3 button to turn on USB mode with red LED indication on.
按一下 USB-MP3 按键启动 USB 模式，红色指引灯会亮。
- ◆ Insert the USB device into the USB input on the system, the player will start playing the tracks on the USB device.
插上 USB 开始播放歌曲。
- ◆ Press the **◀◀** or **▶▶** buttons to choose your desired track.
通过 **◀◀**或者 **▶▶**按键来选择所需的歌曲。
- ◆ Press the **▶⏸** button to pause or play the track.
通过 **▶⏸**按键暂停或者播放歌曲。
- ◆ Press the STANDBY/ON button to turn off the unit when your are done.
按 STANDBY/ON 按键来关机。

Note

- ◆ The USB-MP3 playing mode has memory function. When reinserting the same USB device, it will resume the track playing from the last time.
本机的 USB-MP3 播放有记忆功能。当重新插入同一个 USB 时，会继续连着上次停的地方接着播放。
- ◆ The unit is only playing the MP3 format tracks.
本机只播放 MP3 格式的歌曲。

REMOVING THE USB DRIVE

移开 USB 播放器

- ◆ Please be sure the stop playbacks and turn the unit off before removing the USB drive to avoid damage to the USB and the system.
在移开 USB 播放器前，停止播放和关机，避免 USB 和产品的损坏。

BLUETOOTH OPERATION

◆ Press BT button on the front left panel to activate the BLUETOOTH function, and the light will be **blue**.

按 BT 按键来开启蓝牙功能，蓝色指引灯会亮。

◆ Set up the Bluetooth playback device so the it searches for other Bluetooth devices.

开启你的蓝牙播放器，搜寻本产品的蓝牙匹配名称。

◆ Select the entry **1byone BS003** from the list of found devices on your Bluetooth playback device. If the pairing is successful, you will hear a signal with Ding-dong sound.

从一系列的蓝牙匹配名称选择 1byone BS003。如连接成功，将会有叮咚的提示音。

◆ Enjoy your music from your playback device.

请享受蓝牙播放器内的音乐。

Note

◆ The next time you turn on the device it will automatically connect to the last Bluetooth playback device connected. If your Bluetooth playback does not automatically reconnect to the device, you will have to re-establish the connection to your Bluetooth device manually.

通常，对已经成功连接过蓝牙播放器，下次使用时会自动连接。若不成功，请手动连接。

◆ If you use a smart-phone as your Bluetooth playback device, the audio file will muted when there is an incoming call. Acceptance/termination of the call is carried out via the smart phone. After finishing the call, the playback will be automatically continued.

若使用智能手机作为蓝牙播放器，当有来电时，音频会自动静音。可接听或者拒听来电。当结束通话，播放会自动继续。

LINEOUT OPERATION

◆ This system includes a set of LINEOUT jack which allow you to play from the BT,USB-MP3 and PHONOGRAPH of this system to an external playback device.

本产品有一套 LINEOUT 接口，能通过外接播放器播放本产品中蓝牙，USB-MP3 和唱片的歌曲内容。

- ◆ Insert the audio cable (not included) into the matching “LINE OUT” socket of the unit.

在插孔接入 lineout 音频线（不包）。

- ◆ Operate the unit as usual.

正常操作本产品。

- ◆ In order to achieve best effect in sound, advise setting the unit volume into minimum level.

为了使声音效果更佳，建议将本机的音量输出调到最低。

- ◆ Through the speakers of external playback devices, we can hear the sound exported from the unit.

我们能从外接播放器听到本产品输出的声音。

REPLACING THE STYLUS

- ◆ Lift the tone arm off the tone arm rest.

移开唱臂支架，升高唱臂。

- ◆ At the front end of the tone arm, place the tip of your fingernail between the red stylus holder and the black cartridge housing as shown, press down on the red stylus holder until it separates from the cartridge housing.


在唱臂的前端，用指甲尖固定在红色唱针座和黑色轴承壳上，如图所示，挤压红色唱针座，直到黑色轴承壳分开。

- ◆ Completely remove the red stylus holder with worn stylus and discard it.

用穿针完全移开红色唱针座。

- ◆ Place the new red stylus holder with stylus under the cartridge housing. First, press upward on the back side of the stylus holder, and then press up on the front edge of the stylus holder until it snaps into place on the cartridge housing.

用有唱针的新座放置在轴承下。首先，向上按唱针座的背面，然后用力升高唱针座的前边，直到它能扣到轴承壳。

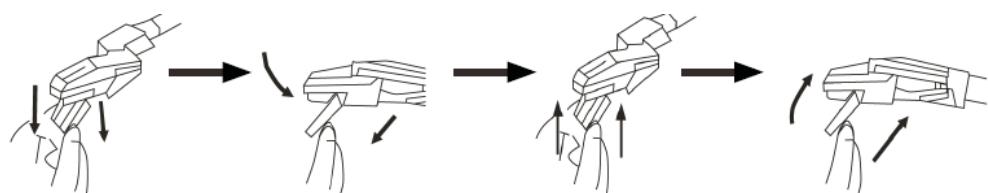

TRANSPORTING THE SYSTEM

IMPORTANT!

To protect the turntable from the damage during transportation, a silver transit screw is located the upper right the turntable platform.


在运输途中，为了保护好唱盘免遭损坏，会使用一个银色的十字螺丝，放置在唱盘的右上角。

◆ Before playing, please use a screwdriver to turn the transit screw in clockwise direction(screw going down) completely to unlock the turntable.

在播放前，请用螺丝起子用顺时针的方向转动，完全解开唱盘。

◆ To lock the turntable again for transportation, please turn screw in counter-clockwise direction.

若需要运输，请用螺丝沿逆时针转动，再次锁上唱盘。

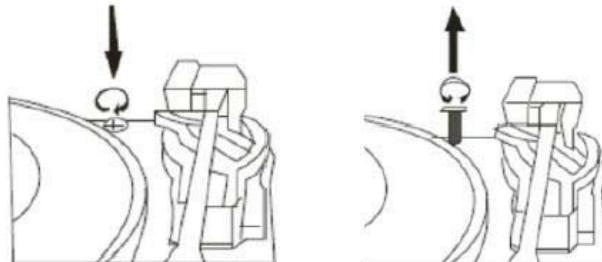

CARE OF THE WOOD PANEL AND DUST COVER

木质平面和防尘盖的保养

◆ Care of the unit is the same as any piece of furniture.

小心保护本产品。

◆ When the dust cover is dusty, you may wipe it using soft, non-abrasive dust cloth.

当防尘盖有灰尘时，可用柔软无磨料的布料来擦拭。

◆ If the wood panel becomes smudged with fingerprints, you may use any good quality commercial dusting and polishing a spray cleaner.

如果木质平面沾满手指印时，可用质量好的喷雾清洁剂来除尘和抛光。

- ◆ We recommend spraying the cleaner on the cloth, not directly on the wooden panel.

我们建议先将清洁剂喷在布料上，而不是直接喷在木质平面，


CARE AND MAINTENANCE

保养和维修

TO REPLACE THE CARTRIDGE FROM THE TONE ARM PLEASE FOLLOW THE PROCEDURE BELOW.

更换唱臂的轴承，请按照一下流程进行。

- ◆ Gently lift off the tone arm from the tone arm rest.
轻轻地从唱臂支架升高唱臂。
- ◆ By using your left hand to hold the tone arm and using your right hand to hold the rear portion of the cartridge. Then push the cartridge backwards and downwards according to the direction as shown to the left to separate the cartridge from the tone arm.
用左手固定唱臂，右手固定轴承后面。然后向下和向下来推动轴承，根据右图显示的方向，在左侧将轴承从唱片分离开来。
- ◆ Using either a tweezer or your fingers, carefully unplug the terminals to the new cartridge.
使用镊子或者手指，去掉新轴承壳的顶端。
- ◆ Carefully connect the terminals to the new cartridge(not included).
小心连接新轴承的终端。（不包）
- ◆ To re-install the new cartridge to the tone arm. First please lock the

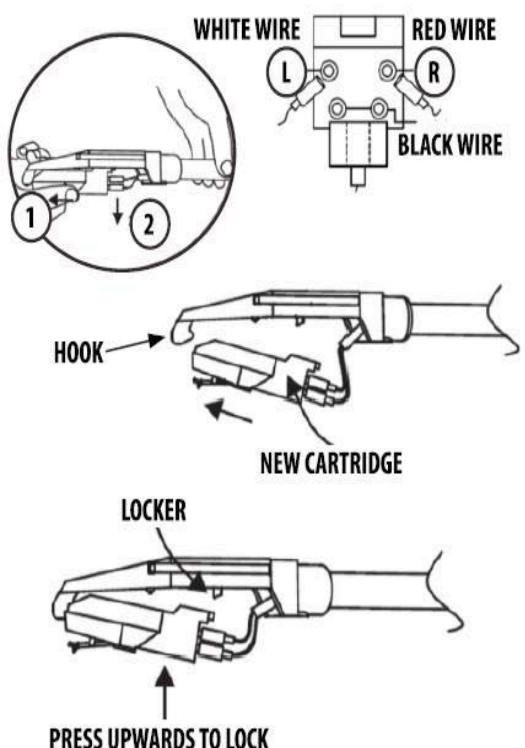

<p>front end of the new cartridge on the hook of the tone arm.</p> <p>重新按照唱臂的新轴承。首先请扣上被唱臂套住的新轴承的前端。</p> <p>◆ Press the rear side of the new cartridge upwards to lock it on the tone arm.</p> <p>向上按一下新轴承的后侧，将它锁在唱臂上。</p>	
---	--

CAUTION: Please don't damage the stylus when installing the new cartridge.

注意：在安装新轴承时，请不要损坏唱针。

SPECIFICATIONS

Operating voltage	DC9V/1500 mA
Bluetooth specification	Version 3.0
Supported storage	USB
Output power	2 x 2W RMS
Dimensions(L*W*H)	434 * 360 * 135.5 mm
Unit Weight	4.38 kg

Specifications and functions are subject to change without notice. It is connected with continual improvement of the device.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.