

When folded, please make sure that this title page is visible and not folded inside.

FRONT PAGE

OPERATIONS

**POWER ON:** Remove the earbuds from the charging case, or hold the touch control area on either earphone for 3 seconds.

**POWER OFF:** Place the earbuds back in the charging case, or hold the touch control area on either earphone for 5 seconds.

**PLAY/PAUSE MUSIC:** Press the touch control area on either earphone 1 time.

**NEXT SONG:** Double-tap (press 2 times quickly) the touch control area on the RIGHT earphone.

**PREVIOUS SONG:** Double-tap (press 2 times quickly) the touch control area on the LEFT earphone.

**VOLUME UP:** Triple-tap (press 3 times quickly) the touch control area on the RIGHT earphone.

**VOLUME DOWN:** Triple-tap (press 3 times quickly) the touch control area on the LEFT earphone.

**ANSWER/END CALL:** Press the touch control area on either earphone 1 time.

**REJECT CALL:** Press and hold the touch control area on either earphone for 2 seconds.

**ACTIVATE VOICE ASSISTANT:** Press and hold the touch control area on either earphone for 3 seconds.

**LOW BATTERY:** The earbuds will emit a warning sound when the battery is low, indicating that you should recharge them.

**TIPS**

- Performance can be affected by the environment or when the earbuds become discharged.
- Interruption can be caused by obstacles between the earbuds and the Bluetooth device, by wi-fi or other high frequency signals, or if the earbuds are brought out of range of the Bluetooth device (approx. 33 ft).
- To maintain healthy battery performance, charge the charging case (and earbuds) periodically, if not in use.

5

FCC STATEMENT


Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help


FCC Radiation Exposure Statement:  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.



Left earbud: FCC ID: 2AHAS-XBE90142LK  
Right earbud: FCC ID: 2AHAS-XBE90142RK

 XTREMECABLES

Made in China for Jem Accessories, Edison, N.J. 08817



6

ONE YEAR LIMITED WARRANTY



Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

\*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: [customerservice@xtremecables.com](mailto:customerservice@xtremecables.com)

**Scan the QR code on the front of this manual to extend your warranty from 1 Year to 2 Year Limited.**


7




TRUE WIRELESS STEREO

BLACK ONYX

Open-Ear Buds & Charging Case



**XBE9-1042-BLK**  
User Manual V1.0 0625  
855.999.8041 | [WWW.XTREMECABLES.COM](http://WWW.XTREMECABLES.COM)



Scan to Extend Your Warranty

8

BACK PAGE

SAFETY AND CARE INSTRUCTIONS

Read all the instructions before using the product and then store them for future reference:

- Noise is measured in decibels (dB). Long-term exposure to noise levels of 85 dB or higher can gradually cause hearing loss. To protect your hearing, monitor your usage: the louder the sound, the shorter the time you should be exposed to it. Conversely, the softer the sound, the longer you can listen safely. For more information on safe listening levels and other important safety guidelines, please visit the Consumer Electronics Association website at [www.ce.org](http://www.ce.org). For detailed information on preventing noise-induced hearing loss (NIHL) and a comprehensive list of harmful noise levels, visit the Foundation for the Study of the Hearing Impairment at [www.drfor.org](http://www.drfor.org).
- Turn down the volume on the earbuds before turning on audio playback.
- This product is not a toy. Do not allow children or others who require supervision to use the product unsupervised.

This product contains a non-replaceable rechargeable lithium-polymer battery. When discarding, follow your local/state guidelines.

- Do not use abrasive cleaning solvents to clean the unit.
- Disconnect the USB cable once the product is fully charged.
- Do not expose to heat sources or leave in a location that is likely to get excessively hot.
- Do not let the product get wet.
- Do not disassemble.
- Performance can be affected by the environment or when the product becomes discharged.
- Interruption can be caused by obstacles between the product and the Bluetooth device, by Wi-Fi or other high frequency signals, or if the product is brought out of range of the Bluetooth device.
- Charge fully before storing for a long period. Note: Lithium-polymer batteries will self-discharge over time.

To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long a lithium-polymer battery will no longer have the ability to be recharged.

1

INTRODUCTION

Thank you for choosing the Xtreme ONYX open-ear buds! Designed for active lifestyles, these earbuds feature an innovative, open-ear design that lets you hear your music while staying aware of your surroundings. With high-quality sound, ergonomic comfort, and intuitive controls, you can enjoy a seamless listening experience wherever you are.

**FEATURES**

- Listen to audio + hear your surroundings
- Syncs wirelessly to your device within 33 feet
- Up to 3.5 hours of talk time & audio playback
- Use your earbuds together or singularly with True Wireless Stereo
- Easy touch controls for playing music, answering calls, and controlling volume
- Portable charging case refuels earbuds up to 2 times

**SPECIFICATIONS**

- Power Input: 5V / 200mAh
- Battery Capacity:
  - Earbuds: 30mAh each
  - Charging Case: 200mAh
  - Charging Case Battery Size: 30 mAh


- Playtime: 3-3.5 hours
- Standby Time (Power Off): 200 hours
- Max Earbud Output Wattage: 15 mW
- Sensitivity: 95 dB
- Earbud Impedance: 32 Ω
- Driver Size: Ø13mm
- Frequency Response: 20Hz – 20KHz
- Signal to Noise Ratio: 90 dB
- Charging Time: 2 Hours
- Transmission Range: 32.8ft
- Charging Connector: USB-C
- Dimensions: Earbuds: 0.98 x 0.59 x 0.79 inches
- Charging Case: 2.32 x 1.46 x 1.10 inches

**WHAT'S INSIDE**

- Open-Ear Buds (Left & Right)
- Portable Charging Case
- USB-C Charging Cable
- User Manual

2

PRODUCT DESCRIPTION



Before first use, carefully remove the components from the packaging and charge your earbuds for at least 2 hours.

 
**HOW TO CHARGE**

**Charging Case:** To charge your earbuds, you must first make sure the case is fully charged. Insert the USB-C end of the included charging cable into the USB-C port on the charging case. Plug the other end into an appropriate power source. The LED indicator light will blink to indicate it is charging.


**Earbuds:** Your earbuds will automatically charge when placed correctly in the included charging case. The LED indicator light on the earbuds will glow red to indicate they are charging.

3


HOW TO WEAR YOUR EARBUDS

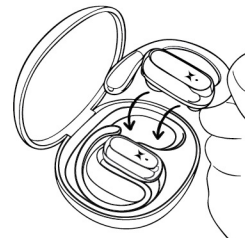

 **TIP:** When placing your earbuds in the charging case, they must be positioned correctly as shown:

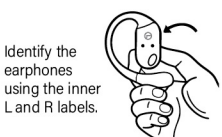

 Identify the earphones using the inner L and R labels.

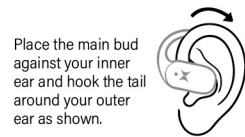

Place the main bud against your inner ear and hook the tail around your outer ear as shown.

Once the tail is securely hooked around your outer ear, you can gently reposition the bud as needed for comfort and improved sound quality.

**PAIR TO YOUR BLUETOOTH® DEVICE**

1. Remove the earbuds from the charging case to power them on.
2. Open the Bluetooth settings on your device and select "Xtreme XBE9-0142" from the list of available new devices.
3. The earbuds will emit a confirmation tone when pairing is complete.

If you are unable to connect your earbuds to your Bluetooth device, try the following:

- Ensure the earbuds and your device are turned on and fully charged.
- Make sure your device's Bluetooth setting is switched on.
- Restart your device.

4