


## FRONT PAGE

**When folded, please make sure that this title page is visible and not folded inside.**

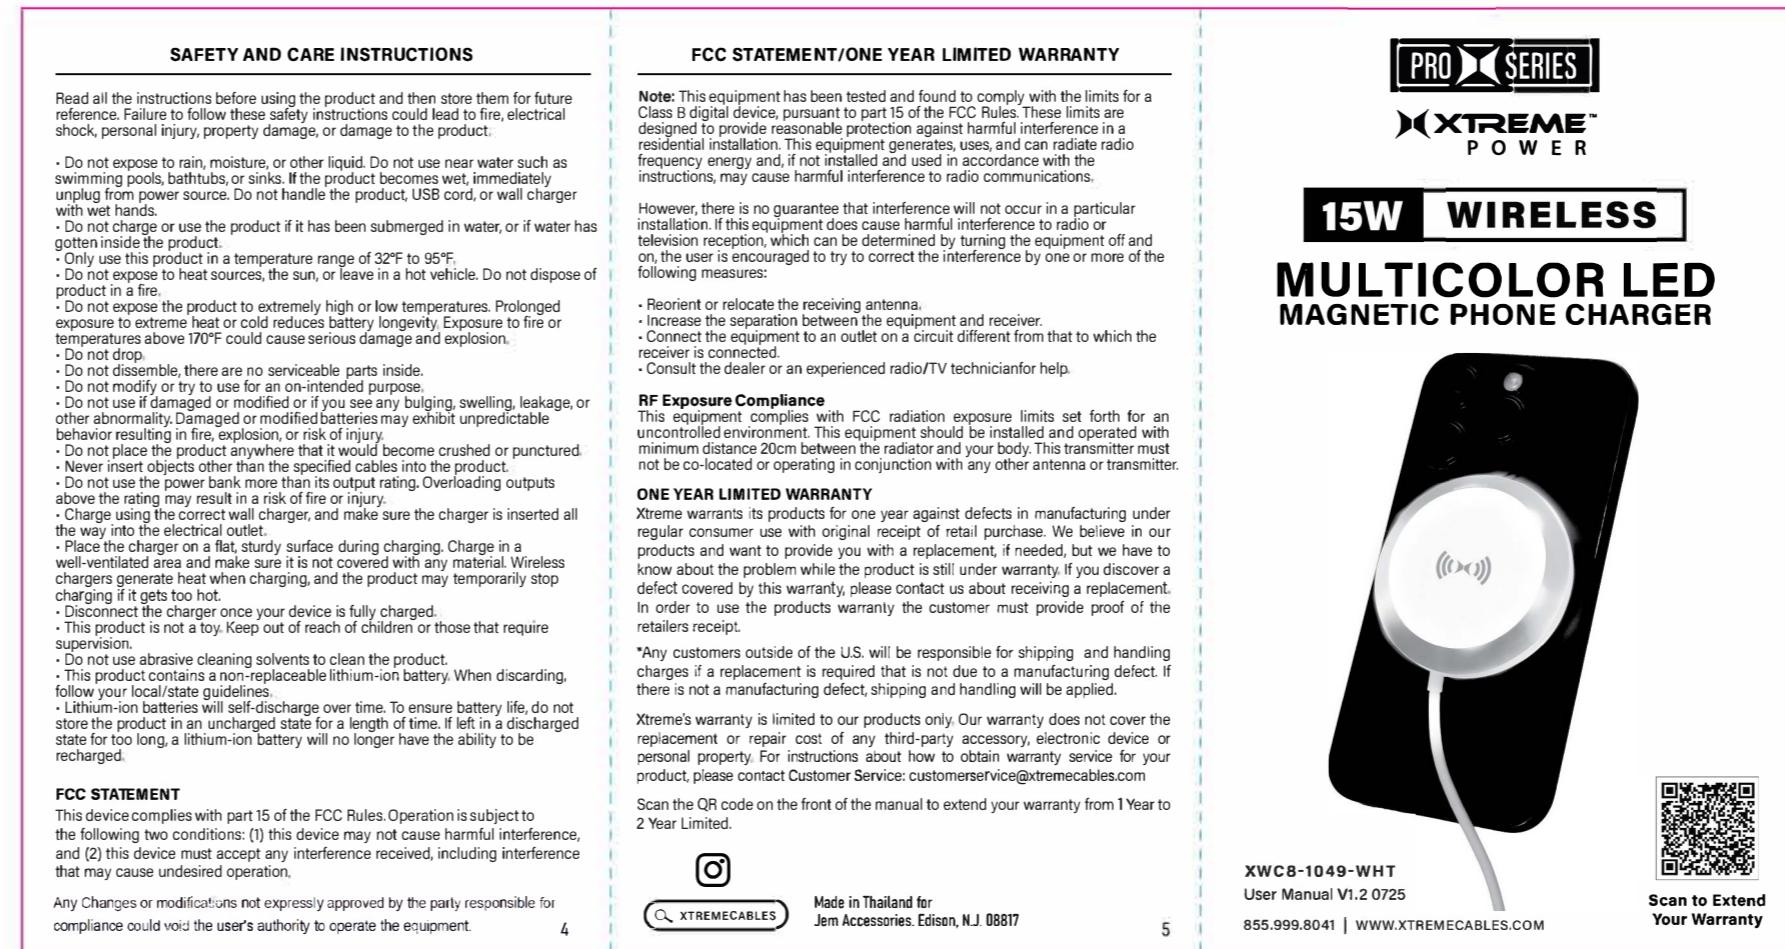

**SAFETY AND CARE INSTRUCTIONS**

Read all the instructions before using the product and then store them for future reference. Failure to follow these safety instructions could lead to fire, electrical shock, personal injury, property damage, or damage to the product.

- Do not expose to rain, moisture, or other liquid. Do not use near water such as swimming pools, bathtubs, or sinks. If the product becomes wet, immediately unplug from power source. Do not handle the product, USB cord, or wall charger with wet hands.
- Do not charge or use the product if it has been submerged in water, or if water has gotten inside the product.
- Only use this product in a temperature range of 32°F to 95°F.
- Do not expose the product to extreme heat or cold sources, the sun, or leave in a hot vehicle. Do not dispose of product in fire.
- Do not expose the product to extremely high or low temperatures. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion.
- Do not drop.
- Do not disassemble, there are no serviceable parts inside.
- Do not modify or try to use for an on-intended purpose.
- Do not use if damaged or modified or if you see any bulging, swelling, leakage, or other abnormality. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Do not place the product anywhere that it would become crushed or punctured. Never use sharp objects to clean the product.
- Do not use the power bank more than its output rating. Overloading outputs above the rating may result in a risk of fire or injury.
- Charge using the correct wall charger, and make sure the charger is inserted all the way into the electrical outlet.
- Place the charger on a flat, sturdy surface during charging. Charge in a well-ventilated area and make sure it is not covered with any material. Wireless chargers generate heat when charging, and the product may temporarily stop charging if it gets too hot.
- Disconnect the charger once your device is fully charged.
- This product is not a toy. Keep out of reach of children or those that require supervision.
- Do not use abrasive cleaning solvents to clean the product.
- The product contains a non-replaceable lithium-ion battery. When discarding, follow your local/state guidelines.
- Lithium-ion batteries will self-discharge over time. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long, a lithium-ion battery will no longer have the ability to be recharged.

**FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4

**FCC STATEMENT/ONE YEAR LIMITED WARRANTY**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF Exposure Compliance**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**ONE YEAR LIMITED WARRANTY**

Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailer's receipt.

\*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com

Scan the QR code on the front of the manual to extend your warranty from 1 Year to 2 Year Limited.

5



**XWC8-1049-WHT**  
User Manual V1.2 0725  
855.999.8041 | [WWW.XTREMECABLES.COM](http://WWW.XTREMECABLES.COM)

**Scan to Extend Your Warranty**

## BACK PAGE

**INTRODUCTION**

Thank you for choosing the 15W Wireless Multicolor LED Magnetic Phone Charger! Easily recharge your compatible device by snapping it into place, and choose the charging indicator light that suits your mood with 6 vibrant and dynamic settings.

**FEATURES**

- 15W max output
- 6 multicolor and solid color LED indicator light settings
- Magnetic snap-on
- Easy touch control


**SPECIFICATIONS**

- Input: 5V/3A, 9V/2A
- Output: 15W Max

**WHAT'S INSIDE**

15W Wireless Charger  
User Manual

**GETTING TO KNOW YOUR PRODUCT**

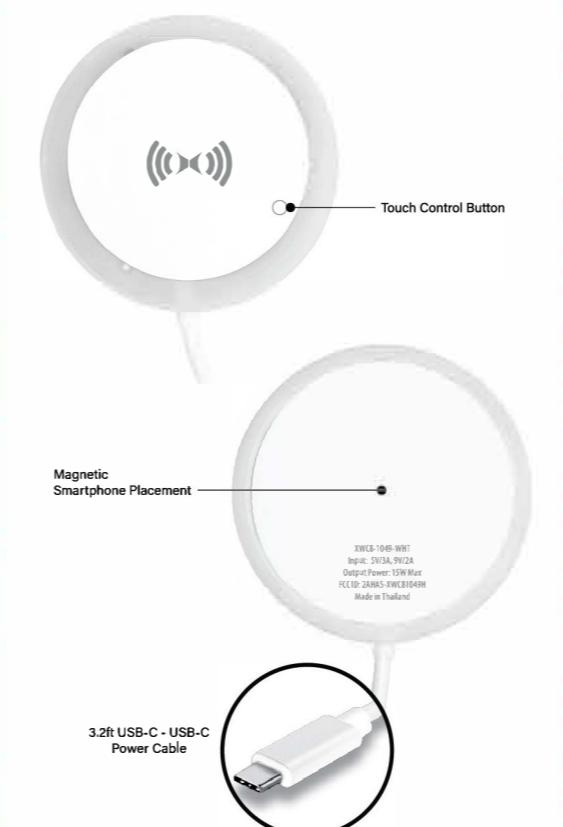

**CHARGING YOUR DEVICE**

**Note:** This product requires power via a USB-C power adapter (not included). For maximum 15W fast charging, an 18W or higher PD 3.0 USB-C power adapter is required. Please check your device's specifications for maximum charging speed capability.

- When plugged in, the product will power on to a dynamic multicolor blink setting.
- Place your compatible smartphone or device onto the magnetic charging pad. The charging indicator light will remain on to indicate your device is being charged.
- When your device is fully charged, the light will turn off.
- To change your charging indicator light, press the touch control button to cycle through the 6 settings.

**TIPS**

- For best performance, remove any bulky or thick cases from the device you are charging.
- Do not place metal debris or magnetic cards on the charger, as it may cause overheating.
- Slight heating during charging is normal.
- Keep the charger away from fire sources or corrosive environments.
- Avoid obstructing the wireless charging area with metal objects or thick phone cases.
- Do not attempt to disassemble or modify the charger.
- Keep the charger away from water and moisture to prevent damage.

1

2

3