

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. All warranties are covered by the retailer involved in the sale or promotion of this product (co-warrantor) of this manufacturer warranty. Do not contact the Manufacturer for replacement parts and/or for warranty related issues.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repair by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.



SONIC BOOMBOX PARTY SPEAKER

Wireless Stereo Speaker with Subwoofer

BLUETOOTH® INDOOR & OUTDOOR PARTY SPEAKER



Instruction Manual

Please Read All Instructions Carefully and Retain For Future Use

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Sound Level	Source volume too low Battery low	Raise source volume Charge Battery
Sound Distorted	Battery nearly dead	Charge Battery
No Sound	Source turned off Speaker turned off Volume turned down on source Music paused on either source or speaker	Turn on source Turn the speaker on Adjust volume on source Push play on source and/or speaker

CARE and MAINTENANCE

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

The crossed out wheelie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for recycling.

Note: iPhone®, iPod® and iPad® are trademarks of Apple, Inc. registered in the US and other countries.

DESCRIPTION OF CONTROLS

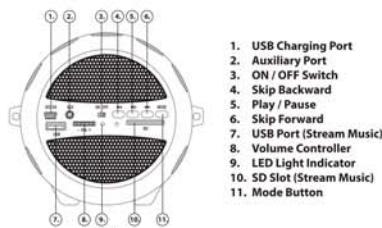


Figure 1

INSTRUCTIONS FOR USE

Charging the Speaker (for best results, fully charge the unit before use.)

1. Connect the included USB cord to the charging port (#1 on figure above) and insert the other end into a port on your computer or similar power source.
2. The Red LED on the back turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes approximately 4 to 5 hours to fully charge.

Note: In order to have optimum battery life, it is recommended to not charge in excess of 6 hours at any one time. Overcharging can adversely impact the battery life.

On/Off Controls of Speaker

1. To Turn "ON" slide the "POWER ON/OFF" Switch (#3 on figure above) to the ON position.
2. To Turn "OFF" slide the "POWER ON/OFF" Switch (#3 on figure above) to the OFF position.

PACKAGE CONTENTS

Bluetooth® Indoor and Outdoor Party Speaker
Shoulder Strap
USB Charging cable
3.5mm auxiliary cord
This instruction manual

FEATURES

1. Bluetooth® speaker with built-in Subwoofer
2. Clean, crisp, booming sound
3. Compatible with Bluetooth® devices
4. Can connect other devices via 3.5mm auxiliary cord
5. Durable, rugged and splash proof, perfect for indoor or outdoor use
6. Built-in USB/SD card slots for listening to music from digitally stored files
7. USB rechargeable built-in battery
8. Detachable shoulder strap allows for easy portability

IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. Do not leave unattended while connected to the power supply.
3. Do not immerse in water or any other liquids.
4. Do not use if unit has been dropped or damaged in any way.
5. Repair to electrical equipment should only be performed by qualified personnel. Improper repair may place user at serious risk.
6. When using unit, always place on even surface, free of vibrations and away from sources of heat.
7. Do not use with wet hands.
8. Do not put objects into the openings.
9. Keep free of lint, dust, hair, etc...
10. Do not use this unit for anything other than its intended use.
11. This is not a toy.
12. Keep unit out of reach of small children.
13. Do not play music at excessive levels especially near children as damage to hearing may occur.

FCC Instructions

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received including interference that may cause undesired operation.

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note: Once the Aux cable is connected to the unit and device, music via Bluetooth® connection will be stopped. Media and volume can be controlled only through the source devices, while playing music in the Auxiliary mode.

Listening to Music using USB/SD Card Slot

1. Turn on the speaker.
2. Insert SD Card or USB Flash Drive into the correct slot (see Figure 1). Music will automatically start to play.
3. Press Skip Forward or Skip Backward to move forward or backward on your playlist.
4. Press Play/Pause to PLAY or PAUSE a track.

Note: While using Bluetooth®, if you insert SD Card or USB Flash Drive, speaker will disconnect the Bluetooth® connection and switch to the USB/SD card function. You can press the MODE button again to play via Bluetooth®.

TIPS:

1. Press the MODE button to switch between different functions of the speaker. Switch between Bluetooth®, SD Card and USB or AUX-In.
2. When the unit is not in use, turn OFF the device to save battery power.
3. Do not overcharge the unit. Do not exceed 6 hours of charging to avoid overcharging the unit.
4. To preserve battery power while in use, play at moderate volume instead of max volume.

Specifications:

Bluetooth® Version:	2.1 + EDR
Subwoofer size:	3"
Speaker Output:	2x2 Watts + 1 x 5 Watts Subwoofer
Unit Size:	10" x 5.5" x 4.5"
Approx Unit Weight:	2.2 lbs
Play Time:	Up to 1.5 hours (max volume) and 4 hours (moderate volume)
Charge Voltage:	DC5V (USB)
Bluetooth® Range:	27 to 33 Feet
Built-In Rechargeable Battery:	3.7V/1000mAH

(Note: Battery life and charging time may vary based on usage and types of devices connected.)