Dimmer Specifications:

P/N: L-WLD-1WAL-xx (Dimmer w/ Cradle)
P/N: L-WLD-1MAG-xx (Dimmer w/o Cradle)
Operating Voltage: 3V CR1620 or CR1625 battery

Working Frequency: 916.5 MHz RF Remote Distance: 15m (50 ft.)

Receiver Specifications:

P/N: L-WLD-1REC Input Voltage: 12VDC Output Voltage: 12VDC Max-Output Load: 5A, 60W Dimming Range: 100% - 1%

Installation Instructions FREEDIM Wireless Wall Dimmer

Single Zone • 12VDC 60W Capacity

READ ALL INSTRUCTIONS BEFORE INSTALLING SYSTEM.

Before beginning installation, be sure power is turned OFF to light system.

FREEDIM Wall Dimmers control all Tresco® dimmable low voltage LED lights. They are wireless and can be positioned wherever you want – within 15m (50 ft.) of the lights to be controlled.

The Wall Dimmer's **mounting cradle** (see Figure 1) allows installation directly to drywall or to a standard wall electrical box, giving the appearance of a hardwired wall switch. (see Figure 2 for installation options)

The Wall Dimmer has a magnet to hold it within the mounting cradle or to place on a refrigerator. To remove Wall Dimmer from mounting cradle use the slight indents on the top and bottom edges of dimmer.

NOTE: The mounting cradle has an index tab to orient the Wall Dimmer in the proper "up" position. (see Figure 1)

Installing Dimmer Receiver:

- Disconnect Mounting Block from 12VDC Tresco® Power Supply (see spec guide for power supply options).
- Connect Dimmer Receiver to Tresco® 12VDC Power Supply by snapping the output wire of the power supply (female AMP® connector) to the input wire of the receiver (male AMP® connector) (Figure 3).

Then connect **Dimmer Receiver** to mounting block by snapping the output wire of the receiver (female AMP® connector) to the input wire of the mounting block (male AMP® connector) (Figure 3).

NOTE: To use multiple Receivers on one power supply, connect the input wire of the Mounting Block to the power supply output and then plug the receivers into the Mounting Block. Connect lights to each receiver directly or connect an additional Mounting Block (P/N: L-TRANS-MNT-BL) to Receiver.

- 3. Plug desired light(s) into the Mounting Block.
- 4. Plug polarized 2-prong end of Tresco 12VDC power supply cord into 120V receptacle. If receptacle is operated by on/off wall switch, turn switch on after plugging power supply in.

Programming Instructions:

- Remove the Wall Dimmer from the Mounting Cradle (Figure 1).
 Remove the clear plastic tab to activate the battery.
- 2. Press once (do not hold down) the Learning Key (Figure 4) on the Dimmer Receiver, then press "up" once on the Wall Dimmer button. The lights should flash on/off, indicating they are paired up and programmed properly.
 - To increase the light(s), press and hold the "up" portion of Dimmer.
 - To dim the light(s), press and hold the "down" portion of Dimmer.
 - To turn on, tap the "up" portion of Dimmer once.
 - To turn off, tap the "down" portion of the Dimmer once.
- 3. Repeat step 2 for any additional Receivers or Dimmers to program.

NOTE: Each Receiver can be controlled by up to 8 different Dimmers.
A single Dimmer can control up to 10 Receivers. (see Figures #5 and #6 on reverse side)

How to Deprogram a Receiver:

- 1. Hold down the Learning Key on the Dimmer Receiver until the lights connected to the receiver flash on/off twice.
- 2. The receiver is now reset and is no longer programmed to any dimmers.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of fire, electric shock, or injury to persons:

- Route and secure cords so they will not be pinched or damaged.
- Use only insulated staples or plastic ties to secure ALL loose cords.
- Replace battery with a CR1620 or CR1625 battery only. Not rechargeable.
- Use Class 2 or LPS 12VDC Power Supply only to power the Receiver
- 12VDC 60W 5AMP max Receiver output
- Use only in dry locations. Not for use where exposed to the weather
- The Receiver is not intended for recessed installation in ceilings or soffits.
- A licensed electrician should be consulted for wiring through ceilings, soffits, or walls.
- All wiring must follow NEC regulations.




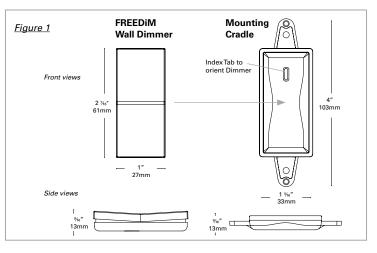


Figure 2

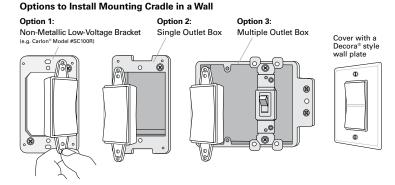

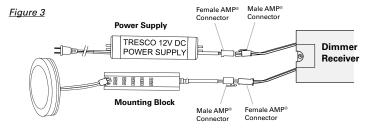

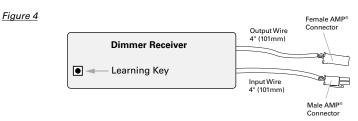

Save these instructions for future reference. For technical assistance, call 1-800-227-1171




Tresco Lighting by Rev-A-Shelf


12400 Earl Jones Way Louisville, KY 40299

Tel: 800-227-1171 Fax: 502-491-2215

Email: cservice@trescolighting.com
Web: www.trescolighting.com

I-WALMAG-0116

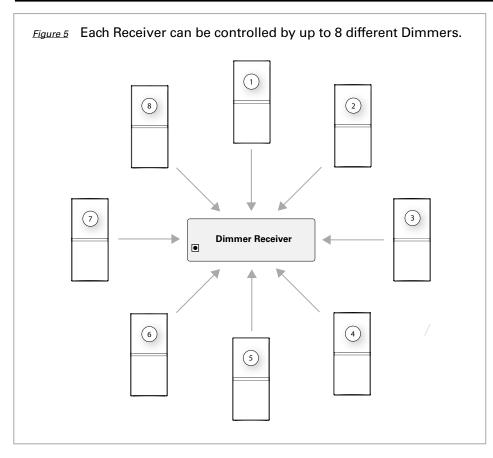

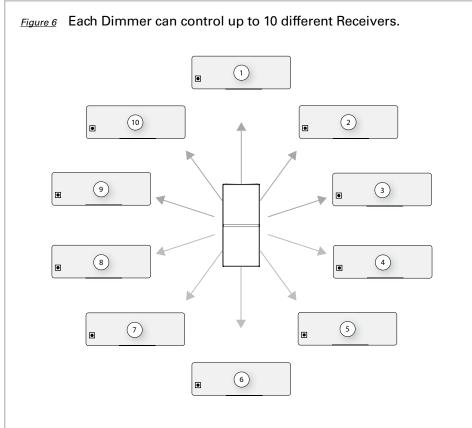

Save these instructions for future reference. For technical assistance, 1-800-227-1171



Tresco Lighting by Rev-A-Shelf 12400 Earl Jones Way Louisville, KY 40299

Tel: 800-227-1171 Fax: 502-491-2215

Email: cservice@trescolighting.com Web: www.trescolighting.com This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.