

Adding controlserver to local network

A. Purpose

 
Adding the controlserver to a local network

B. Materials needed


1. Controlserver
2. LAN-cable

C. Step-by-step tutorial


1. Connect the controlserver to your local network via a LAN-cable
2. Right-click on the LAN-icon in the top right corner




1. In the drop-down menu select *Edit connections*
2. In the next window, select (a) *System p2p1* and click on (b) *Edit*

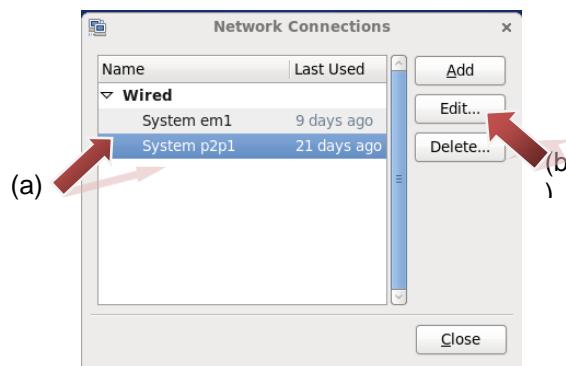

Select the *IPv4 Settings* tab in the following window

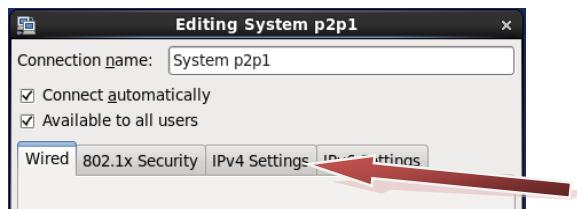

3. Set (a) *method* to (b) *manual* and add a valid IP-address in (c) *the field below*

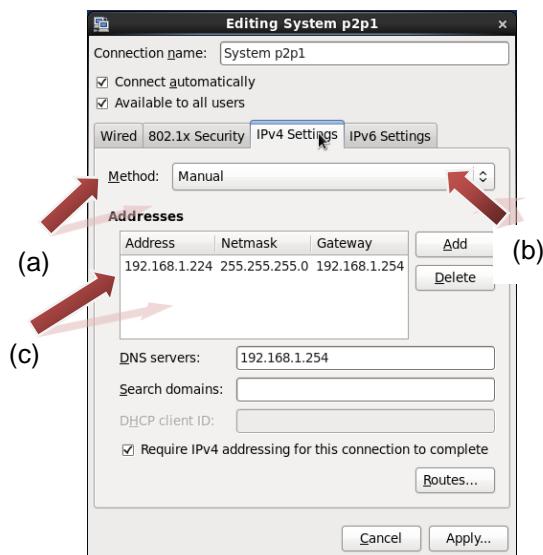

4. Click *Apply* at the bottom and confirm with the root password

5. Finally, disconnect and reconnect System p2p1 via the network icon or reboot the controlserver