thumbs Up!  ARWORK INFORMATION PANEL			
ARTWORK TITLE: Shower Speaker			
ARTWORK TYPE: ☐ PACKAGING ■ MANUAL ☐ STICKER			
MATERIAL: 90gsm			
FINISH: Uncoated			
CUTTER GUIDE SIZE: H 67mm x W 52mm (Per page)			
PRODUCT CODE:			

СМҮК	SPECIFIC PANTONE COLOURS  XXX	FOLDING GUIDE	CUTTER GUIDE
	XXX	Spot Colour	Spot Colour
	XXX	'Folding'	'Cutter guide'
	XXX		

**TYPE:** EAN 13, 80%

**BARCODE:** 

**VERSION DATE:** 

DATE DESIGNER

FONT LISTING:		
	WHERE	WHAT
1.	Product Title	Myriad PRO
2.	General Text	Myriad PRO
3.	Details	Myriad PRO
4.	Warnings	Myriad PRO

NOTES	<b>S</b> :			
Folded	, black and wh	ite print.		

1/06/2018	OLGA SAWICKA	4	
APPROVAL:			check and tick
STAGE	DATE	SIGNATURE	COPY
DESIGNER	//		
COPY	//		
MANAGER	//		
DIRECTOR	//		

PLEASE MAKE SURE ALL FONTS HAVE BEEN **OUTLINED, AND ALL IMAGES EMBEDDED.** 

Instructions	Note: The speaker can be mounted to any smooth flat surface, using the sucker on the base -always ensure the the speaker is firmly attached before use.

Charging the Splash Speaker

1. Plug the USB charging cable (supplied) into the Speaker
and connect to a USB charging port.

2. A red LED indicator light will appear to indicate that the Speaker

EN

Specifications
- Support: 4.1+EDR
- Range: 10 meters
- Transmitting frequency: 2.4G Hz
- Power supply: DCSV
- Battery: 3.7V 200mAh lithium
- Charging time: approx. 1-2 hours
- Play time: up to 2.5 hours
- Unit weight: approx. 0.18kg

Button Functions

ONIOFF: Turning ON: Press for 2 seconds to turn the speaker ON. The speaker will emit a sound and a blue LED light will flash constantly to indicate that the power is ON. Turning OFF: Press again for 2 seconds to turn the speaker OFF. The speaker will emit a sound and the LED light will turn OFF.

W: Short press for the previous song, long press to turn down the volume.

W: Short press for the next song, long press to turn up the volume.

W: Press to play music and again to pause it.

S: Press once to answer a phone call and again to hang up. Press twice to redial the last phone call. Once charging is complete, the red LED indicator light will turn blue.

Note: The speaker can be mounted to any smooth flat surface, using the sucker on the base -always ensure that the speaker is firmly attached before use.

Primark assumes no liability for damage as a result of using this product.

Connecting to Bluetooth
1. Turn the speaker ON.
2. Turn on your device and make sure the Bluetooth function is activated.

3. Search for "BT-8020 TAATN" and select it to pair. (If a password is needed, use "0000"). The speaker will emit a sound to indicate that it has connected

4. You can now play music from your device and listen to it through the speaker. Once you turn your devices Bluetooth off, the speaker will emit a sound to indicate that it has connected.

Note: Once the speaker is paired with a device, it will recognise that device whenever they're within range.


Charging the Splash Speaker
1. Plug the USB charging cable (supplied) into the Speaker and connect to a USB charging port.

A conditional forms the speaker of the speaker and connect to a USB charging port.

—Reorient or relocate the receiving antenna.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.



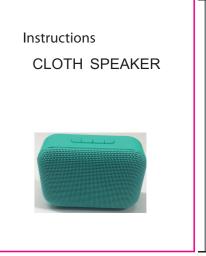

67mm

52mm