



Internal Photographs

EUT - Open View

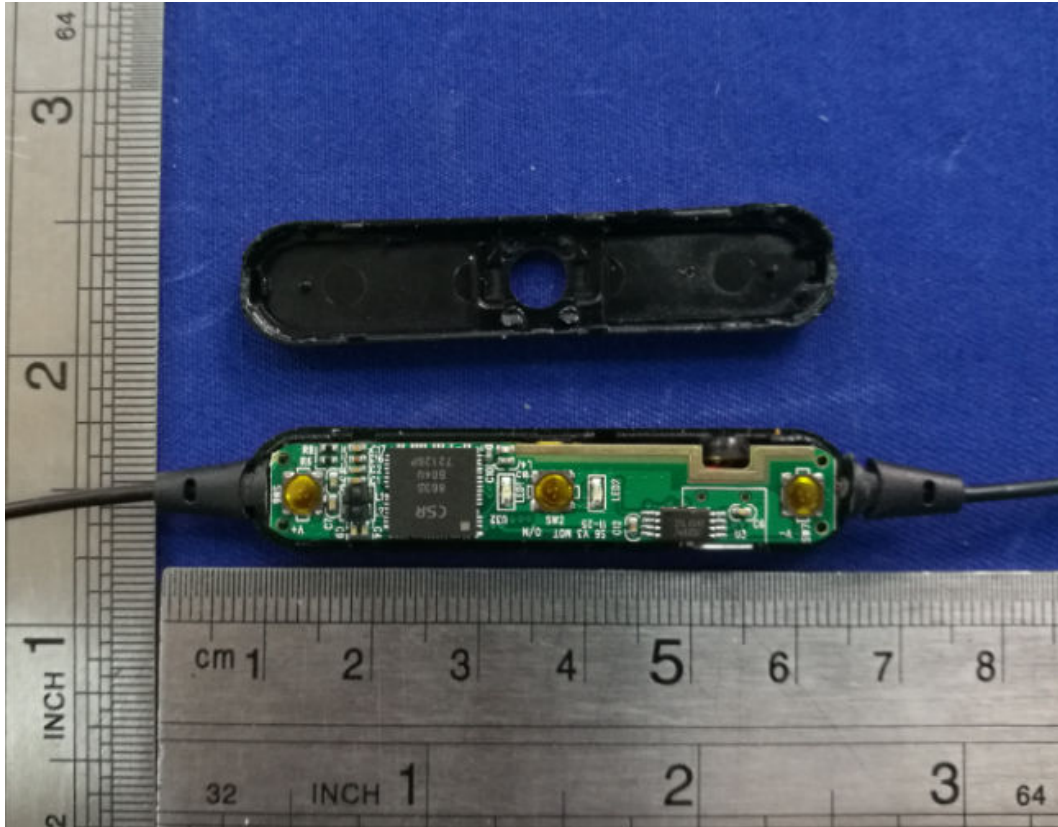


EUT - PCB View

Antenna location

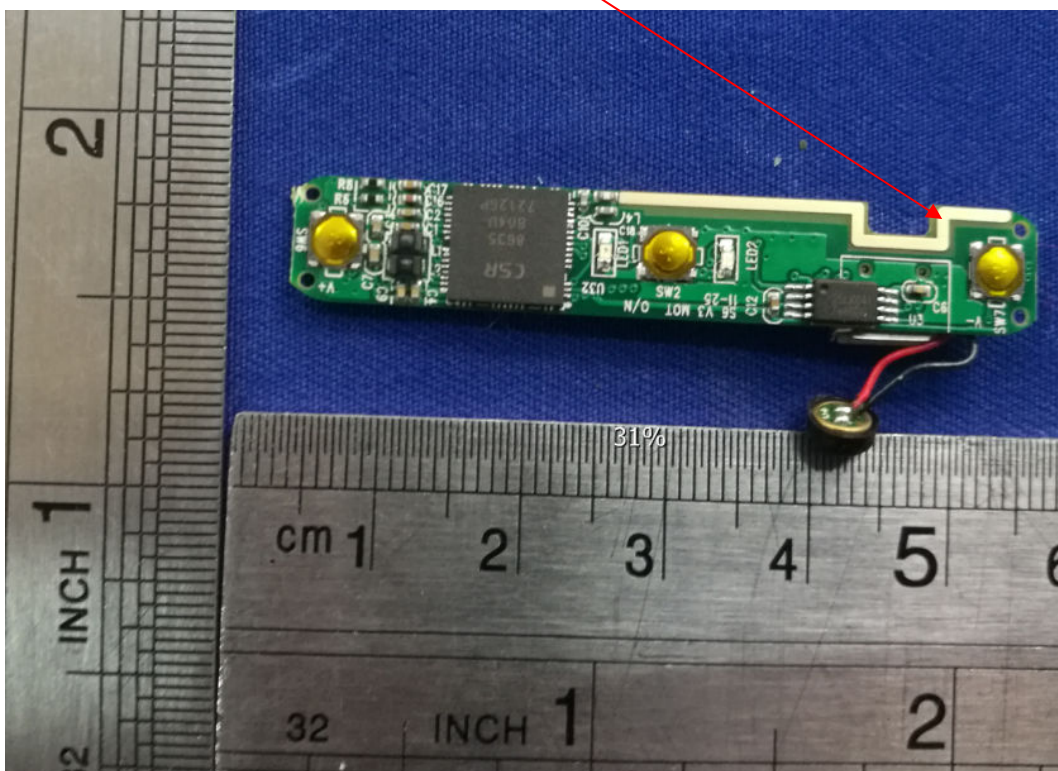

EUT – PCB View

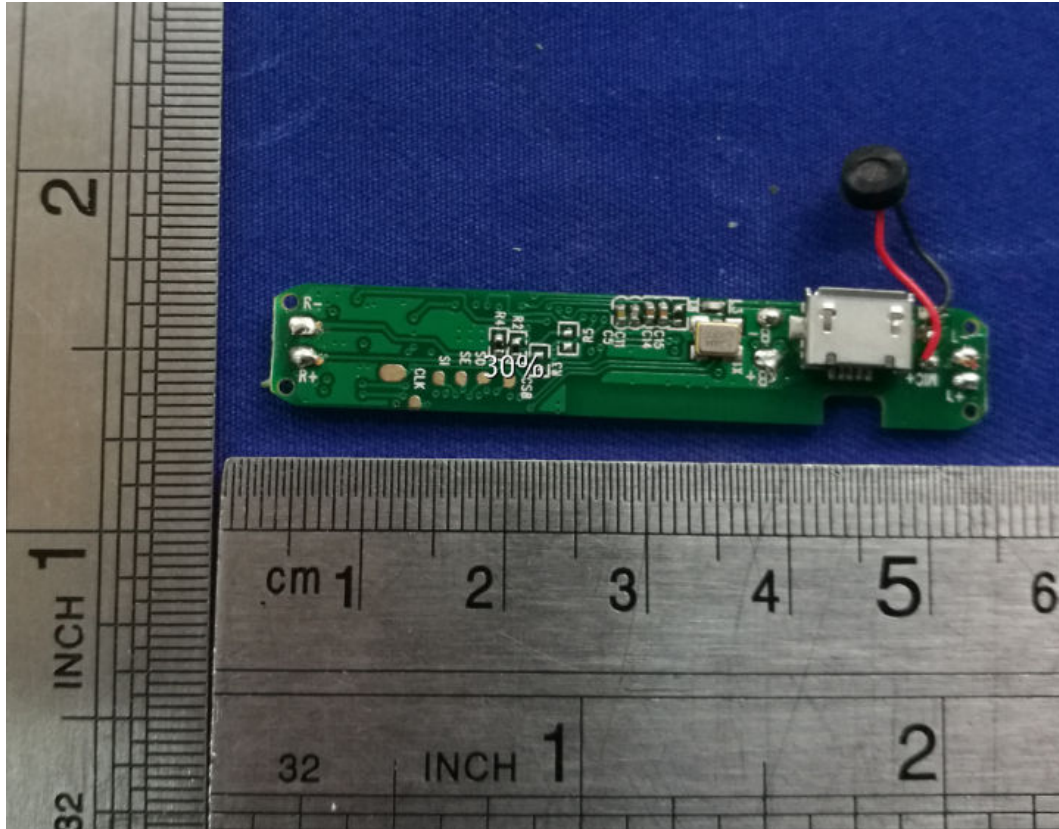

EUT – BT MODULE View



EUT –Battery View

