

CHIRP+ 2

CHIRP 2

deeper

SAFE USAGE AND REGULATIONS
IMPORTANT INFORMATION!

EN

SAFE USAGE AND REGULATIONS

IMPORTANT INFORMATION!

Read and follow all the safety and related information provided in this leaflet. The manufacturer cannot be held responsible for any damage to the property of or injury to the user if any of these safety rules are not followed.

GENERAL USAGE

Deeper is a sonar-based gadget whose purpose is locating fish. It is not a stand-alone device and requires a smartphone, tablet or other compatible device for this purpose. Following safety and usage rules must be followed:

ALWAYS use sufficiently strong fishing line and pole when casting the gadget. ALWAYS ensure the main seal is in good condition and the gadget is closed properly before immersing the gadget into water. DO NOT use the device in any other way than it is intended for as described in the instruction manual. DO NOT attempt to disassemble, modify or carry out any service of the gadget or its accessories, other than the simple maintenance procedures included in the intended use. DO NOT abuse, step on, kick, puncture, drop or throw the gadget; except when it is being dropped or thrown into sufficiently deep water. DO NOT expose the gadget to a mechanical load, vibrations or shock that may exceed those occurring during normal intended use. DO NOT use the gadget if there is any significant physical damage evident, if the main seal is worn or if it does not close properly, resulting in its water-tightness being compromised. DO NOT use the gadget if there is any rattling or water flowing sounds emitting from it when shook. DO NOT submerge the gadget underwater. DO NOT cast the gadget in areas where this may result in injury of other people or damage to property or the gadget itself, especially indoors. DO NOT rely on the depth readings to avoid getting grounded when navigating a boat. DO NOT rely on the Map feature of the application for avoiding collision when navigating the boat or getting directions when driving a car. ALWAYS keep the Deeper product and its parts and accessories, including packaging, out of children's reach. DO NOT let children use or play with the device.

Only properly qualified and trained personnel at Deeper, UAB may perform repair and service procedures. Do not attempt to disassemble, repair or alter the equipment yourself. The high-voltage circuitry in the equipment poses significant electrical hazard.

BATTERY INFORMATION

This gadget contains a lithium ion battery, which can be charged and discharged for up to 300 cycles, depending on the conditions at which the gadget is used. In order to increase the battery life, do not expose it to extreme temperatures. At freezing temperatures, the capacity of the battery is significantly limited. Even when you do not use your Deeper for prolonged periods of time, recharge it every 6 months. Eventually, the battery will wear out and will need replacing, which can be carried out by returning your Deeper for service (please refer to Warranty and Service section of the instruction manual). The battery can be dangerous if handled inappropriately, following safety rules must be followed:

DO NOT attempt to remove or replace the battery. DO NOT expose the gadget to temperatures, outside the range of -20 °C to 40 °C (-4 °F to 104 °F). DO NOT leave the gadget in an interior of a parked car during a hot day. DO NOT leave the gadget under a direct sunlight for prolonged periods when not immersed in water. DO NOT dispose of the battery in a fire. DO NOT use the gadget if there is any non-water leakage or fumes emitting from it. Avoid getting the leakage product on skin or in the eyes. If this were to happen, wash the contact area thoroughly with cold water and consult with your doctor if there is any persistent discomfort or other symptoms.

CHARGING

Do not leave a completely charged battery connected to the charger for prolonged periods of time, as it may reduce the lifetime of the battery. The manufacturer cannot be held responsible in any event when a third party charger is misused.

DO NOT leave the device charging unattended.

DO NOT cover the charger or the device during the charging procedure as overheating may occur.

DO NOT use the charger if there is any significant physical damage evident.

DO NOT use the charger if there is any smoke or suspicious smell emitting from it. If this occurred during charging, immediately but cautiously disconnect it both from the mains and from the device.

ALWAYS inspect the charger for damage before use. ALWAYS ensure the gadget is dry, there is no water on the USB connector or trapped inside before charging it.

Ensure that the charger complies with Clause 2.5 in IEC60950-1/ EN60950-1/UL60950-1 and has been tested and approved according to national or local standards.

WEE

The WEE symbol on product or on its packaging indicates that the product must not be disposed of with other household refuse. It is your responsibility to ensure that the product is properly disposed of, preferably leading to recycling of the product or its parts. For further information on how to dispose the product properly, contact your local waste disposal service, local authorities or the product retailer.

WIFI REGULATION GUIDE

In some situations or environments, the use of Wi-Fi wireless technology might be restricted by the proprietor of the building or responsible representatives of the organization, for example onboard airplanes, in hospitals or in any other environment where the risk of interference with other devices or services is perceived or identified as harmful. If you are uncertain of the policy that applies to the use in a specific organization or environment, you are encouraged to ask for authorization to use Wi-Fi wireless technology prior to switching it on. Consult your physician or the manufacturer of personal medical devices (pacemakers, hearing aids, etc.) regarding any restrictions on the use of Wi-Fi wireless technology.

LEGAL INFORMATION

Deeper is a trademark of Deeper, UAB. This trademark may not be used without the permission of Deeper, UAB. Reproduction in whole or in parts is prohibited without prior consent from Deeper, UAB. Deeper, UAB reserves the right to change any information provided in this document without prior notice.

Apple, iPhone, iPad and iPod are registered trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. "Made for iPhone", and "Made for iPad" mean that an electronic accessory has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operations of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone, or iPad may affect wireless performance.

iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android, Google Play, Google Maps, Google logo and Google+ are registered trademarks of Google Inc., registered in the U.S. and other countries.

Other trademarks and trade names mentioned in this document or in the separate leaflet provided are for identification and instructional use only and may be trademarks or registered trademarks of their respective owners.

INTENDED USE OF DEVICE

The fish finder (sonar) Deeper DP4H11S10, DP4H12S10, DP4H13S10 and DP4H23S10 is a sonar that works in conjunction with smartphones and tablets. The sonar works in the depths from 1 m to 100 m and uses Wi-Fi wireless technology to send the information to the smartphone or tablet.

A fish finder is an instrument used to locate underwater objects by detecting reflected pulses of sound energy. Fish finder displays measurements of reflected sound on a graphical display, allowing an operator to interpret information to locate fish, underwater objects, and the bottom of body of water.

PRODUCT OPERATING MODES:

Inactive mode – the default mode. In this mode Deeper is not discoverable on Wi-Fi. When put in water it changes from Inactive to Stand by mode. If you take the product out of water for 20 seconds, it will change back to Inactive mode.

Stand by mode – Deeper is in the water, but it is not connected to the smartphone or tablet. It can be discovered via Wi-Fi and connected to.

Operating mode – smartphone or tablet is connected to Deeper. The device is in the water and scans the bottom and underwater objects. If the mobile application disconnects from Deeper while it is in the water and it is on Operating mode, it will change to Stand by mode. If you take the device out of the water for more than 5 minutes, it will change to Inactive mode, even if the application is connected.

Charging mode – the product is plugged into a power socket, laptop, or PC through the USB cable.

TECHNICAL SPECIFICATION

Name	Deeper CHIRP+ 2
Model	DP4H11S10, DP4H12S10, DP4H13S10
Material	ABS
Sonar Type	3 beam
Frequency (Beam Cone)	100 kHz, 47°; 240 kHz, 20°; 675 kHz, 7°
Depth Range Max/Min	Max 330 ft / 100m, Min 0.5 ft / 0.15 m
Sonar scan rate	15 scans per second
Operating Temperature	-20°C to 40°C/-4°F to 104°F
Internal Battery	Lithium Ion, 3.8V Rechargeable, 1300mAh (typical)
Power Supply input (for charging battery)	5V DC; 1.5 A Max
Power Adapter (not included in the box, recommended)	Input AC 110V/240V Output USB A, 5V 2A

Connection type	Wireless Wi-Fi connection 802.11 b/g, 2.412GHz 1channel – 802.11 b max TX power +20dBm, sensitivity -89 dBm – 802.11 g max TX power +16dBm, sensitivity -76 dBm
Connection Range	394 ft / 120m. Range depends on the OS and smartphone model.
Color	Desert sand
GNSS	GPS, GLONASS, Galileo, BeiDou, QZSS
Product size	2.55 in / 6.5 cm
Product weight	3.24 oz / 92 g
Country of origin	Made in Lithuania

Name	Deeper CHIRP 2
Model	DP4H23510
Material	ABS
Sonar Type	3 beam
Frequency (Beam Cone)	100 kHz, 47°; 240 kHz, 20°; 675 kHz, 7°
Depth Range Max/Min	Max 330 ft / 100 m, Min 0.5 ft / 0.15 m
Sonar scan rate	15 scans per second
Operating Temperature	-20°C to 40°C/-4°F to 104°F
Internal Battery	Lithium Ion, 3.8V Rechargeable, 1300mAh (typical)
Power Supply input (for charging battery)	5V DC; 1,5 A Max
Power Adapter (not included in the box, recommended)	Input AC 110V/240V Output USB A, 5V 2A
Connection type	Wireless Wi-Fi connection 802.11 b/g, 2.412GHz 1channel – 802.11 b max TX power +20dBm, sensitivity -89 dBm – 802.11 g max TX power +16dBm, sensitivity -76 dBm
Connection Range	394 ft / 120m. Range depends on the OS and smartphone model.
Color	Desert sand
GNSS	Not present
Product size	2.55 in / 6.5 cm
Product weight	3.24 oz / 92 g
Country of origin	Made in Lithuania

WARRANTY INFORMATION

Thank you for purchasing Deeper, UAB product. We hope you will be happy using it. In the unlikely event that your product needs guarantee service, please contact your local dealer or an authorized service/support network member (ASN) or directly Deeper, UAB at support@deeper.eu. To avoid any unnecessary inconvenience on your part, we recommend that you read the documentation carefully before seeking guarantee service. Please find the full warranty document on deeperonar.com

FCC REGULATION STATEMENT - USA

The Deeper device with a following FCC ID: 2AHKO-CRP.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

The wireless module contained in this equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC REGULATION STATEMENT – CANADA

The Deeper device with a following IC ID 21307-CRP complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

DECLARATION OF CONFORMITY

Deeper UAB declares under our sole responsibility that the product:

Name: **Deeper CHIRP+ 2; Deeper CHIRP 2**

Product type: **Echo sounder**

Product Model Number: **CHIRP+ 2 DP4H11S10, DP4H12S10, DP4H13S10**

Product Model Number: **CHIRP 2 DP4H23S10**

Hereby, Deeper declares that the radio equipment type Deeper CHIRP+ 2, Deeper CHIRP 2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: **deepersonar.com/conformity**

UK DECLARATION OF CONFORMITY

Hereby, Deeper, UAB declares that the radio equipment type Deeper CHIRP+ 2, Deeper CHIRP 2 is in compliance with the relevant statutory requirements. The full text of the declaration of conformity is available at the following internet address: **deepersonar.com/conformity**



Deeper, UAB. Antakalnio st. 17,
Vilnius, LT-10312, Lithuania.
www.deepersonar.com



deeper

WWW.DEEPSONAR.COM